



MX104 3D Universal Edge Router Hardware Guide



Modified: 2018-06-11

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. and/or its affiliates in the United States and other countries. All other trademarks may be property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

MX104 3D Universal Edge Router Hardware Guide
Copyright © 2018 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://www.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	xix
	Documentation and Release Notes	xix
	Supported Platforms	xix
	Documentation Conventions	xix
	Documentation Feedback	xxi
	Requesting Technical Support	xxii
	Self-Help Online Tools and Resources	xxii
	Opening a Case with JTAC	xxii
Part 1	Overview	
Chapter 1	System Overview	3
	MX104 3D Universal Edge Router Overview	3
	MX104 Chassis Overview	4
	MX104 Hardware and CLI Terminology Mapping	6
	MX104 Component Redundancy	7
Chapter 2	Chassis Components and Descriptions	9
	MX104 Alarm Contact Port Overview	9
	MX104 LEDs Overview	11
	Alarm LEDs on the Front Panel	11
	System LED on the Front Panel	12
	MIC LEDs	13
	Power Supply LED	13
	Routing Engine LEDs	13
	MX104 LEDs Overview	13
	Alarm LEDs on the Front Panel	13
	System LED on the Front Panel	14
	MIC LEDs	15
	Power Supply LED	15
	Routing Engine LEDs	15
	MX104 LEDs Overview	15
	Alarm LEDs on the Front Panel	15
	System LED on the Front Panel	16
	MIC LEDs	17
	Power Supply LED	17
	Routing Engine LEDs	17
	MX104 Clocking and Timing Ports Overview	17
Chapter 3	Cooling System Components and Descriptions	19
	MX104 Cooling System and Airflow Overview	19

Chapter 4	Host Subsystem Components and Descriptions	21
	MX104 Routing Engine Overview	21
	MX104 Routing Engine Components	22
	MX104 Routing Engine Buttons	22
	MX104 Routing Engine LEDs	23
	MX104 Boot Sequence	24
	MX104 Routing Engine Overview	24
	MX104 Routing Engine Components	25
	MX104 Routing Engine Buttons	26
	MX104 Routing Engine LEDs	26
	MX104 Boot Sequence	27
	MX104 Routing Engine Overview	27
	MX104 Routing Engine Components	28
	MX104 Routing Engine Buttons	29
	MX104 Routing Engine LEDs	29
	MX104 Boot Sequence	30
	Routing Engine Specifications	30
	Supported Routing Engines by Router	34
	M7i Routing Engines	35
	M10i Routing Engines	35
	M40e Routing Engines	36
	M120 Routing Engines	36
	M320 Routing Engines	37
	MX5, MX10, MX40, and MX80 Routing Engine	37
	MX104 Routing Engines	38
	MX240 Routing Engines	38
	MX480 Routing Engines	39
	MX960 Routing Engines	40
	MX2008 Routing Engines	41
	MX2010 Routing Engines	41
	MX2020 Supported Routing Engines	42
	MX10003 Routing Engines	42
	MX10008 Routing Engines	42
	PTX1000 Routing Engines	43
	PTX3000 Routing Engines	43
	PTX5000 Routing Engines	43
	PTX10008 and PTX10016 Routing Engines	44
	T320 Routing Engines	45
	T640 Routing Engines	45
	T1600 Routing Engines	46
	T4000 Routing Engines	47
	TX Matrix Routing Engines	47
	TX Matrix Plus Routing Engines	48
	TX Matrix Plus (with 3D SIBs) Routing Engines	48
Chapter 5	Line Card Components and Descriptions	51
	MX104 Modular Interface Card (MIC) Overview	51
	Front-Pluggable MICs	51
	Built-in 10-Gigabit Ethernet MIC	51

	MIC LEDs	52
	MICs Supported by MX Series Routers	53
	MX104 Port and Interface Numbering	61
	Identifying Interface Numbers on the Hardware	61
	Identifying Interface Numbers in the CLI	63
	MX104 Modular Interface Card (MIC) Overview	66
	Front-Pluggable MICs	66
	Built-in 10-Gigabit Ethernet MIC	66
	MIC LEDs	67
Chapter 6	Power System Components and Descriptions	69
	MX104 Power Overview	69
	AC Power Supplies	69
	DC Power Supplies	70
	Power Supply LEDs	70
	MX104 Power Overview	71
	AC Power Supplies	72
	DC Power Supplies	72
	Power Supply LEDs	73
Part 2	Site Planning, Preparation, and Specifications	
Chapter 7	Preparation Overview	77
	MX104 Router Physical Specifications	77
	MX104 Router Environmental Specifications	78
	Preparing the Site for the MX104 Router Overview	79
	Rack Requirements for MX104 Routers	80
	Cabinet Requirements for MX104 Routers	81
	Clearance Requirements for Airflow and Hardware Maintenance on MX104 Routers	83
	MX104 Router Grounding Specifications	84
	Grounding Points Specifications	84
	Grounding Cable Lug Specifications	85
	Grounding Cable Specifications	86
Chapter 8	Transceiver and Cable Specifications	87
	Calculating Power Budget and Power Margin for Fiber-Optic Cables	87
	Calculating Power Budget for Fiber-Optic Cable	87
	Calculating Power Margin for Fiber-Optic Cable	88
	Understanding Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion	89
	Signal Loss in Multimode and Single-Mode Fiber-Optic Cable	89
	Attenuation and Dispersion in Fiber-Optic Cable	89

Chapter 9	Port Cable and Pinout Specifications	91
	MX104 Clocking and Timing Ports Overview	91
	MX104 Routing Engine Ethernet Port Specifications	92
	Cable Specifications	92
	Pinouts	92
	MX104 Routing Engine Auxiliary and Console Ports Specifications	93
	Cable Specifications	93
	Pinouts	93
	MX104 Routing Engine USB Port Specifications	94
	MX104 Alarm Contact Port Specifications	95
	Cable Specifications	95
	Port Pinouts	95
	MX104 BITS Port Specifications	97
	Cable Specifications	97
	Port Pinouts	97
	MX104 1-PPS and 10-MHz GPS Port Specifications	98
	MX104 Time of Day Port Specifications	98
	Cable Specifications	98
	Port Pinouts	99
Chapter 10	Power Specifications	101
	MX104 Power Consumption	101
Chapter 11	AC Power Specifications	103
	MX104 AC Power Specifications	103
	MX104 AC Power Cord Specifications	104
Chapter 12	DC Power Specifications	107
	MX104 DC Power Specifications	107
	MX104 DC Power Cable and Lug Specifications	108
	DC Power Cable Lug Specifications	108
	DC Power Cable Specifications	108
Part 3	Initial Installation and Configuration	
Chapter 13	Unpacking the MX104 Router	113
	Unpacking an MX104 Router	113
	Parts Inventory (Packing List) for an MX104 Router	114
Chapter 14	Installing the MX104 Router	117
	Installing and Connecting an MX104 Router Overview	117
	Installing the MX104 Router in the Rack	118
Chapter 15	Connecting the MX104 Router to Power	121
	Connecting the MX104 Router to Earth Ground	121
	Connecting AC Power Cords to the MX104 Router	123
	Connecting DC Power Cables to the MX104 Router	125

Chapter 16	Connecting the MX104 Router to the Network	129
	Connecting the MX104 Router to Management Devices	129
	Connecting the Router to a Network for Out-of-Band Management	129
	Connecting the Router to a Management Console Device	130
	Connecting the MX104 Router to External Clocking and Timing Devices	131
	Connecting 1-PPS and 10-MHz Timing Devices to the MX104 Router	131
	Connecting a T1 or E1 External Clocking Device to the MX104 Router	132
	Connecting a Time-of-Day Device to the MX104 Router	132
	Connecting the MX104 Router to an External Alarm-Reporting Device	132
	Connecting Interface Cables to MX104 Routers	133
Chapter 17	Initially Configuring the MX104 Router	137
	Initially Configuring the MX104 Router	137
Part 4	Installing and Replacing Components	
Chapter 18	Overview of Installing and Replacing Components	143
	MX104 Field-Replaceable Units (FRUs)	143
Chapter 19	Replacing Chassis Components	145
	Replacing an MX104 Console or Auxiliary Cable	145
	Removing an MX104 Console or Auxiliary Cable	145
	Installing an MX104 Console or Auxiliary Cable	146
	Replacing an MX104 Management Ethernet Cable	146
	Removing an MX104 Management Ethernet Cable	146
	Installing an MX104 Management Ethernet Cable	147
	Replacing an MX104 Fiber-Optic Cable	147
	Disconnecting an MX104 Fiber-Optic Cable	147
	Connecting an MX104 Fiber-Optic Cable	148
	Replacing an MX104 Alarm Cable	149
	Disconnecting the Router from an External Alarm-Reporting Device	149
	Connecting the MX104 Router to an External Alarm-Reporting Device	150
Chapter 20	Replacing Cooling System Component	153
	Replacing an MX104 Air Filter	153
	Removing an MX104 Air Filter	153
	Installing an MX104 Air Filter	154
	Installing an MX104 Air Filter	155
	Replacing an MX104 Fan Tray	156
	Removing an MX104 Fan Tray	156
	Installing an MX104 Fan Tray	157
	Installing an MX104 Fan Tray	158
Chapter 21	Replacing Host Subsystem Components	161
	Installing an MX104 Routing Engine	161
	Replacing an MX104 Routing Engine	162
	Effect of Taking the MX104 Routing Engine Offline	162
	Taking an MX104 Routing Engine Offline	164
	Removing an MX104 Routing Engine	165
	Installing an MX104 Routing Engine	167

Chapter 22	Replacing Line Card Components	169
	Installing an MX104 MIC	169
	Replacing an MX104 MIC	171
	Removing an MX104 MIC	171
	Installing an MX104 MIC	173
	Installing an MX104 Transceiver	175
	Replacing an MX104 Transceiver	176
	Removing an MX104 Transceiver	176
	Installing an MX104 Transceiver	178
Chapter 23	Replacing Power System Components	179
	Installing an MX104 AC Power Supply	179
	Replacing an MX104 AC Power Supply	180
	Removing an MX104 AC Power Supply	180
	Installing an MX104 AC Power Supply	182
	Installing an MX104 DC Power Supply	183
	Replacing an MX104 DC Power Supply	187
	Removing an MX104 DC Power Supply	187
	Installing an MX104 DC Power Supply	190
Part 5	Maintaining the Chassis and Components	
Chapter 24	Routine Maintenance Procedures	197
	Routine Maintenance Procedures for the MX104 Router	197
Chapter 25	Maintaining Components	199
	Maintaining the MX104 Cooling System	199
	Maintaining the MX104 Air Filter	200
	Maintaining Cables That Connect to MX104 Network Ports	201
	Maintaining the MX104 MICs and Network Ports	202
	Maintaining the MX104 Routing Engines	202
Part 6	Troubleshooting Hardware	
Chapter 26	Troubleshooting Components	207
	Troubleshooting Resources for MX104 Routers	207
	Command-Line Interface	207
	Front Panel LEDs	207
	Alarm Devices and Messages	208
	Understanding Alarm Types and Severity Classes on MX104 Routers	208
	Alarm Severity Classes	209
	Verifying Active Alarms on MX104 Routers	209
	Monitoring System Log Messages on MX104 Routers	210
Part 7	Contacting Customer Support and Returning the Chassis or Components	
Chapter 27	Contacting Customer Support	213
	Contacting Customer Support	213

Chapter 28	Locating Component Serial Numbers	215
	Displaying MX104 Components and Serial Numbers	215
	MX104 Chassis Serial Number Label	216
	MX104 Fan Tray Serial Number Label	216
	MX104 MIC Serial Number Label	217
	MX104 Power Supply Serial Number Label	218
	MX104 Routing Engine Serial Number Label	218
Chapter 29	Packing and Returning Components	219
	Returning a Hardware Component to Juniper Networks, Inc.	219
	Guidelines for Packing Hardware Components for Shipment	220
	Packing the MX104 Router for Shipment	220
Part 8	Safety and Compliance Information	
Chapter 30	General Safety Guidelines and Warnings	225
	Definition of Safety Warning Levels	225
	General Safety Guidelines for Juniper Networks Devices	227
	General Safety Warnings for Juniper Networks Devices	228
	Qualified Personnel Warning	228
	Restricted-Access Area Warning	228
	Preventing Electrostatic Discharge Damage to an MX104 Router	230
Chapter 31	Fire Safety Requirements	233
	Fire Safety Requirements for Juniper Networks Devices	233
	General Fire Safety Requirements	233
	Fire Suppression	233
	Fire Suppression Equipment	233
Chapter 32	Installation Safety Guidelines and Warnings	235
	Installation Safety Warnings for Juniper Networks Devices	235
	Intrabuilding Ports Warning	235
	Installation Instructions Warning	235
	Rack-Mounting Requirements and Warnings	236
	Ramp Warning	240
Chapter 33	Laser and LED Safety Guidelines and Warnings	241
	General Laser Safety Guidelines for Juniper Networks Devices	241
	Laser Safety Warnings for Juniper Networks Devices	241
	Class 1 Laser Product Warning	242
	Class 1 LED Product Warning	242
	Laser Beam Warning	243
	Radiation from Open Port Apertures Warning	243
Chapter 34	Maintenance and Operational Safety Guidelines and Warnings	245
	Maintenance and Operational Safety Warnings for MX104 Routers	245
	Battery Handling Warning	245
	Jewelry Removal Warning	246
	Lightning Activity Warning	247
	Operating Temperature Warning	248
	Product Disposal Warning	249

Chapter 35	Electrical Safety Guidelines and Warnings	251
	In Case of an Electrical Accident	251
	General Electrical Safety Warnings for Juniper Networks Devices	251
	Grounded Equipment Warning	252
	Grounding Requirements and Warning	252
	Midplane Energy Hazard Warning	253
	Multiple Power Supplies Disconnection Warning	253
	Power Disconnection Warning	254
	General Electrical Safety Guidelines and Electrical Codes for Juniper Networks Devices	255
	MX104 AC Power Electrical Safety Guidelines and Warnings	256
	MX104 DC Power Electrical Safety Guidelines	257
	DC Power Electrical Safety Warnings for Juniper Networks Devices	258
	DC Power Copper Conductors Warning	258
	DC Power Disconnection Warning	258
	DC Power Wiring Terminations Warning	260
	Site Electrical Wiring Guidelines for MX104 Routers	261
	Distance Limitations for Signaling	261
	Radio Frequency Interference	261
	Electromagnetic Compatibility	261
Chapter 36	Agency Approvals and Compliance Statements	263
	Agency Approvals for MX104 Routers	263
	Compliance Statements for NEBS for MX104 Routers	264
	Compliance Statements for EMC Requirements for MX104 Routers	265
	Canada	265
	European Community	265
	Israel	265
	Japan	265
	United States	266
	Compliance Statements for Environmental Requirements	266
	Compliance Statements for Acoustic Noise for MX104 Routers	266

List of Figures

Part 1	Overview	
Chapter 1	System Overview	3
	Figure 1: Front Panel of the MX104 Router	4
	Figure 2: Rear View of the MX104 Router	4
	Figure 3: Front View of the MX104 Router	5
Chapter 2	Chassis Components and Descriptions	9
	Figure 4: Sample Output Alarm-Reporting Device	10
	Figure 5: Sample Input Alarm-Reporting Device	11
	Figure 6: Alarm LEDs on the MX104 Router	12
	Figure 7: Alarm LEDs on the MX104 Router	14
	Figure 8: Alarm LEDs on the MX104 Router	16
Chapter 3	Cooling System Components and Descriptions	19
	Figure 9: MX104 Fan Tray and Air Filter	19
	Figure 10: Cooling System and Airflow in an MX104 Router	20
Chapter 4	Host Subsystem Components and Descriptions	21
	Figure 11: MX104 Routing Engine	21
	Figure 12: MX104 Routing Engine	25
	Figure 13: MX104 Routing Engine	28
Chapter 5	Line Card Components and Descriptions	51
	Figure 14: MX104 Interface Port Mapping Example	62
Chapter 6	Power System Components and Descriptions	69
	Figure 15: AC Power Supply	70
	Figure 16: DC Power Supply	70
	Figure 17: AC Power Supply	72
	Figure 18: DC Power Supply	73
Part 2	Site Planning, Preparation, and Specifications	
Chapter 7	Preparation Overview	77
	Figure 19: MX104 Chassis Dimensions and Clearance Requirements	83
	Figure 20: Grounding Points on the MX104 Routers	84
	Figure 21: Grounding Cable Lug for MX104 AC Systems	85
	Figure 22: Grounding Cable Lug for MX104 24 VDC Systems	86
Chapter 9	Port Cable and Pinout Specifications	91
	Figure 23: RJ-48 Connector for MX104 BITS Ports	97
Chapter 12	DC Power Specifications	107

	Figure 24: DC Power Cable Lug	108
Part 3	Initial Installation and Configuration	
Chapter 14	Installing the MX104 Router	117
	Figure 25: Install the Front-Mounted Router in the Rack	119
Chapter 15	Connecting the MX104 Router to Power	121
	Figure 26: Grounding Points on the MX104 Router	123
	Figure 27: Connecting AC Power to the Router	124
	Figure 28: Connecting the Ground Cable to the MX104 DC Power Supply	126
	Figure 29: Connecting DC Power to the Router	128
Chapter 16	Connecting the MX104 Router to the Network	129
	Figure 30: Ethernet Cable Connector	129
	Figure 31: Ethernet Port	130
	Figure 32: Routing Engine Console Cable Connector	130
	Figure 33: Console Connections	131
	Figure 34: Attaching a Cable to a MIC	134
Part 4	Installing and Replacing Components	
Chapter 19	Replacing Chassis Components	145
	Figure 35: Ethernet Cable Connectors	145
	Figure 36: Ethernet Cable Connectors	146
	Figure 37: Connecting a Fiber-Optic Cable to an Optical Transceiver Installed in a Router	149
Chapter 20	Replacing Cooling System Component	153
	Figure 38: Removing the MX104 Air Filter	154
	Figure 39: Installing the Air Filter	155
	Figure 40: Installing the Air Filter	156
	Figure 41: Removing the Fan Tray	157
	Figure 42: Installing the Fan Tray	158
	Figure 43: Installing the Fan Tray	159
Chapter 21	Replacing Host Subsystem Components	161
	Figure 44: Installing a Routing Engine	162
	Figure 45: Removing an MX104 Routing Engine	167
	Figure 46: Installing a Routing Engine	168
Chapter 22	Replacing Line Card Components	169
	Figure 47: Installing a MIC	171
	Figure 48: Removing a MIC	173
	Figure 49: Installing a MIC	175
	Figure 50: Removing Transceivers	177
Chapter 23	Replacing Power System Components	179
	Figure 51: Installing an AC Power Supply	180
	Figure 52: Removing an AC Power Cord	181
	Figure 53: Removing an AC Power Supply	182
	Figure 54: Installing an AC Power Supply	183

	Figure 55: Connecting a DC Power Supply Grounding Cable	184
	Figure 56: Installing a DC Power Supply	186
	Figure 57: Connecting the DC Power Cables	186
	Figure 58: Disconnecting the DC Power Cables	189
	Figure 59: Disconnecting the Grounding Cable	189
	Figure 60: Removing a DC Power Supply	189
	Figure 61: Connecting a DC Power Supply Grounding Cable	191
	Figure 62: Installing a DC Power Supply	192
	Figure 63: Connecting the DC Power Cables	193
Part 7	Contacting Customer Support and Returning the Chassis or Components	
Chapter 28	Locating Component Serial Numbers	215
	Figure 64: Serial Number ID Label	216
	Figure 65: MX104 Chassis Serial Number Label	216
	Figure 66: MX104 Fan Tray Serial Number Label	217
	Figure 67: MX104 MIC Serial Number Label	217
	Figure 68: MX104 Power Supply Serial Number Label	218
	Figure 69: MX104 Routing Engine Serial Number Label	218
Part 8	Safety and Compliance Information	
Chapter 30	General Safety Guidelines and Warnings	225
	Figure 70: ESD Point on the MX104 Router Chassis	230
	Figure 71: Placing a Component into an Electrostatic Bag	231

List of Tables

	About the Documentation	xix
	Table 1: Notice Icons	xx
	Table 2: Text and Syntax Conventions	xx
Part 1	Overview	
Chapter 1	System Overview	3
	Table 3: MX104 Routers Hardware Components and CLI Terminology	6
Chapter 2	Chassis Components and Descriptions	9
	Table 4: Alarm Relay Contact Functions	10
	Table 5: Alarm LEDs on the Front Panel	12
	Table 6: System LED on the Front Panel	12
	Table 7: Alarm LEDs on the Front Panel	14
	Table 8: System LED on the Front Panel	14
	Table 9: Alarm LEDs on the Front Panel	16
	Table 10: System LED on the Front Panel	16
Chapter 4	Host Subsystem Components and Descriptions	21
	Table 11: MX104 Routing Engine Buttons	23
	Table 12: MX104 Routing Engine LEDs	23
	Table 13: Management LEDs	23
	Table 14: MX104 Routing Engine Buttons	26
	Table 15: MX104 Routing Engine LEDs	26
	Table 16: Management LEDs	27
	Table 17: MX104 Routing Engine Buttons	29
	Table 18: MX104 Routing Engine LEDs	29
	Table 19: Management LEDs	30
	Table 20: Routing Engine Specifications	31
	Table 21: End-of-Life Routing Engine Specifications	33
	Table 22: M7i Routing Engines	35
	Table 23: M10i Routing Engines	35
	Table 24: M40e Routing Engines	36
	Table 25: M120 Routing Engines	36
	Table 26: M320 Routing Engines	37
	Table 27: MX5, MX10, MX40, and MX80 Routing Engine	38
	Table 28: MX104 Routing Engines	38
	Table 29: MX240 Supported Routing Engines	38
	Table 30: MX480 Supported Routing Engines	39
	Table 31: MX960 Supported Routing Engines	40
	Table 32: MX2008 Supported Routing Engines	41

	Table 33: MX2010 Supported Routing Engines	41
	Table 34: MX2020 Supported Routing Engines	42
	Table 35: MX10003 Supported Routing Engines	42
	Table 36: MX10008 Routing Engines	42
	Table 37: PTX1000 Routing Engines	43
	Table 38: PTX3000 Routing Engines	43
	Table 39: PTX5000 Routing Engines	44
	Table 40: PTX10008 and PTX10016 Routing Engines	44
	Table 41: T320 Routing Engines	45
	Table 42: T640 Routing Engines	45
	Table 43: T1600 Routing Engines	46
	Table 44: T4000 Routing Engines	47
	Table 45: TX Matrix Routing Engines	47
	Table 46: TX Matrix Plus Routing Engines	48
	Table 47: Routing Engines on TX Matrix Plus with 3D SIBs	48
Chapter 5	Line Card Components and Descriptions	51
	Table 48: SFP+ Port LEDs	53
	Table 49: MICs Supported by MX240, MX480, MX960 and MX2008 Routers	53
	Table 50: MICs Supported by MX2010 and MX2020 Routers	55
	Table 51: MICs Supported by MX5, MX10, and MX40 Routers	58
	Table 52: MICs Supported by MX80 and MX104 Routers	59
	Table 53: MICs Supported by MX10003 Router	61
	Table 54: MX104 MIC Interface Names	62
	Table 55: SFP+ Port LEDs	68
Chapter 6	Power System Components and Descriptions	69
	Table 56: Power Supply LED	71
	Table 57: Power Supply LED	73
Part 2	Site Planning, Preparation, and Specifications	
Chapter 7	Preparation Overview	77
	Table 58: Physical Specifications of the MX104 Router Chassis	77
	Table 59: MX104 Environmental Specifications	78
	Table 60: Rack Requirements and Specifications for the Router	80
	Table 61: Cabinet Requirements and Specifications for the MX104 Router	82
Chapter 8	Transceiver and Cable Specifications	87
	Table 62: Estimated Values for Factors Causing Link Loss	88
Chapter 9	Port Cable and Pinout Specifications	91
	Table 63: MX104 Routing Engine Ethernet Port Cable Specifications	92
	Table 64: Ethernet Port Pinouts	92
	Table 65: MX104 Routing Engine Console Port Cable Specifications	93
	Table 66: Console Port Pinouts	94
	Table 67: MX104 Alarm Contact Port Cable Specifications	95
	Table 68: Alarm Contact Connector Pinouts	95
	Table 69: MX104 BITS Port Cable Specifications	97
	Table 70: BITS Port Pinouts	97
	Table 71: 1-PPS and 10-MHz GPS Port Specifications	98

	Table 72: TOD Cable Specifications	99
	Table 73: ToD Port Connector Pinouts	99
Chapter 10	Power Specifications	101
	Table 74: Power Consumed by MX104 Routers	101
Chapter 11	AC Power Specifications	103
	Table 75: AC Power Electrical Specifications	103
	Table 76: AC Power Cord Specifications	104
Chapter 12	DC Power Specifications	107
	Table 77: DC Power Electrical Specifications	107
Part 3	Initial Installation and Configuration	
Chapter 13	Unpacking the MX104 Router	113
	Table 78: Parts List for a Fully Configured MX104 Router	114
	Table 79: Accessory Box Parts List for an MX104 Router	115
Part 4	Installing and Replacing Components	
Chapter 18	Overview of Installing and Replacing Components	143
	Table 80: Field-Replaceable Units	143
Chapter 21	Replacing Host Subsystem Components	161
	Table 81: Effect of Taking the Routing Engine Offline	163
Part 6	Troubleshooting Hardware	
Chapter 26	Troubleshooting Components	207
	Table 82: Alarm Terms	208
	Table 83: Alarm Output Fields	210

About the Documentation

- Documentation and Release Notes on page xix
- Supported Platforms on page xix
- Documentation Conventions on page xix
- Documentation Feedback on page xxi
- Requesting Technical Support on page xxii

Documentation and Release Notes

To obtain the most current version of all Juniper Networks[®] technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- MX104

Documentation Conventions

Table 1 on page xx defines notice icons used in this guide.

Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xx defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>

Table 2: Text and Syntax Conventions (continued)

Convention	Description	Examples
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric metric>;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (string1 string2 string3)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [community-ids]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] <pre> routing-options { static { route default { nexthop address; retain; } } } </pre>
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page of the Juniper Networks TechLibrary site at <https://www.juniper.net/documentation/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <https://www.juniper.net/documentation/feedback/>.

- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>
- Download the latest versions of software and review release notes: <https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <https://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <https://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <https://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://www.juniper.net/support/requesting-support.html>.

PART 1

Overview

- [System Overview on page 3](#)
- [Chassis Components and Descriptions on page 9](#)
- [Cooling System Components and Descriptions on page 19](#)
- [Host Subsystem Components and Descriptions on page 21](#)
- [Line Card Components and Descriptions on page 51](#)
- [Power System Components and Descriptions on page 69](#)

CHAPTER 1

System Overview

- [MX104 3D Universal Edge Router Overview on page 3](#)
- [MX104 Chassis Overview on page 4](#)
- [MX104 Hardware and CLI Terminology Mapping on page 6](#)
- [MX104 Component Redundancy on page 7](#)

MX104 3D Universal Edge Router Overview

The Juniper Networks MX104 3D Universal Edge Router is optimized for aggregating mobile, enterprise WAN, business, and residential access services. The MX104 router is designed for high-density access and pre-aggregation and is environmentally hardened to allow outside deployments in cabinets and remote terminals. The router is a high-performance router functioning as a universal aggregation platform for mobile broadband and metro Ethernet applications. It also acts as a universal edge platform supporting all types of private WAN, data center interconnect, Internet edge, business edge, and residential edge services.

The router is powered by the Junos Trio chipset and runs the Junos[®] operating system (Junos OS) for high-performance routing and switching. For a list of related Junos OS documentation, see <https://www.juniper.net/documentation/software/junos/>.

The chassis is a rigid sheet metal structure that houses all the other router components (see [Figure 1 on page 4](#) and [Figure 2 on page 4](#)). The hardware system provides resiliency and redundancy, including power supplies and Routing Engines. The chassis also has four built-in 10-Gigabit Ethernet SFP+ ports and four slots that accept Modular Interface Cards (MICs). For a list of the supported MICs, see the [MX Series Interface Module Reference](#).

The router is environmentally hardened and is 3.5 rack units (U; that is, 6.125 in., or 15.55 cm) tall. Several routers can be stacked in a single floor-to-ceiling rack, for increased port density per unit of floor space. The chassis is installed in standard 11.81 in. (30 cm)-deep (or larger) enclosed cabinets, 19-in. equipment racks, or telco open-frame racks.

Figure 1: Front Panel of the MX104 Router


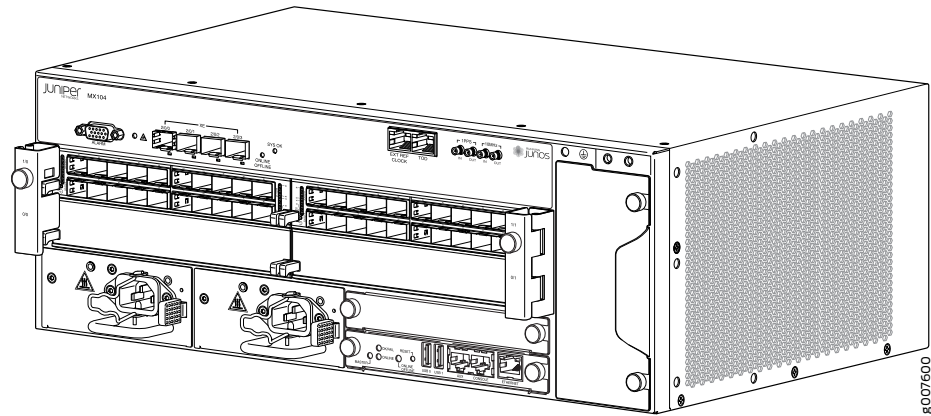


Figure 2: Rear View of the MX104 Router

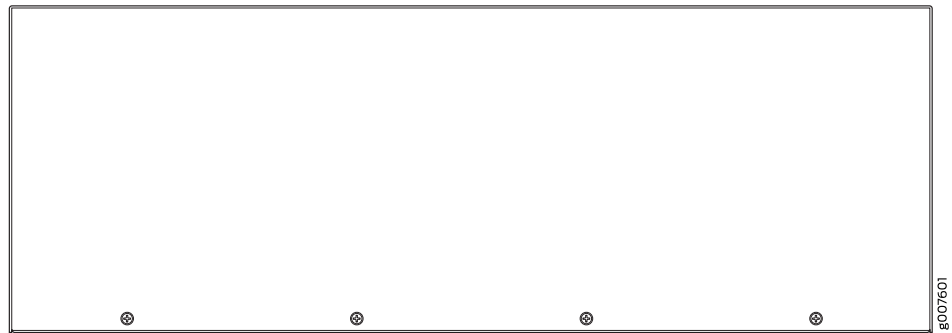

Related Documentation

- [MX104 Hardware and CLI Terminology Mapping on page 6](#)
- [MX104 Port and Interface Numbering on page 61](#)
- [MX104 Chassis Overview on page 4](#)

MX104 Chassis Overview

The MX104 router contains a front panel with slots in which you can install field-replaceable units (FRUs). From the front of the chassis, you can see the following components (see [Figure 3 on page 5](#)):

- Alarm console port labeled **ALARM**, which accepts a DE-15 alarm cable.
- Alarm LEDs that indicate major or minor alarms.
- Built-in 10-Gigabit Ethernet MIC with four ports that accept 10-Gigabit Ethernet SFP+ transceivers.
- **ONLINE/OFFLINE** button.
- Chassis status LED labeled **SYS OK**
- External building integrated timing system (BITS) port labeled **EXT REF CLOCK**


- Time-of-day (TOD) port
- External clocking ports supporting 1-PPS and 10-MHz input and output
- ESD point
- Fan tray, which contains five fans and an air filter
- Four slots for installing MICs



NOTE: For a detailed description of the MX104 port and interface numbering see “MX104 Port and Interface Numbering” on page 61.

- Two slots for installing either AC or DC power supplies, labeled PS 0 and PS 1
- Two slots for installing Routing Engines, labeled RE 0 and RE 1

Figure 3: Front View of the MX104 Router

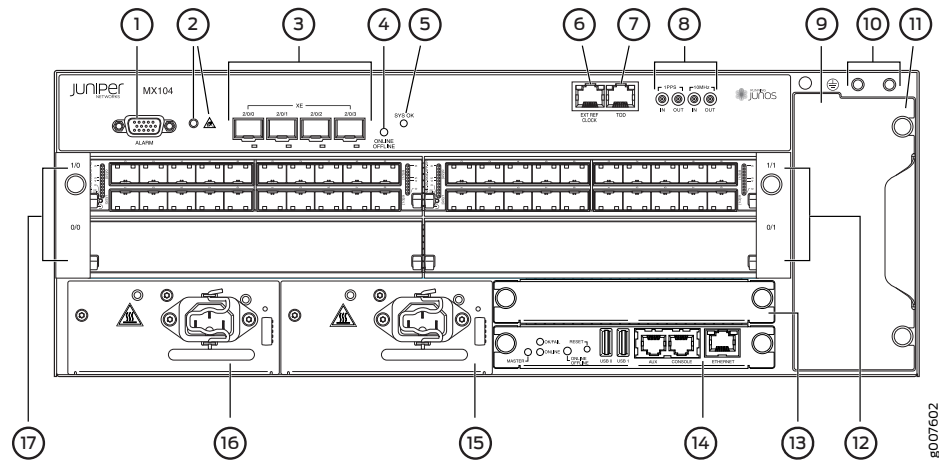

1— Alarm input and output contacts	10—Grounding terminals
2— Alarm LEDs	11— Fan tray
3— 10-Gigabit Ethernet SFP+ ports	12— MIC slots 0/1 and 1/1
4— Online/offline button	13— Routing Engine slot 1
5— System status LED	14— Routing Engine slot 0
6— External reference clocking port	15— Power supply slot 1
7— Time-of-day (ToD) port	16— Power supply slot 0
8— 1-PPS and 10-MHz GPS input and output ports	17— MIC slots 0/0 and 1/0
9— ESD point	

Related Documentation

- [MX104 3D Universal Edge Router Overview on page 3](#)

MX104 Hardware and CLI Terminology Mapping

The MX104 router supports the components in [Table 3 on page 6](#), listed in alphabetic order.

Table 3: MX104 Routers Hardware Components and CLI Terminology

Component	Hardware Model Number	CLI Name	Description
Chassis	N/A	MX104	"MX104 3D Universal Edge Router Overview" on page 3
Cooling system, including fan trays and air filters			"MX104 Cooling System and Airflow Overview" on page 19
Air filter kit	FLTR-KIT-MX104	N/A	
Fan tray	FANTRAY-MX104	Fan Tray	
Power system components			"MX104 Power Overview" on page 69
Power blank cover	PWR-BLANK-MX104	N/A	
Power supply	<ul style="list-style-type: none"> AC: PWR-MX104-AC DC: PWR-MX104-DC 	PEM	
MIC	N/A (built-in)	4x 10GE(LAN) SFP+	"Built-in 10-Gigabit Ethernet MIC" on page 51
	See MX Series Interface Module Reference .		"MX104 Modular Interface Card (MIC) Overview" on page 51
MPC	N/A (built-in)	FPC	"MX104 Modular Interface Card (MIC) Overview" on page 51
Routing Engine	RE-S-MX104	Routing Engine	"MX104 Routing Engine Overview" on page 21
Transceiver	See MX Series Interface Module Reference .	Xcvr	"MX104 Modular Interface Card (MIC) Overview" on page 51

Related Documentation

- [MX104 3D Universal Edge Router Overview on page 3](#)
- [MX104 Port and Interface Numbering on page 61](#)
- [MX104 Chassis Overview on page 4](#)

MX104 Component Redundancy

The MX104 chassis provides redundancy and resiliency. The hardware system is fully redundant, including power supplies, Routing Engines, and cooling system.

A fully configured router is designed so that no single point of failure can cause the entire system to fail. Only a fully configured router provides complete redundancy. All other configurations provide partial redundancy. The following major hardware components are redundant:

- **Power supplies**—In a redundant configuration, the router contains either two AC or DC power supplies that install into the front of the chassis. The slots are labeled **PS 0** and **PS 1** (left to right). Each power supply provides power to all components in the router. When two power supplies are present, they share power almost equally within a fully populated system. If one power supply in a redundant configuration fails or is removed, the remaining power supplies assume the entire electrical load without interruption. Two power supplies provide the maximum configuration with full power for as long as the router is operational.
- **Routing Engine**—If two Routing Engines are installed, one functions as the master and the other functions as the backup. If the master Routing Engine fails, the backup can take over as the master.
- **Cooling system**—The cooling system has redundant components, which are controlled by the host subsystem. If one of the fans fails, the host subsystem increases the speed of the remaining fans to provide sufficient cooling for the router indefinitely.

Related Documentation

- [MX104 3D Universal Edge Router Overview on page 3](#)
- [MX104 Chassis Overview on page 4](#)

CHAPTER 2

Chassis Components and Descriptions

- [MX104 Alarm Contact Port Overview on page 9](#)
- [MX104 LEDs Overview on page 11](#)
- [MX104 LEDs Overview on page 13](#)
- [MX104 LEDs Overview on page 15](#)
- [MX104 Clocking and Timing Ports Overview on page 17](#)

MX104 Alarm Contact Port Overview

The MX104 router has four external alarm contacts (also known as potential free contacts) for connecting the router to external alarm devices. The port labeled **ALARM** uses a 15-pin D-type connector. The external alarm contact has 15 pins that accept a single core wire from external alarm devices. A DE-15 alarm cable is required to connect the MX104 router to external alarm devices. Use the gauge wire appropriate for the external device that you are connecting.

Whenever a system condition triggers an alarm, the alarm relay contacts are activated, which in turn activates the external alarm devices. The alarm setting is open or closed.

You can connect and configure two output alarms and four input alarms. Two additional output alarms are reserved and are used to indicate major and minor system alarms. Each output and input alarm has two contacts for connecting the router to external alarm devices. Contact 1 of each alarm can be configured as Normally Open [NO] or Normally Closed [NC] through the CLI. Contact 2 of each alarm functions as a reference [REF] or negative potential terminal for Contact 1 of the corresponding alarm and provides a current path for external alarm devices. [Table 4 on page 10](#) describes the functions of the alarm contacts.

Table 4: Alarm Relay Contact Functions

Contact Name	Contact Name	Function
Contact 1	Normally Open [NO]	Current is not flowing through Contact 1 and Contact 2 [REF] when operating normally. When the current flows, the closed alarm is generated.
	Normally Closed [NC]	Current is flowing through Contact 1 and Contact 2 [REF] when operating normally. When the current stops flowing, the open alarm is generated.
Contact 2	Reference [REF]	Provides the current path for the external alarm-reporting device and functions as a reference or negative potential terminal for Contact 1.

Figure 4 on page 10 shows an example of a wiring diagram for a simple output alarm-reporting device. In this case, the device is a light bulb that illuminates when the device encounters a condition that activates the red alarm LED and relay contacts. The alarm relay contacts can also be used to activate other devices such as bells or buzzers.


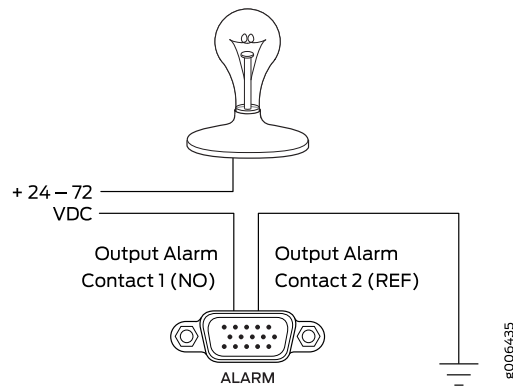
Figure 4: Sample Output Alarm-Reporting Device

Figure 5 on page 11 shows an example of a wiring diagram for a simple input alarm-reporting device. In this case, the push button switch is an alarm sensor that triggers an input alarm when a door-open condition occurs.

Figure 5: Sample Input Alarm-Reporting Device

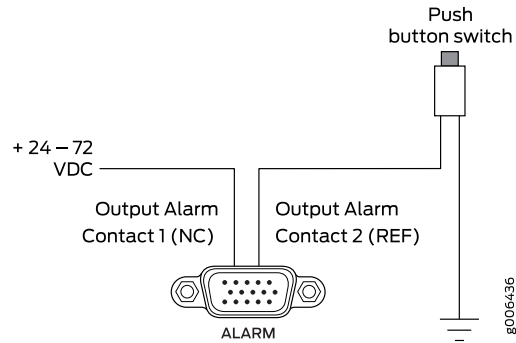

Related Documentation

- [MX104 3D Universal Edge Router Overview on page 3](#)
- [MX104 Chassis Overview on page 4](#)
- [MX104 Alarm Contact Port Specifications on page 95](#)

MX104 LEDs Overview

- [Alarm LEDs on the Front Panel on page 11](#)
- [System LED on the Front Panel on page 12](#)
- [MIC LEDs on page 13](#)
- [Power Supply LED on page 13](#)
- [Routing Engine LEDs on page 13](#)

Alarm LEDs on the Front Panel

Two LEDs, located to the right of the alarm contact port indicates major and minor alarms for the router (see [Figure 6 on page 12](#)).

Figure 6: Alarm LEDs on the MX104 Router

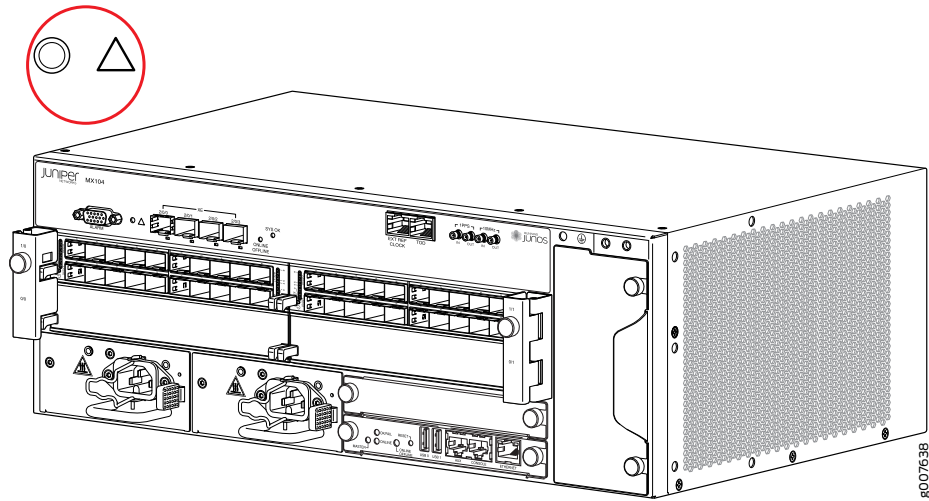




Table 5 on page 12 describes the alarm LED in more detail.

Table 5: Alarm LEDs on the Front Panel

Shape	Color	State	LED Control Name	Description
	Red	On steadily	Critical alarm	Indicates a critical condition that can cause the router to stop functioning. Possible causes include component removal, failure, or overheating.
	Yellow	On steadily	Warning alarm	Indicates a serious but nonfatal error condition, such as a maintenance alert or a significant increase in component temperature.

System LED on the Front Panel

One bicolor LED labeled **SYS OK** indicates the status of the router. Table 6 on page 12 describes the system LED in more detail.

Table 6: System LED on the Front Panel

Label	Color	State	Description
SYS OK	Green	Blinking	Router has no master Routing Engine.
		On steadily	Router is functioning normally.
	Yellow	On steadily	Router has reported a minor alarm.
	Red	On steadily	Router has failed.

MIC LEDs

Each hot-removable and hot-insertable MIC has LEDs located on the faceplate. For more information about LEDs on the MIC faceplate, see the “LEDs” section for each MIC in the *MX Series Interface Module Reference*.

For information about the built-in MIC LEDs, see “MIC LEDs” on page 52.

Power Supply LED

One LED labeled **PS STATUS** indicates the status of the power supply. For more information, see “Power Supply LEDs” on page 69.

Routing Engine LEDs

Three LEDs indicate the status of the Routing Engine. For more information, see “MX104 Routing Engine LEDs” on page 23.

- Related Documentation**
- [Troubleshooting Resources for MX104 Routers on page 207](#)
 - [MX104 Chassis Overview on page 4](#)

MX104 LEDs Overview

- [Alarm LEDs on the Front Panel on page 13](#)
- [System LED on the Front Panel on page 14](#)
- [MIC LEDs on page 15](#)
- [Power Supply LED on page 15](#)
- [Routing Engine LEDs on page 15](#)

Alarm LEDs on the Front Panel

Two LEDs, located to the right of the alarm contact port indicates major and minor alarms for the router (see [Figure 6 on page 12](#)).

Figure 7: Alarm LEDs on the MX104 Router

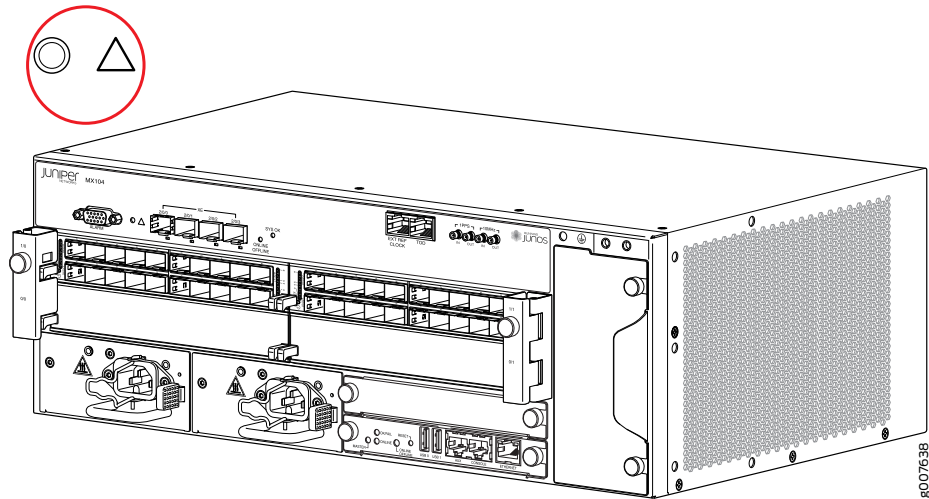




Table 5 on page 12 describes the alarm LED in more detail.

Table 7: Alarm LEDs on the Front Panel

Shape	Color	State	LED Control Name	Description
	Red	On steadily	Critical alarm	Indicates a critical condition that can cause the router to stop functioning. Possible causes include component removal, failure, or overheating.
	Yellow	On steadily	Warning alarm	Indicates a serious but nonfatal error condition, such as a maintenance alert or a significant increase in component temperature.

System LED on the Front Panel

One bicolor LED labeled **SYS OK** indicates the status of the router. Table 6 on page 12 describes the system LED in more detail.

Table 8: System LED on the Front Panel

Label	Color	State	Description
SYS OK	Green	Blinking	Router has no master Routing Engine.
		On steadily	Router is functioning normally.
	Yellow	On steadily	Router has reported a minor alarm.
	Red	On steadily	Router has failed.

MIC LEDs

Each hot-removable and hot-insertable MIC has LEDs located on the faceplate. For more information about LEDs on the MIC faceplate, see the “LEDs” section for each MIC in the *MX Series Interface Module Reference*.

For information about the built-in MIC LEDs, see “MIC LEDs” on page 52.

Power Supply LED

One LED labeled **PS STATUS** indicates the status of the power supply. For more information, see “Power Supply LEDs” on page 69.

Routing Engine LEDs

Three LEDs indicate the status of the Routing Engine. For more information, see “MX104 Routing Engine LEDs” on page 23.

Related Documentation

- Troubleshooting Resources for MX104 Routers on page 207
- MX104 Chassis Overview on page 4

MX104 LEDs Overview

- Alarm LEDs on the Front Panel on page 15
- System LED on the Front Panel on page 16
- MIC LEDs on page 17
- Power Supply LED on page 17
- Routing Engine LEDs on page 17

Alarm LEDs on the Front Panel

Two LEDs, located to the right of the alarm contact port indicates major and minor alarms for the router (see [Figure 6 on page 12](#)).

Figure 8: Alarm LEDs on the MX104 Router

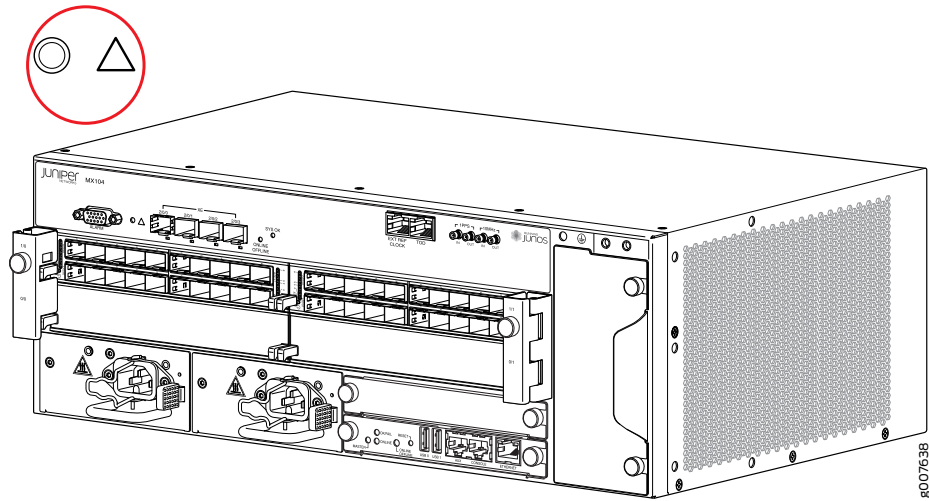




Table 5 on page 12 describes the alarm LED in more detail.

Table 9: Alarm LEDs on the Front Panel

Shape	Color	State	LED Control Name	Description
	Red	On steadily	Critical alarm	Indicates a critical condition that can cause the router to stop functioning. Possible causes include component removal, failure, or overheating.
	Yellow	On steadily	Warning alarm	Indicates a serious but nonfatal error condition, such as a maintenance alert or a significant increase in component temperature.

System LED on the Front Panel

One bicolor LED labeled **SYS OK** indicates the status of the router. Table 6 on page 12 describes the system LED in more detail.

Table 10: System LED on the Front Panel

Label	Color	State	Description
SYS OK	Green	Blinking	Router has no master Routing Engine.
		On steadily	Router is functioning normally.
	Yellow	On steadily	Router has reported a minor alarm.
	Red	On steadily	Router has failed.

MIC LEDs

Each hot-removable and hot-insertable MIC has LEDs located on the faceplate. For more information about LEDs on the MIC faceplate, see the “LEDs” section for each MIC in the *MX Series Interface Module Reference*.

For information about the built-in MIC LEDs, see “MIC LEDs” on page 52.

Power Supply LED

One LED labeled **PS STATUS** indicates the status of the power supply. For more information, see “Power Supply LEDs” on page 69.

Routing Engine LEDs

Three LEDs indicate the status of the Routing Engine. For more information, see “MX104 Routing Engine LEDs” on page 23.

- Related Documentation**
- [Troubleshooting Resources for MX104 Routers on page 207](#)
 - [MX104 Chassis Overview on page 4](#)

MX104 Clocking and Timing Ports Overview

Four Subminiature B (SMB) connectors (for 10-MHz and 1-PPS), one RJ-48 port (for BITS), and one RS-232 port (for TOD) on the front panel of the router connect to external clock signal sources. The clocking ports provide the synchronized output clocks from any one of the reference clock inputs based on the clock's priority.

The reference clock inputs can be Ethernet-recovered clocks, T1 or E1 line clocks, IEEE 1588v2-recovered clocks, BITS timing, 10-MHz timing, and 1-PPS timing. The T1 or E1 line clock also supports loop timing. These clocking ports distribute a synchronized clock signal throughout the chassis by locking onto the selected clock source. In the absence of these configured ports, the local oscillator present in the system provides the chassis synchronization.

Clock sources within the MX104 router include:

- External clock timing port
- 10-MHz timing connectors (one input and one output)
- 1-pulse-per-second (PPS) connectors (one input and one output)
- Time-of-day (TOD) RS-232 port
- Synchronous Ethernet support on SFP ports as timing input or output
- Packet (IEEE 1588-2008) v2 timing includes:
 - Timing input when configured as Ordinary Clock (OC) or Boundary Clock (BC)
 - Timing output when configured as BC

**Related
Documentation**

- [Connecting the MX104 Router to External Clocking and Timing Devices on page 131](#)
- [MX104 BITS Port Specifications on page 97](#)
- [MX104 1-PPS and 10-MHz GPS Port Specifications on page 98](#)
- [MX104 Time of Day Port Specifications on page 98](#)

CHAPTER 3

Cooling System Components and Descriptions


- [MX104 Cooling System and Airflow Overview on page 19](#)

MX104 Cooling System and Airflow Overview

The cooling system in an MX104 router consists of the following components (see [Figure 9 on page 19](#)):

- Fan tray
- Air filter


Figure 9: MX104 Fan Tray and Air Filter

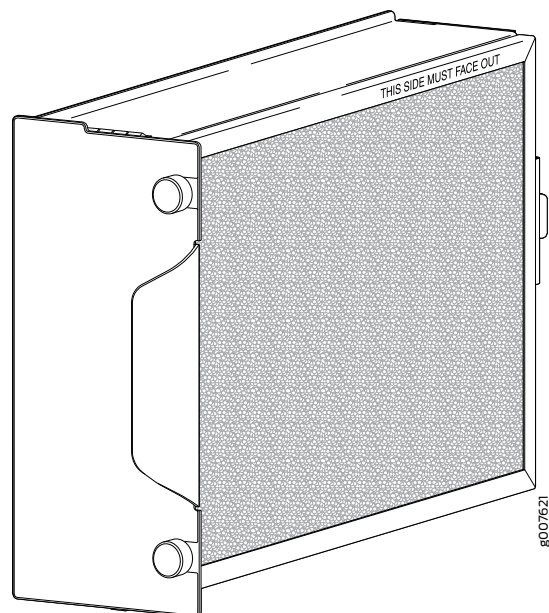

The router has one hot-swappable fan tray that contains five fans. The air filter installs into the side of the fan tray. The air intake to cool the chassis is located on the right side of the chassis next to the air filter. Air is pulled through the air filter toward the fan tray,

where it is exhausted out the left side of the system (see [Figure 10 on page 20](#)). The exhaust for the power supplies is located on the left side of the chassis.

Figure 10: Cooling System and Airflow in an MX104 Router

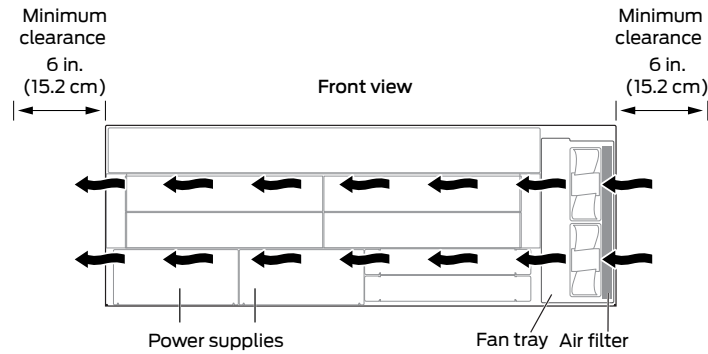

The cooling system components work together to keep all router components within the acceptable temperature range. The chassis monitors the temperature of the router components. When the router is operating normally, the fans function at lower than full speed. If a fan fails or the ambient temperature rises above a threshold, the speed of the remaining fans is automatically adjusted to keep the temperature within the acceptable range. If the ambient maximum temperature specification is exceeded and the system cannot be adequately cooled, the Routing Engine shuts down the system by disabling output power from each power supply.

Related Documentation

- [Preparing the Site for the MX104 Router Overview on page 79](#)
- [Maintaining the MX104 Air Filter on page 200](#)
- [Rack Requirements for MX104 Routers on page 80](#)
- [Cabinet Requirements for MX104 Routers on page 81](#)
- [Clearance Requirements for Airflow and Hardware Maintenance on MX104 Routers on page 83](#)
- [MX104 Router Environmental Specifications on page 78](#)

CHAPTER 4

Host Subsystem Components and Descriptions

- [MX104 Routing Engine Overview on page 21](#)
- [MX104 Routing Engine Overview on page 24](#)
- [MX104 Routing Engine Overview on page 27](#)
- [Routing Engine Specifications on page 30](#)
- [Supported Routing Engines by Router on page 34](#)

MX104 Routing Engine Overview


The Routing Engine is a Freescale-based PC platform that runs Junos OS. Software processes that run on the Routing Engine maintain the routing tables, manage the routing protocols used on the router, control the router interfaces, control some chassis components, and provide the interface for system management and user access to the router.

You can install one or two Routing Engines in the router. The Routing Engine installs into the front of the chassis. Two USB ports on the Routing Engine accept a USB memory card that allows you to load Junos OS.

If two Routing Engines are installed, one functions as the master and the other acts as the backup. If the master Routing Engine fails or is removed and the backup is configured appropriately, the backup takes over as the master. The backup Routing Engine is hot-insertable and hot-removable.

The MX104 router supports the Routing Engine with model number RE-MX104.

 Figure 11: MX104 Routing Engine



- [MX104 Routing Engine Components on page 22](#)
- [MX104 Routing Engine Buttons on page 22](#)

- [MX104 Routing Engine LEDs on page 23](#)
- [MX104 Boot Sequence on page 24](#)

MX104 Routing Engine Components

Five ports, located on the right side of the Routing Engine, connect the Routing Engine to one or more external devices on which system administrators can issue Junos OS command-line interface (CLI) commands to manage the router.

The Routing Engine consists of the following components:

- 1.8-GHz CPU—Runs Junos OS to maintain the router's routing tables and routing protocols.
- 4-GB DDR3 RAM (mini DIMM)—Provides storage for the routing and forwarding tables and for other Routing Engine processes.
- 8-GB on-board NAND Flash—Provides primary storage for software images, configuration files, and microcode. The NAND flash is fixed and is inaccessible from outside the router.
- Interface ports—Provides access to management devices.
 - **AUX**—Not supported.
 - **CONSOLE**—Connects the Routing Engine to a system console through a serial cable with an RJ-45 connector.
 - **ETHERNET**—Connects the Routing Engine through an Ethernet connection to a management LAN (or any other device that plugs into an Ethernet connection). The port uses an autosensing RJ-45 connector to support 10-Mbps, 100-Mbps, or 1000-Mbps connections. Two small LEDs on the right of the port indicate the connection in use: see [“MX104 Routing Engine LEDs” on page 23](#).
- Two USB ports—Provide a removable media interface through which you can install the Junos OS manually. Junos OS supports USB version 1.0.
- Online/Offline button—Takes the Routing Engine online or offline when pressed (see [“MX104 Routing Engine Buttons” on page 22](#)).
- Reset button—Reboots the Routing Engine when pressed (see [“MX104 Routing Engine Buttons” on page 22](#)).
- LEDs—Indicates the status of the Routing Engine and its ports (see [“MX104 Routing Engine LEDs” on page 23](#))

MX104 Routing Engine Buttons

Each Routing Engine has two push-button controls. The buttons, labeled **ONLINE OFFLINE**, and **RESET**, are located directly on the faceplate of the Routing Engine. [Table 11 on page 23](#) describes the functions of the buttons.

Table 11: MX104 Routing Engine Buttons

Label	Action	Description	Indicator
ONLINE OFFLINE	Press for 2 seconds.	Routing Engine transitions online when pressed.	Green ONLINE LED is on steadily.
	Press for 4 seconds.	Routing Engine transitions offline when pressed.	All LEDs are off.
RESET	Press for 3 seconds.	Routing Engine reboots when pressed.	Green ONLINE LED is on steadily.

MX104 Routing Engine LEDs

Each Routing Engine has three LEDs that indicate its status. The LEDs, labeled **MASTER**, **ONLINE**, and **OK/FAIL**, are located directly on the faceplate of the Routing Engine.

Table 12 on page 23 describes the functions of the Routing Engine LEDs.

Table 12: MX104 Routing Engine LEDs

Label	Color	State	Description
MASTER	Blue	On steadily	Routing Engine is the master.
ONLINE	Green	On steadily	Routing Engine is online.
		Blinking	Routing Engine is booting.
OK/FAIL	Green	On steadily	Routing Engine is functioning normally.
	Red	On steadily	Routing Engine has failed.

The management port labeled **ETHERNET** has a pair of LEDs that display the speed and status of the port.



NOTE: The port labeled **AUX** is not supported.

Table 13 on page 23 describes the LEDs in more detail.

Table 13: Management LEDs

Name	Location	Color	State	Description
Link	Left	Green	On	1000-Mbps link is online.
		Yellow	On	100-Mbps link is online.
		–	Off	10-Mbps link is online.

Table 13: Management LEDs (continued)

Name	Location	Color	State	Description
Activity	Right	Yellow	Blinking	The port is receiving data.
		–	Off	The port is not receiving data.

MX104 Boot Sequence

The MX104 router ships with Junos OS preinstalled and ready to be configured when the router is powered on. One eight-GB internal NAND Flash memory (**da0**) acts as the hard drive. Two USB ports on the front panel accept USB storage devices (**usb0** and **usb1**) that can also function as alternative boot devices.

When the router boots, it first attempts to start the image on the USB 0 flash memory device, if present, then attempts to start the image on the USB 1 flash memory device, if present. If a USB flash memory device is not inserted into either of the two slots on the Routing Engine, or the attempt otherwise fails, the router next tries the active partition on the NAND Flash device.

Related Documentation

- [Maintaining the MX104 Routing Engines on page 202](#)
- [Replacing an MX104 Routing Engine on page 162](#)

MX104 Routing Engine Overview


The Routing Engine is a Freescale-based PC platform that runs Junos OS. Software processes that run on the Routing Engine maintain the routing tables, manage the routing protocols used on the router, control the router interfaces, control some chassis components, and provide the interface for system management and user access to the router.

You can install one or two Routing Engines in the router. The Routing Engine installs into the front of the chassis. Two USB ports on the Routing Engine accept a USB memory card that allows you to load Junos OS.

If two Routing Engines are installed, one functions as the master and the other acts as the backup. If the master Routing Engine fails or is removed and the backup is configured appropriately, the backup takes over as the master. The backup Routing Engine is hot-insertable and hot-removable.

The MX104 router supports the Routing Engine with model number RE-MX104.

 Figure 12: MX104 Routing Engine



- [MX104 Routing Engine Components on page 25](#)
- [MX104 Routing Engine Buttons on page 26](#)
- [MX104 Routing Engine LEDs on page 26](#)
- [MX104 Boot Sequence on page 27](#)

MX104 Routing Engine Components

Five ports, located on the right side of the Routing Engine, connect the Routing Engine to one or more external devices on which system administrators can issue Junos OS command-line interface (CLI) commands to manage the router.

The Routing Engine consists of the following components:

- 1.8-GHz CPU—Runs Junos OS to maintain the router's routing tables and routing protocols.
- 4-GB DDR3 RAM (mini DIMM)—Provides storage for the routing and forwarding tables and for other Routing Engine processes.
- 8-GB on-board NAND Flash—Provides primary storage for software images, configuration files, and microcode. The NAND flash is fixed and is inaccessible from outside the router.
- Interface ports—Provides access to management devices.
 - **AUX**—Not supported.
 - **CONSOLE**—Connects the Routing Engine to a system console through a serial cable with an RJ-45 connector.
 - **ETHERNET**—Connects the Routing Engine through an Ethernet connection to a management LAN (or any other device that plugs into an Ethernet connection). The port uses an autosensing RJ-45 connector to support 10-Mbps, 100-Mbps, or 1000-Mbps connections. Two small LEDs on the right of the port indicate the connection in use: see [“MX104 Routing Engine LEDs” on page 23](#).
- Two USB ports—Provide a removable media interface through which you can install the Junos OS manually. Junos OS supports USB version 1.0.
- Online/Offline button—Takes the Routing Engine online or offline when pressed (see [“MX104 Routing Engine Buttons” on page 22](#)).
- Reset button—Reboots the Routing Engine when pressed (see [“MX104 Routing Engine Buttons” on page 22](#)).
- LEDs—Indicates the status of the Routing Engine and its ports (see [“MX104 Routing Engine LEDs” on page 23](#))

MX104 Routing Engine Buttons

Each Routing Engine has two push-button controls. The buttons, labeled **ONLINE OFFLINE**, and **RESET**, are located directly on the faceplate of the Routing Engine. [Table 11 on page 23](#) describes the functions of the buttons.

Table 14: MX104 Routing Engine Buttons

Label	Action	Description	Indicator
ONLINE OFFLINE	Press for 2 seconds.	Routing Engine transitions online when pressed.	Green ONLINE LED is on steadily.
	Press for 4 seconds.	Routing Engine transitions offline when pressed.	All LEDs are off.
RESET	Press for 3 seconds.	Routing Engine reboots when pressed.	Green ONLINE LED is on steadily.

MX104 Routing Engine LEDs

Each Routing Engine has three LEDs that indicate its status. The LEDs, labeled **MASTER**, **ONLINE**, and **OK/FAIL**, are located directly on the faceplate of the Routing Engine. [Table 12 on page 23](#) describes the functions of the Routing Engine LEDs.

Table 15: MX104 Routing Engine LEDs

Label	Color	State	Description
MASTER	Blue	On steadily	Routing Engine is the master.
ONLINE	Green	On steadily	Routing Engine is online.
		Blinking	Routing Engine is booting.
OK/FAIL	Green	On steadily	Routing Engine is functioning normally.
	Red	On steadily	Routing Engine has failed.

The management port labeled **ETHERNET** has a pair of LEDs that display the speed and status of the port.



NOTE: The port labeled **AUX** is not supported.

[Table 13 on page 23](#) describes the LEDs in more detail.

Table 16: Management LEDs

Name	Location	Color	State	Description
Link	Left	Green	On	1000-Mbps link is online.
		Yellow	On	100-Mbps link is online.
		–	Off	10-Mbps link is online.
Activity	Right	Yellow	Blinking	The port is receiving data.
		–	Off	The port is not receiving data.

MX104 Boot Sequence

The MX104 router ships with Junos OS preinstalled and ready to be configured when the router is powered on. One eight-GB internal NAND Flash memory (**da0**) acts as the hard drive. Two USB ports on the front panel accept USB storage devices (**usb0** and **usb1**) that can also function as alternative boot devices.

When the router boots, it first attempts to start the image on the USB 0 flash memory device, if present, then attempts to start the image on the USB 1 flash memory device, if present. If a USB flash memory device is not inserted into either of the two slots on the Routing Engine, or the attempt otherwise fails, the router next tries the active partition on the NAND Flash device.

- Related Documentation**
- [Maintaining the MX104 Routing Engines on page 202](#)
 - [Replacing an MX104 Routing Engine on page 162](#)

MX104 Routing Engine Overview


The Routing Engine is a Freescale-based PC platform that runs Junos OS. Software processes that run on the Routing Engine maintain the routing tables, manage the routing protocols used on the router, control the router interfaces, control some chassis components, and provide the interface for system management and user access to the router.

You can install one or two Routing Engines in the router. The Routing Engine installs into the front of the chassis. Two USB ports on the Routing Engine accept a USB memory card that allows you to load Junos OS.

If two Routing Engines are installed, one functions as the master and the other acts as the backup. If the master Routing Engine fails or is removed and the backup is configured appropriately, the backup takes over as the master. The backup Routing Engine is hot-insertable and hot-removable.

The MX104 router supports the Routing Engine with model number RE-MX104.

 Figure 13: MX104 Routing Engine



- [MX104 Routing Engine Components on page 28](#)
- [MX104 Routing Engine Buttons on page 29](#)
- [MX104 Routing Engine LEDs on page 29](#)
- [MX104 Boot Sequence on page 30](#)

MX104 Routing Engine Components

Five ports, located on the right side of the Routing Engine, connect the Routing Engine to one or more external devices on which system administrators can issue Junos OS command-line interface (CLI) commands to manage the router.

The Routing Engine consists of the following components:

- 1.8-GHz CPU—Runs Junos OS to maintain the router's routing tables and routing protocols.
- 4-GB DDR3 RAM (mini DIMM)—Provides storage for the routing and forwarding tables and for other Routing Engine processes.
- 8-GB on-board NAND Flash—Provides primary storage for software images, configuration files, and microcode. The NAND flash is fixed and is inaccessible from outside the router.
- Interface ports—Provides access to management devices.
 - **AUX**—Not supported.
 - **CONSOLE**—Connects the Routing Engine to a system console through a serial cable with an RJ-45 connector.
 - **ETHERNET**—Connects the Routing Engine through an Ethernet connection to a management LAN (or any other device that plugs into an Ethernet connection). The port uses an autosensing RJ-45 connector to support 10-Mbps, 100-Mbps, or 1000-Mbps connections. Two small LEDs on the right of the port indicate the connection in use: see [“MX104 Routing Engine LEDs” on page 23](#).
- Two USB ports—Provide a removable media interface through which you can install the Junos OS manually. Junos OS supports USB version 1.0.
- Online/Offline button—Takes the Routing Engine online or offline when pressed (see [“MX104 Routing Engine Buttons” on page 22](#)).
- Reset button—Reboots the Routing Engine when pressed (see [“MX104 Routing Engine Buttons” on page 22](#)).
- LEDs—Indicates the status of the Routing Engine and its ports (see [“MX104 Routing Engine LEDs” on page 23](#))

MX104 Routing Engine Buttons

Each Routing Engine has two push-button controls. The buttons, labeled **ONLINE OFFLINE**, and **RESET**, are located directly on the faceplate of the Routing Engine. [Table 11 on page 23](#) describes the functions of the buttons.

Table 17: MX104 Routing Engine Buttons

Label	Action	Description	Indicator
ONLINE OFFLINE	Press for 2 seconds.	Routing Engine transitions online when pressed.	Green ONLINE LED is on steadily.
	Press for 4 seconds.	Routing Engine transitions offline when pressed.	All LEDs are off.
RESET	Press for 3 seconds.	Routing Engine reboots when pressed.	Green ONLINE LED is on steadily.

MX104 Routing Engine LEDs

Each Routing Engine has three LEDs that indicate its status. The LEDs, labeled **MASTER**, **ONLINE**, and **OK/FAIL**, are located directly on the faceplate of the Routing Engine. [Table 12 on page 23](#) describes the functions of the Routing Engine LEDs.

Table 18: MX104 Routing Engine LEDs

Label	Color	State	Description
MASTER	Blue	On steadily	Routing Engine is the master.
ONLINE	Green	On steadily	Routing Engine is online.
		Blinking	Routing Engine is booting.
OK/FAIL	Green	On steadily	Routing Engine is functioning normally.
	Red	On steadily	Routing Engine has failed.

The management port labeled **ETHERNET** has a pair of LEDs that display the speed and status of the port.



NOTE: The port labeled **AUX** is not supported.

[Table 13 on page 23](#) describes the LEDs in more detail.

Table 19: Management LEDs

Name	Location	Color	State	Description
Link	Left	Green	On	1000-Mbps link is online.
		Yellow	On	100-Mbps link is online.
		–	Off	10-Mbps link is online.
Activity	Right	Yellow	Blinking	The port is receiving data.
		–	Off	The port is not receiving data.

MX104 Boot Sequence

The MX104 router ships with Junos OS preinstalled and ready to be configured when the router is powered on. One eight-GB internal NAND Flash memory (**da0**) acts as the hard drive. Two USB ports on the front panel accept USB storage devices (**usb0** and **usb1**) that can also function as alternative boot devices.

When the router boots, it first attempts to start the image on the USB 0 flash memory device, if present, then attempts to start the image on the USB 1 flash memory device, if present. If a USB flash memory device is not inserted into either of the two slots on the Routing Engine, or the attempt otherwise fails, the router next tries the active partition on the NAND Flash device.

- Related Documentation**
- [Maintaining the MX104 Routing Engines on page 202](#)
 - [Replacing an MX104 Routing Engine on page 162](#)

Routing Engine Specifications

Table 20 on page 31 lists the current specifications for Routing Engines supported on M Series, MX Series, and T Series routers. Table 21 on page 33 lists the specifications for end-of-life Routing Engines.



NOTE: For a list of the routing engines that are supported on the M Series, MX Series, T Series, and PTX routers, see “Supported Routing Engines by Router” on page 34.



NOTE: For information about PTX Series Routing Engine specifications, see *Routing Engines Supported on PTX Series Routers*. For information about

Table 20: Routing Engine Specifications

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	Switch Control Board
RE-400-768	400-MHz Celeron	768 MB	Fast Ethernet	40 GB hard disk	1 GB CompactFlash card	9.0	–
RE-A1000-2048	1.0-GHz Pentium	2048 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.1	–
RE-A2000-4096	2.0-GHz Pentium	4096 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.1	–
RE-S300-2048	1.3-GHz Pentium	2048 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.2	SCB, SCBE
RE-S2000-4096	2.0-GHz Pentium	4096 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.2	SCB, SCBE
RE-C1800	1.8-GHz	8 GB	Gigabit Ethernet	SSD	4 GB CompactFlash card	T1600 router in a routing matrix: 9.6R2	CB-T for a standalone router.
						Standalone T640 or T1600 router:11.2	CB-LCC for a router in a routing matrix.
						32-bit Junos OS on a standalone T1600 router: 11.4R2 32-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	CB-T for a standalone router. CB-LCC for a router in a routing matrix.
RE-C2600	2.6-GHz	16 GB	Gigabit Ethernet	SSD	4 GB CompactFlash card	64-bit Junos OS on a standalone T1600 router: 11.4R2 64-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	–
						TX Matrix Plus router: 9.6R2	–

Table 20: Routing Engine Specifications (continued)

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	Switch Control Board
RE-A-1800x2	1800-MHz	8 GB or 16 GB	Gigabit Ethernet	32 GB SSD	4 GB CompactFlash card	10.4	–
RE-S-1800x2	1800-MHz	8 GB or 16 GB	Gigabit Ethernet	32 GB SSD	4 GB CompactFlash card	10.4	SCB, SCBE
RE-S-1800x4	1800-MHz	8GB or 16 GB	Gigabit Ethernet	32 GB SSD	4 GB CompactFlash card	10.4	SCB, SCBE, SCBE2
RE-S-MX104	1.8-GHz	4 GB	Gigabit Ethernet	–	8 GB NAND Flash	13.2	–
RE-B-1800x4G	1.73-GHz	4 GB	Gigabit Ethernet	64 GB SSD	4 GB CompactFlash card	12.1R2, 11.4R4, and 12.2R1	–
RE-M-1800x4	1.8- GHz	16 GB	Gigabit Ethernet	32 GB SSD	4 GB Fixed Internal CompactFlash card	12.3R2	SCB, SCBE
RE-S-1800x4CS	1.8- Ghz	32 GB	Gigabit Ethernet	32 GB SSD	4 GB Fixed Internal CompactFlash card	<ul style="list-style-type: none"> • 12.3R4 • 13.2R1 	SCB, SCBE SCBE2
RE-M-1800x4CS	1.8- Ghz	32 GB	Gigabit Ethernet	32 GB SSD	4GB Fixed Internal CompactFlash card	<ul style="list-style-type: none"> • 12.3R4 • 13.2R1 	–
RE-S-X6-64G	2 Ghz	64 GB	Gigabit Ethernet	Two 50-GB SSDs	-	15.1F4, 16.1	SCBE2
RE-M-X6-64G	2.3 Ghz	64 GB	Gigabit Ethernet	Two 100-GB SSDs	-	15.1F5-S1, 16.1R2, and 16.2R1	–
RE-M-X6-64G	2.3 Ghz	64 GB	Gigabit Ethernet	Two 50-GB SSDs	-	15.1F7	–
RE-M-X6-64G	2.3 Ghz	64 GB	Gigabit Ethernet	Two 50-GB SSDs	-	15.1F7	–

Table 20: Routing Engine Specifications (continued)

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	Switch Control Board
RE-S-1600x8	1.6 Ghz	64 GB	Gigabit Ethernet	Two 50-GB SSDs	-	17.3R1	-
REM208-64G	2.1 Ghz	64 GB	Gigabit Ethernet	Two 100-GB SSDs	-	18.2R1	-
REM208-84G	2.3 Ghz	128 GB	Gigabit Ethernet	Two 200-GB SSDs	-	18.2R1	-
JNP10K-RE1	2.1 Ghz	64 GB	Gigabit Ethernet	Two 100-GB SSDs	-	18.2R1	-



NOTE: Use shielded CAT5e cable for connecting the AUX, CONSOLE, and MGMT ports in RE-S-X6-64G, REMX2K-X8-64G, and REMX2008-X8-64G Routing Engines.

Table 21: End-of-Life Routing Engine Specifications

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	EOL Details
RE-333-256	333-MHz Pentium II	256 MB	Fast Ethernet	6.4 GB hard disk	80 MB CompactFlash card	3.4	PSN-2003-01-063
RE-333-768	333-MHz Pentium II	768 MB	Fast Ethernet	6.4 GB hard disk	80 MB CompactFlash card	3.4	PSN-2003-01-063
RE-600-512	600-MHz Pentium III	512 MB	Fast Ethernet	30 GB hard disk	256 MB CompactFlash card	5.4	PSN-2004-07-019
RE-600-2048	600-MHz Pentium III	2048 MB	Fast Ethernet	40 GB hard disk	1 GB CompactFlash card	5.3	PSN-2008-02-018
RE-850-1536	850-MHz Pentium III	1536 MB	Fast Ethernet	40 GB hard disk	1 GB CompactFlash card	7.2	PSN-2011-04-226
RE-M40	200-MHz Pentium	256 MB	Fast Ethernet	6.4 GB hard disk	80 MB CompactFlash card	3.2	FA-HW-0101-001

Table 21: End-of-Life Routing Engine Specifications (continued)

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	EOL Details
RE-M40-333-768	333-MHz Pentium II	768 MB	Fast Ethernet	10 GB hard disk	80 MB CompactFlash card	4.2	PSN-2003-01-063
RE-M600-2048	600-MHz Pentium III	2048 MB	Fast Ethernet	30 GB hard disk	128 MB CompactFlash card	5.4	PSN-2004-TI-020
RE-1600-2048	1.6-GHz Pentium M	2048 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	6.2	PSN-2008-02-019



NOTE: The memory in [Table 20 on page 31](#) indicates the amount of total memory. To determine the amount of available memory, issue the `show chassis routing-engine` CLI command.

On routers that accept two Routing Engines, you cannot mix Routing Engine types except for a brief period (one minute or so) during an upgrade or downgrade to two Routing Engines of the same type.

Related Documentation

- [Supported Routing Engines by Router on page 34](#)

Supported Routing Engines by Router

The following tables list the Routing Engines that each router supports, the first supported release for the Routing Engine in the specified router, the management Ethernet interface, and the internal Ethernet interfaces for each Routing Engine.

- [M7i Routing Engines on page 35](#)
- [M10i Routing Engines on page 35](#)
- [M40e Routing Engines on page 36](#)
- [M120 Routing Engines on page 36](#)
- [M320 Routing Engines on page 37](#)
- [MX5, MX10, MX40, and MX80 Routing Engine on page 37](#)
- [MX104 Routing Engines on page 38](#)
- [MX240 Routing Engines on page 38](#)
- [MX480 Routing Engines on page 39](#)
- [MX960 Routing Engines on page 40](#)
- [MX2008 Routing Engines on page 41](#)
- [MX2010 Routing Engines on page 41](#)

- [MX2020 Supported Routing Engines on page 42](#)
- [MX10003 Routing Engines on page 42](#)
- [MX10008 Routing Engines on page 42](#)
- [PTX1000 Routing Engines on page 43](#)
- [PTX3000 Routing Engines on page 43](#)
- [PTX5000 Routing Engines on page 43](#)
- [PTX10008 and PTX10016 Routing Engines on page 44](#)
- [T320 Routing Engines on page 45](#)
- [T640 Routing Engines on page 45](#)
- [T1600 Routing Engines on page 46](#)
- [T4000 Routing Engines on page 47](#)
- [TX Matrix Routing Engines on page 47](#)
- [TX Matrix Plus Routing Engines on page 48](#)
- [TX Matrix Plus \(with 3D SIBs\) Routing Engines on page 48](#)

M7i Routing Engines

[Table 22 on page 35](#) lists the Routing Engines supported by the M7i router. The M7i router supports 32-bit Junos OS only.

Table 22: M7i Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-400-768 (EOL details: TSB16445)	RE-5.0	9.0	fxp0	fxp1
RE-850-1536 (EOL details: TSB15553)	RE-850	7.2	fxp0	fxp1
RE-B-1800X1-4G	RE-B-1800x1	11.4R4 12.1R2	fxp0	em0

M10i Routing Engines

[Table 23 on page 35](#) lists the Routing Engines supported by the M10i router. The M10i router supports 32-bit Junos OS only.

Table 23: M10i Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-400-768 (EOL details: TSB16445)	RE-5.0	9.0	fxp0	fxp1 fxp2

Table 23: M10i Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-850-1536 (EOL details: TSB15553)	RE-850	7.2	fxp0	fxp1 fxp2
RE-B-1800X1-4G	RE-B-1800x1	11.4R4 12.1R2	fxp0	em0

M40e Routing Engines

Table 24 on page 36 lists the Routing Engines supported by the M40e router.

Table 24: M40e Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	5.3	fxp0	fxp1 fxp2
RE-A-1000-2048	RE-A-1000	8.1	fxp0	fxp1 fxp2

M120 Routing Engines

Table 25 on page 36 lists the Routing Engines supported by the M120 router.

Table 25: M120 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-A-1000-2048	RE-A-1000	8.0R2	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.0R2	–	fxp0	em0 bcm0
RE-A-1800X2-8G	RE-A-1800x2	<ul style="list-style-type: none"> • 11.4R5 • 12.1R3 	10.4	fxp0	fxp1 fxp2

Table 25: M120 Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-A-1800X2-16G	RE-A-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	fxp1 fxp2
RE-A-1800X4-16G	RE-A-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1

M320 Routing Engines

Table 26 on page 37 lists the Routing Engines supported by the M320 router.

Table 26: M320 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-1600-2048 (EOL details: TSB14374)	RE-4.0	6.2	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	–	fxp0	em0 bcm0
RE-A-1800X2-8G	RE-A-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 bcm0
RE-A-1800X2-16G	RE-A-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 bcm0
RE-A-1800X4-8G	RE-A-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 12.2 	10.4	fxp0	em0 em1

MX5, MX10, MX40, and MX80 Routing Engine

Table 27 on page 38 lists the Routing Engines supported by the MX5, MX10, MX40, and MX80 routers.

Table 27: MX5, MX10, MX40, and MX80 Routing Engine

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
Built-in Routing Engine	Routing Engine RE-MX80	12.3	-	fxp0	em0 em1 <i>NOTE:</i> em1 is used to communicate with the MS-MIC when it is inserted.

MX104 Routing Engines

Table 28 on page 38 lists the Routing Engines supported by MX104 routers.

Table 28: MX104 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-MX104	Routing Engine	13.2	-	fxp0	fxp1 fxp2

MX240 Routing Engines

Table 29 on page 38 lists the Routing Engines supported by MX240 routers.

Table 29: MX240 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: TSB16556)	RE-S-1300	9.0	-	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: TSB16735)	RE-S-2000	9.0	-	fxp0	fxp1 fxp2
RE-S-1800X2-8G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800x2-16G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1

Table 29: MX240 Supported Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1800X4-8G	RE-S-1800X4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-32G-S	RE-S-1800X4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0, em1
RE-S-X6-64G	RE-S-2X00x6	–	15.1F4 16.1R1	fxp0	ixlv0, igb0

MX480 Routing Engines

Table 30 on page 39 lists the Routing Engines supported by MX480 routers.

Table 30: MX480 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: TSB16556)	RE-S-1300	8.4	–	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: TSB16735)	RE-S-2000	8.4	–	fxp0	fxp1 fxp2
RE-S-1800X2-8G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X2-16G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-8G	RE-S-1800X4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1

Table 30: MX480 Supported Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1800X4-32G-S	RE-S-1800X4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0 em1
RE-S-X6-64G	RE-S-2X00x6	–	15.1F4 16.1R1	fxp0	ixlv0, igb0

MX960 Routing Engines

Table 31 on page 40 lists the Routing Engines supported by MX960 routers.

Table 31: MX960 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: TSB16556)	RE-S-1300	8.2	–	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: TSB16735)	RE-S-2000	8.2	–	fxp0	fxp1 fxp2
RE-S-1800X2-8G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X2-16G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-8G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0 em1
RE-S-X6-64G	RE-S-2X00x6	–	15.1F4 16.1R1	fxp0	ixlv0, igb0

Table 31: MX960 Supported Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-X6-64G (For MX960-VC) added for PR 1316954	RE-S-2X00x6	–	17.1R1	fxp0	ixlv0, igb0

MX2008 Routing Engines

Table 32 on page 41 lists the Routing Engines supported by MX2008 routers.

Table 32: MX2008 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
REMX2008-X8-64G	RE-MX2008-X8-64G	15.1F7	fxp0	ixlv0 ixlv1
REMX2008-X8-64G-LT	RE-MX2008-X8-64G-LT	18.2R1	fxp0	ixlv0 ixlv1
REMX2008-X8-128G	RE-MX2008-X8-128G	18.2R1	fxp0	ixlv0 ixlv1

MX2010 Routing Engines

Table 33 on page 41 lists the Routing Engines supported by MX2010 routers.

Table 33: MX2010 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-MX2000-1800X4	RE-S-1800x4	12.3R2	fxp0	em0 em1
REMX2K-1800-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> • 12.3R4 • 13.2R1 	fxp0	em0 em1
REMX2K-X8-64G	RE-S-2X00x8	<ul style="list-style-type: none"> • 15.1F5-S1 • 16.1R2 • 16.2R1 	fxp0	ixlv0 ixlv1

MX2020 Supported Routing Engines

Table 34 on page 42 lists the Routing Engines supported by MX2020 routers.

Table 34: MX2020 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-MX2000-1800X4	RE-S-1800x4	12.3R2	fxp0	em0 em1
REMX2K-1800-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0 em1
REMX2K-X8-64G	RE-S-2X00x8	<ul style="list-style-type: none"> 15.1F5-S1 16.1R2 16.2R1 	fxp0	ixlv0 ixlv1

MX10003 Routing Engines

Table 35 on page 42 lists the Routing Engines supported by MX10003 routers.

Table 35: MX10003 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10003-RE1	RE-S-2X00x6	17.3R1	fxp0	ixlv0 ixlv1
JNP10003-RE1-LT		18.1R1	fxp0	ixlv0 ixlv1

MX10008 Routing Engines

Table 36 on page 42 lists the Routing Engines supported on the MX10008 router.

Table 36: MX10008 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10K-RE1	JNP10K-RE1 RE X10	18.2R1	em0	bme0 bme1

PTX1000 Routing Engines

Table 37 on page 43 lists the Routing Engine supported on the PTX1000.



NOTE: The PTX1000 supports 64-bit Junos OS only.

Table 37: PTX1000 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
Built-in Routing Engine	RE-PTX1000	<ul style="list-style-type: none"> 16.1X65-D30 17.2R1 	em0	bme0 em1

PTX3000 Routing Engines

Table 38 on page 43 lists the Routing Engines supported on the PTX3000.



NOTE: The PTX3000 supports 64-bit Junos OS only.

Table 38: PTX3000 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-DUO-2600	13.2R2	em0	ixgbe0 ixgbe1
RCB-PTX-X6-32G	RE-PTX-2X00x6	16.1R4 17.1R1 This Routing Engine does not support Junos OS Release 16.2.	em0	ixlv0 ixlv1

PTX5000 Routing Engines

Table 39 on page 44 lists the Routing Engines supported on the PTX5000.



NOTE:

- PTX5000 supports 64-bit Junos OS only.
- The PTX5000 router supports two midplanes. The midplane identified as **Midplane-8S** in the CLI output is supported in Junos OS releases, 12.1X48, 12.3, and 13.2. The enhanced midplane, identified as **Midplane-8SeP** is supported from Junos OS release 14.1 onwards.

The RE-DUO-2600 routing engine with Junos OS 13.2 or earlier is not supported on the PTX5000BASE2 midplane.

Table 39: PTX5000 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-DUO-2600	12.1X48	em0	ixgbe0
		12.3		ixgbe1
		13.2		
NOTE: The PTX5000 does not support Junos OS Releases 12.1, 12.2, or 13.1.				
RE-PTX-X8-64G	RE-PTX-2X00x8	15.1F4	em0	ixlv0
		16.1R1		ixlv1
				em1

PTX10008 and PTX10016 Routing Engines

Table 40 on page 44 lists the Routing Engines supported on the PTX10008 and PTX10016 routers.

Table 40: PTX10008 and PTX10016 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10K-RE0	RE-PTX-2X00x4	17.2R1	em0, em1	bme0
				bme1
JNP10K-RE1	JNP10K-RE1 RE X10	18.2R1	em0	bme0
				bme1

T320 Routing Engines

Table 41 on page 45 lists the Routing Engines supported by the T320 router.

Table 41: T320 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	5.3	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0	6.2	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	fxp0	fxp1 fxp2

The T320 router supports the CB-T control board.

T640 Routing Engines

Table 42 on page 45 lists the Routing Engines supported by the T640 router.

Table 42: T640 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	5.3	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0	6.2	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	–	fxp0	em0 bcm0
RE-DUO-C1800-8G	RE-DUO-1800	32-bit Junos OS on a standalone T640 router: 11.2 32-bit Junos OS on a T640 router in a routing matrix: 11.4R9	64-bit Junos OS on a standalone T640 router: 11.3 64-bit Junos OS on a T640 router in a routing matrix: 11.4R9	em0	bcm0 em1

Table 42: T640 Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-16G	RE-DUO-1800	32-bit Junos OS on a standalone T640 router: 11.4R2 32-bit Junos OS on a T640 router in a routing matrix: 11.4R9	64-bit Junos OS on a standalone T640 router: 11.4R2 64-bit Junos OS on a T640 router in a routing matrix: 11.4R9	em0	bcm0 em1

The T640 standalone router supports CB-T control board and CB-LCC in a T640 routing matrix.

T1600 Routing Engines

Table 43 on page 46 lists the Routing Engines supported by the T1600 router.



NOTE: (Two RE-DUO-C1800-8G or two RE-DUO-C1800-16G are required to connect to a Routing Matrix)

Table 43: T1600 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	8.5	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0 (RE-1600)	8.5	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.5	–	fxp0	em0 bcm0
RE-DUO-C1800-8G	RE-TXP-LCC or RE-DUO-1800	32-bit Junos OS on a T1600 router in a routing matrix: 9.6 NOTE: Junos OS Releases 9.6 through 10.4 support RE-DUO-C1800-8G only during upgrade to a line-card chassis (LCC) in a routing matrix. 32-bit Junos OS on a standalone T1600 router: 11.1	64-bit Junos OS on a T1600 router in a routing matrix: 9.6 64-bit Junos OS on a standalone T1600 router: 11.1	em0	bcm0 em1

Table 43: T1600 Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-16G	RE-DUO-1800	32-bit Junos OS on a standalone T1600 router: 11.4R2 32-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	64-bit Junos OS on a standalone T1600 router: 11.4R2 64-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	em0	bcm0 em1

T4000 Routing Engines

Table 44 on page 47 lists the Routing Engines supported by the T4000 router.



NOTE: The T4000 router supports 64-bit Junos OS only.

Table 44: T4000 Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-8G	RE-DUO-1800	Standalone T4000 router: 12.1 T4000 router in a routing matrix: 13.1	em0	bcm0 em1
RE-DUO-C1800-16G	RE-DUO-1800	Standalone T4000 router: 12.1R2 T4000 router in a routing matrix: 13.1	em0	bcm0 em1

The T4000 router supports the CB-LCC control board.

TX Matrix Routing Engines

Table 45 on page 47 lists the Routing Engines supported by the TX Matrix router.

Table 45: TX Matrix Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	7.0	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0 (RE-1600)	7.0	–	fxp0	fxp1 fxp2

Table 45: TX Matrix Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-A-2000-4096	RE-A-2000	8.5	–	fxp0	em0 bcm0
RE-DUO-C1800-8G	RE-DUO-1800	11.4R9	11.4R9	em0	bcm0 em1
RE-DUO-C1800-16G	RE-DUO-1800	11.4R9	11.4R9	em0	bcm0 em1

The TXP router supports two control boards, CB-TX and CB-LCC. The CB-LCC is required for both RE-DUO-C1800-8G and RE-DUO-C1800-16G Routing Engines.

TX Matrix Plus Routing Engines

Table 46 on page 48 lists the Routing Engines supported by the TX Matrix Plus router.

Table 46: TX Matrix Plus Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-TXP-SFC or RE-DUO-2600	32-bit Junos OS: 9.6	64-bit Junos OS: 11.4	em0	ixgbe0 ixgbe1

The TX Matrix Plus router supports the CB-TXP control board.

TX Matrix Plus (with 3D SIBs) Routing Engines

Table 47 on page 48 lists the Routing Engines supported by the TX Matrix Plus router with 3D SIBs.

Table 47: Routing Engines on TX Matrix Plus with 3D SIBs

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-TXP-SFC or RE-DUO-2600	-	64-bit Junos OS: 11.4	em0	ixgbe0 ixgbe1

- Related Documentation**
- [Routing Engine Specifications on page 30](#)
 - *Understanding Internal Ethernet Interfaces*
 - *Understanding Management Ethernet Interfaces*

CHAPTER 5

Line Card Components and Descriptions

- [MX104 Modular Interface Card \(MIC\) Overview on page 51](#)
- [MICs Supported by MX Series Routers on page 53](#)
- [MX104 Port and Interface Numbering on page 61](#)
- [MX104 Modular Interface Card \(MIC\) Overview on page 66](#)

MX104 Modular Interface Card (MIC) Overview

MICs receive incoming packets from the network and transmit outgoing packets to the network. During this process, each MIC performs framing and high-speed signaling for its media type. Before transmitting outgoing data packets through the MIC interfaces, the Packet Forwarding Engine encapsulates the packets received.

The MX104 routers support the following types of MICs:

- [Front-Pluggable MICs on page 51](#)
- [Built-in 10-Gigabit Ethernet MIC on page 51](#)
- [MIC LEDs on page 52](#)

Front-Pluggable MICs

Modular Interface Cards (MICs) install into four slots in the front of the MX104 router and provide the physical connections to various network media types. MICs are hot-removable and hot-insertable. The slots are labeled **0/0**, **0/1**, **1/0**, and **1/1**. You can install MICs of different media types on the same router as long as the router supports those MICs. For complete specifications, see [“MICs Supported by MX Series Routers” on page 53](#) in the *MX Series Interface Module Reference*.

Built-in 10-Gigabit Ethernet MIC

The built-in 10-Gigabit Ethernet MIC is fixed on the MX104 router. The MIC is labeled **XE** and is located on the front panel.



NOTE: If you ordered a license for the built-in 10-Gigabit Ethernet ports on the MX104 and you do not receive a paper license with your shipment, open a case with customer support. See [“Contacting Customer Support” on page 213](#) for more information.

The built-in 10-Gigabit Ethernet MIC has the following components:

Hardware features:

- Four 10-Gigabit Ethernet ports labeled **2/0/0** through **2/0/3**, left to right
- High-performance throughput on each port at speeds up to 10 Gbps
- Line-rate on all four 10-Gigabit Ethernet ports
- LAN-PHY mode at 10.3125 Gbps
- Maximum transmission units (MTUs) of up to 9192 bytes
- One green Link LED per port

Software features:

- Configurable LAN-PHY mode options
- Synchronous Ethernet support
- Optical diagnostics and related alarms
- Virtual Router Redundancy Protocol (VRRP) support
- IEEE 802.1Q virtual LANs (VLANs) support
- Remote monitoring (RMON) EtherStats
- Source MAC learning
- MAC accounting and policing—Dynamic local address learning of source MAC addresses
- Flexible Ethernet encapsulation
- Multiple Tag Protocol Identifiers (TPID)

Cables and connectors:

- Duplex LC/PC connector (Rx and Tx)
- Fiber-optic 10-gigabit small form-factor pluggable (SFP+) transceivers:
 - Connector: Duplex LC/PC (Rx and Tx)
 - 10GBASE-SR (model numbers EX-SFP-10GE-SR, EX-SFP-10GE-USR, and SFPP-10GE-SR)
 - 10GBASE-LR (model numbers EX-SFP-10GE-LR and SFPP-10GE-LR)
 - 10GBASE-LRM (model number SFPP-10GE-LRM)

Optical interface specifications—see *10-Gigabit Ethernet 10GBASE Optical Interface Specifications*.

MIC LEDs

Each front-pluggable MIC has LEDs located on the faceplate. For more information about LEDs on the MIC faceplate, see the “LEDs” section for each MIC in the [MX Series Interface Module Reference](#).

The built-in 10-Gigabit Ethernet MIC labeled **XE** accepts 10-Gigabit Ethernet SFP+. Each transceiver has one pair of port LEDs. [Table 48 on page 53](#) describes the LEDs in more detail.

Table 48: SFP+ Port LEDs

Name	Location	Color	State	Description
Activity	Left	Green	Blinking	The port is receiving data.
		–	Off	The port is not receiving data.
Link	Right	Yellow	On	Link is online.
		–	Off	No link.

Related Documentation

- [MX104 Port and Interface Numbering on page 61](#)
- [Replacing an MX104 MIC on page 171](#)
- [Maintaining the MX104 MICs and Network Ports on page 202](#)

MICs Supported by MX Series Routers

The following tables list the first supported Junos OS release for the MX Series.

- [Table 49 on page 53](#) lists the first supported Junos OS release for MICs on MX240, MX480, MX960, and MX2008 routers.
- [Table 50 on page 55](#) lists the first supported Junos OS release for MICs on MX2010 and MX2020 routers.
- [Table 51 on page 58](#) list the first supported Junos OS release for MICs on MX5, MX10, and MX40 routers.
- [Table 52 on page 59](#) lists the first supported Junos OS release for MICs on MX80 and MX104 routers.
- [Table 53 on page 61](#) lists the first supported Junos OS release for MICs on MX10003 router.

Table 49: MICs Supported by MX240, MX480, MX960 and MX2008 Routers

MIC Name	MIC Model Number	Ports	MX240, MX480, and MX960 Routers	MX2008 Routers
ATM				
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2OC12-ATM	8	12.1	15.1F7
DS3/E3				

Table 49: MICs Supported by MX240, MX480, MX960 and MX2008 Routers (continued)

MIC Name	MIC Model Number	Ports	MX240, MX480, and MX960 Routers	MX2008 Routers
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B	8	11.4	15.1F7
Circuit Emulation				
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	16	12.3	15.1F7
Gigabit Ethernet				
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	10.1	15.1F7
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP-E	20	13.3	15.1F7
10-Gigabit Ethernet				
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-2XGE-XFP	2	10.2	15.1F7
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-4XGE-XFP	4	10.1	15.1F7
<i>10-Gigabit Ethernet MIC with SFP+ (10 Ports)</i>	MIC3-3D-10XGE-SFPP	10	12.3	15.1F7
<i>10-Gigabit Ethernet MIC with SFP+ (24 Ports)</i>	MIC6-10G	24	-	15.1F7
<i>10-Gigabit Ethernet OTN MIC with SFP+ (24 Ports)</i>	MIC6-10G-OTN	24	-	15.1F7
40-Gigabit Ethernet				
<i>40-Gigabit Ethernet MIC with QSFP+</i>	MIC3-3D-2X40GE-QSFP+	2	12.2	15.1F7
100-Gigabit Ethernet				
<i>100-Gigabit Ethernet MIC with CFP</i>	MIC3-3D-1X100GE-CFP	1	12.1	15.1F7
<i>100-Gigabit Ethernet MIC with CXP</i>	MIC3-3D-1X100GE-CXP	1	12.2	15.1F7
<i>100-Gigabit Ethernet MIC with CXP (4 Ports)</i>	MIC6-100G-CXP	4	-	15.1F7
<i>100-Gigabit Ethernet MIC with CFP2</i>	MIC6-100G-CFP2	2	-	15.1F7

Table 49: MICs Supported by MX240, MX480, MX960 and MX2008 Routers (continued)

MIC Name	MIC Model Number	Ports	MX240, MX480, and MX960 Routers	MX2008 Routers
100-Gigabit DWDM OTN				
<i>100-Gigabit DWDM OTN MIC with CFP2-ACO</i>	MIC3-100G-DWDM	1	15.1F5 15.1F6 17.1R1	15.1F7
Multi-Rate				
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4OC3OC12-1OC48	4	11.2	15.1F7
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8OC3OC12-4OC48	8	11.2	15.1F7
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4CHOC3-2CHOC12	4	11.4	15.1F7
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8CHOC3-4CHOC12	8	11.4	15.1F7
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1COC12-CE	4	12.2	15.1F7
<i>MIC MRATE (12-Port Multi-Rate MIC with QSFP+)</i>	MIC-MRATE	12	-	15.1F7
<i>Multi-Rate Ethernet MIC (12-Port Multi-Rate MACsec MIC with QSFP+)</i>	MIC-MACSEC-MRATE	12		17.4
Tri-Rate				
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	40	10.2	15.1F7
Services				
<i>Multiservices MIC</i>	MS-MIC-16G	0	13.2	15.1F7
SONET/SDH				
<i>SONET/SDH OC192/STM64 MIC with XFP</i>	MIC-3D-1OC192-XFP	1	12.2	15.1F7

Table 50: MICs Supported by MX2010 and MX2020 Routers

MIC Name	MIC Model Number	Ports	MX2010 Routers	MX2020 Routers
ATM				

Table 50: MICs Supported by MX2010 and MX2020 Routers (continued)

MIC Name	MIC Model Number	Ports	MX2010 Routers	MX2020 Routers
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2OC12-ATM	8	12.3	12.3
DS3/E3				
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B	8	12.3	12.3
Circuit Emulation				
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	16	–	–
Gigabit Ethernet				
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	12.3	12.3
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP-E	20	13.3	13.3
10-Gigabit Ethernet				
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-2XGE-XFP	2	12.3	12.3
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-4XGE-XFP	4	12.3	12.3
<i>10-Gigabit Ethernet MIC with SFP+ (10 Ports)</i>	MIC3-3D-10XGE-SFP+	10	12.3	12.3
<i>10-Gigabit Ethernet MIC with SFP+ (24 Ports)</i>	MIC6-10G	24	13.3R2	13.3R2
<i>10-Gigabit Ethernet OTN MIC with SFP+ (24 Ports)</i>	MIC6-10G-OTN	24	13.3R3	13.3R3
40-Gigabit Ethernet				
<i>40-Gigabit Ethernet MIC with QSFP+</i>	MIC3-3D-2X40GE-QSFP+	2	12.3	12.3
100-Gigabit Ethernet				
<i>100-Gigabit Ethernet MIC with CFP</i>	MIC3-3D-1X100GE-CFP	1	12.3	12.3
<i>100-Gigabit Ethernet MIC with CXP</i>	MIC3-3D-1X100GE-CXP	1	12.3	12.3
<i>100-Gigabit Ethernet MIC with CXP (4 Ports)</i>	MIC6-100G-CXP	4	13.3R2	13.3R2

Table 50: MICs Supported by MX2010 and MX2020 Routers (continued)

MIC Name	MIC Model Number	Ports	MX2010 Routers	MX2020 Routers
<i>100-Gigabit Ethernet MIC with CFP2</i>	MIC6-100G-CFP2	2	13.3R3	13.3R3
100-Gigabit DWDM OTN				
<i>100-Gigabit DWDM OTN MIC with CFP2-ACO</i>	MIC3-100G-DWDM	1	15.1F5 15.1F6 17.1R1	15.1F5 15.1F6 17.1R1
Multi-Rate				
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4OC3OC12-1OC48	4	12.3	12.3
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8OC3OC12-4OC48	8	12.3	12.3
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4CHOC3-2CHOC12	4	12.3	12.3
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8CHOC3-4CHOC12	8	12.3	12.3
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1COC12-CE	4	12.3	12.3
<i>MIC MRATE (12-Port Multi-Rate MIC with QSFP+)</i>	MIC-MRATE	12	<ul style="list-style-type: none"> • 15.1F5 with Junos Continuity • 16.1R1 and later 	<ul style="list-style-type: none"> • 15.1F5 with Junos Continuity • 16.1R1 and later
<i>Multi-Rate Ethernet MIC (12-Port Multi-Rate MACsec MIC with QSFP+)</i>	MIC-MACSEC-MRATE	12	17.4	17.4
Tri-Rate				
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	40	12.3	12.3
Services				
<i>Multiservices MIC</i>	MS-MIC-16G	0	13.2	13.2
SONET/SDH				
<i>SONET/SDH OC192/STM64 MIC with XFP</i>	MIC-3D-1OC192-XFP	1	12.3	12.3

Table 51: MICs Supported by MX5, MX10, and MX40 Routers

MIC Name	MIC Model Number	Ports	MX5	MX10	MX40
ATM					
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2OC12-ATM	8	12.1	12.1	12.1
DS3/E3					
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B	8	11.4	11.4	11.4
Circuit Emulation					
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	16	13.2R2	13.2R2	13.2R2
<i>Channelized E1/T1 Circuit Emulation MIC (H)</i>	MIC-3D-16CHE1-T1-CE-H	16	–	–	–
Gigabit Ethernet					
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	11.2R4	11.2R4	11.2R4
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP-E	20	13.2R2	13.2R2	13.2R2
<i>Gigabit Ethernet MIC with SFP (EH)</i>	MIC-3D-20GE-SFP-EH	20	–	–	–
10-Gigabit Ethernet					
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-2XGE-XFP	2	11.2R4	11.2R4	11.2R4
Multi-Rate					
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4OC3OC12-1OC48	4	11.2R4	11.2R4	11.2R4
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8OC3OC12-4OC48	8	11.2R4	11.2R4	11.2R4
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4CHOC3-2CHOC12	4	11.4	11.4	11.4
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8CHOC3-4CHOC12	8	11.4	11.4	11.4
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1COC12-CE	4	12.2	12.2	12.2

Table 51: MICs Supported by MX5, MX10, and MX40 Routers (continued)

MIC Name	MIC Model Number	Ports	MX5	MX10	MX40
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP (H)</i>	MIC-4COC3-1COC12-CE-H	-	-	-	-
Tri-Rate					
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	40	-	11.2R4	11.2R4
Services					
<i>Multiservices MIC</i>	MS-MIC-16G	0	13.2 Rear slot only.	13.2 Rear slot only.	13.2 Rear slot only.
SONET/SDH					
<i>SONET/SDH OC192/STM64 MIC with XFP</i>	MIC-3D-1OC192-XFP	1	12.2	12.2	12.2

Table 52: MICs Supported by MX80 and MX104 Routers

MIC Name	MIC Model Number	Ports	MX80	MX104
ATM				
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2OC12-ATM	8	12.1	13.3
DS3/E3				
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B	8	11.4	13.3
Circuit Emulation				
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	16	13.2R2	13.2R2
<i>Channelized E1/T1 Circuit Emulation MIC (H)</i>	MIC-3D-16CHE1-T1-CE-H	16	-	13.2R2
Gigabit Ethernet				
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	10.2	13.2R2
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP-E	20	13.2R2	13.2R2
<i>Gigabit Ethernet MIC with SFP (EH)</i>	MIC-3D-20GE-SFP-EH	20	-	13.2R2
10-Gigabit Ethernet				

Table 52: MICs Supported by MX80 and MX104 Routers (continued)

MIC Name	MIC Model Number	Ports	MX80	MX104
10-Gigabit Ethernet MICs with XFP	MIC-3D-2XGE-XFP	2	10.2	13.2R2
Multi-Rate				
SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP	MIC-3D-4OC3OC12-1OC48	4	11.2	13.3
SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP	MIC-3D-8OC3OC12-4OC48	8	11.2	13.3
Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP	MIC-3D-4CHOC3-2CHOC12	4	11.4	13.3
Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP	MIC-3D-8CHOC3-4CHOC12	8	11.4	13.3
Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP	MIC-3D-4COC3-1COC12-CE	4	12.2	13.2R2
Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP (H)	MIC-4COC3-1COC12-CE-H	-	-	13.2R2
Tri-Rate				
Tri-Rate MIC	MIC-3D-40GE-TX	40	10.2	13.2R2
Services				
Multiservices MIC	MS-MIC-16G	0	13.2	13.3R2
			Rear slot only. Supported on the modular MX80 and fixed MX80-48T	NOTE Starting From Junos OS 13.3R3, 14.1R2, and 14.2R1, MX104 supports only two Multiservices MICs.
SONET/SDH				
SONET/SDH OC192/STM64 MIC with XFP	MIC-3D-1OC192-XFP	1	12.2	13.3

Table 53: MICs Supported by MX10003 Router

MIC Name	MIC Model Number	Ports	MX10003
Multi-Rate			
Multi-Rate Ethernet MIC (12-Port Multi-Rate MIC with QSFP+)	JNP-MIC1	12	17.3
Multi-Rate Ethernet MIC (12-Port Multi-Rate MACsec MIC with QSFP+)	JNP-MIC1-MACSEC	12	17.3R2

- Related Documentation**
- [MX Series MIC Overview](#)
 - [MIC/MPC Compatibility](#)

MX104 Port and Interface Numbering

- [Identifying Interface Numbers on the Hardware on page 61](#)
- [Identifying Interface Numbers in the CLI on page 63](#)

Identifying Interface Numbers on the Hardware

Each MX104 router has three built-in MPCs, which are represented in the CLI as **FPC 0** through **FPC 2**. The numbering of the MPCs is from bottom to top (see [Figure 14 on page 62](#)).



NOTE: The port numbers on MICs correspond to the port numbers on the interface. The port numbering on the MIC-3D-20GE-SFP-EH MIC depicted in [Figure 14 on page 62](#) is only one example of the port numbering for MICs.

Each MIC might number ports differently—horizontally or vertically, for example—and it is important to review the port numbering for your particular MIC in the [MX Series Interface Module Reference](#).

MPC 0 and MPC 1 have two slots each that accept MICs. The MICs are represented as **MIC 0** and **MIC 1** in the CLI and are logically divided into PICs depending on their type. A MIC installed in the left-most MIC slot (**0/0** or **1/0**) is represented in the CLI as **PIC 0** and **PIC 1**. A MIC installed in the right-most MIC slot (**0/1** or **1/1**) is represented as **PIC 2** and **PIC 3**.

MPC 2 houses a 4-port 10-Gigabit Ethernet MIC. Both the MPC and the MIC are considered fixed and are built into the front panel of the chassis. The MPC is represented as **FPC 2** in the CLI. The MIC is represented as **MIC 0** in the CLI and is logically divided into a single PIC, which is represented as **PIC 0**.

Figure 14: MX104 Interface Port Mapping Example

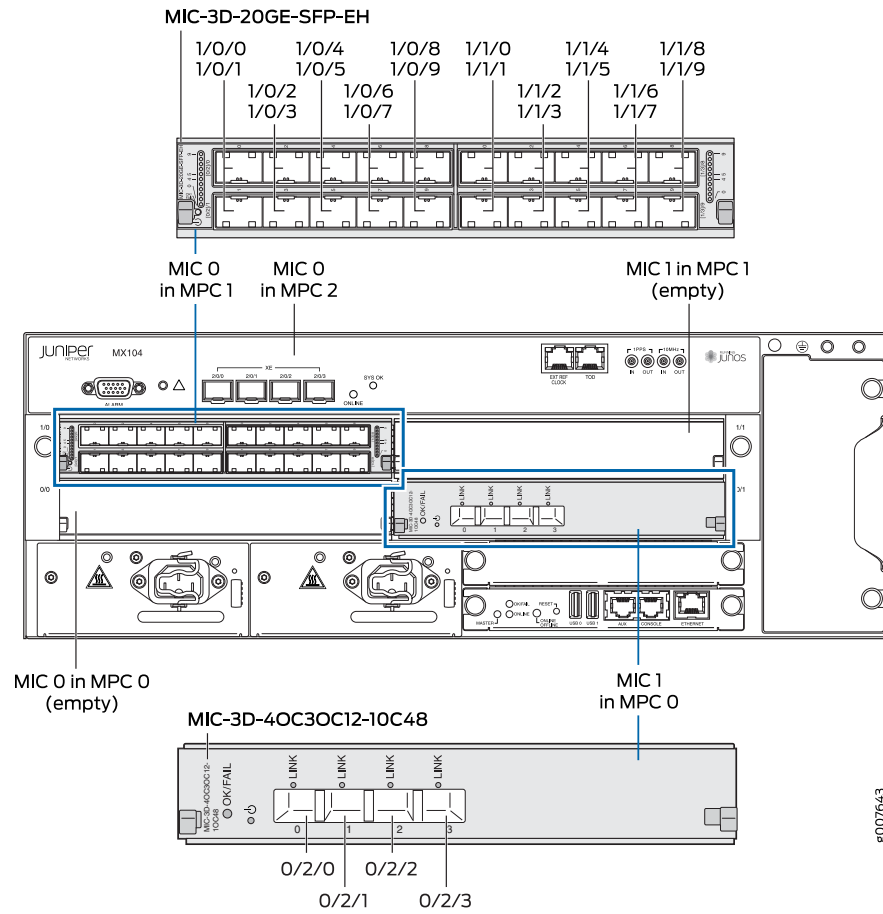


Table 54 on page 62 summarizes the relationship between the components and the interface names.

Table 54: MX104 MIC Interface Names

Component	Component Name in the CLI	Interface Names
Built-in 4-port 10-Gigabit Ethernet MIC	4x 10GE SFP+	xe-2/0/0 through xe-2/0/3

Table 54: MX104 MIC Interface Names (continued)

Component	Component Name in the CLI	Interface Names
MIC 0 (left) installed in MPC 0 (labeled 0/0)	See <i>MX Series Interface Module Reference</i> .	<i>type-0/0/port</i> <i>type-0/1/port</i>
MIC 1 (right) installed in MPC 0 (labeled 0/1)		<i>type-0/2/port</i> <i>type-0/3/port</i>
MIC installed in MIC slot 1/0		<i>type-1/0/port</i> <i>type-1/1/port</i>
MIC installed in MIC slot 1/1		<i>type-1/2/port</i> <i>type-1/3/port</i>

Identifying Interface Numbers in the CLI

In the physical part of the interface name, a hyphen (-) separates the media type from the MPC number (represented as an FPC in the CLI), and a slash (/) separates the logical PIC and port numbers:

type-fpc/pic/port

- *type*—Media type, which identifies the network device. For example:
 - *ge*—Gigabit Ethernet interface
 - *so*—SONET/SDH interface
 - *xe*—10-Gigabit Ethernet interface

For a complete list of media types, see *Interface Naming Overview*.

- *fpc*—Slot in which the MPC is installed. On the MX104 router, the three MPCs are built into the chassis and are represented in the CLI as **FPC 0**, **FPC 1**, or **FPC 2**.
- *pic*—Logical PIC on the MIC. The number of logical PICs varies depending on the type of MIC.
- *port*—Port number.



NOTE: The MIC number is not included in the interface name.

The following sample CLI output displays the three built-in MPCs and five MICs.

```
user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               G3498         MX104
```

Midplane	REV 28	750-044219	CAAX5767	MX104
PEM 0	REV 03	740-045932	1H073050110	DC Power Entry Module
PEM 1	REV 03	740-045932	1H073050017	DC Power Entry Module
Routing Engine 0	REV 03	750-053342	CABP2893	RE-MX-104
Routing Engine 1	REV 03	750-053342	CABP2978	RE-MX-104
AFEB 0		BUILTIN	BUILTIN	Forwarding Engine
Processor				
FPC 0		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 02	750-046905	CAAV2145	3D 20x 1GE(LAN)-EH,SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) -EH SFP
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) -EH SFP
MIC 1	REV 02	750-047733	CAAN7024	16x CHE1T1 -H, RJ48
PIC 2		BUILTIN	BUILTIN	16x CHE1T1 -H, RJ48
FPC 1		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0	REV 05	750-046905	CAAY0325	3D 20x 1GE(LAN)-EH,SFP
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN) -EH SFP
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN) -EH SFP
MIC 1	REV 05		CAAW5365	1x COC12/4x COC3 CH-CE
-H, SFP				
PIC 2		BUILTIN	BUILTIN	1x COC12/4x COC3 CH-CE
-H, SFP				
FPC 2		BUILTIN	BUILTIN	MPC BUILTIN
MIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
PIC 0		BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Fan Tray 0	REV 02	711-049570	CAAX6564	Fan Tray

The **show interfaces terse** command displays the four built-in 10-Gigabit Ethernet interfaces as **xe-2/0/0** through **xe-2/0/3**.

```

user@host> show interfaces terse
Interface           Admin Link Proto  Local           Remote
...
xe-2/0/0            up    up
xe-2/0/0.0         up    up    inet
xe-2/0/1           up    up
xe-2/0/1.0         up    up    inet
xe-2/0/2           up    up
xe-2/0/2.0         up    up    inet
xe-2/0/3           up    up
xe-2/0/3.0         up    up    inet
...

```

The **show interfaces terse** command displays the Gigabit Ethernet interfaces for the 20-port Gigabit Ethernet MIC installed in MIC slot **1/0**. The media type of the 20-port Gigabit Ethernet MIC dictates that the MIC be logically divided into two PICs, each with 10 ports. The interfaces are numbered **ge-1/0/0** through **ge-1/0/9** and **ge-1/1/0** through **ge-1/1/9**.

```

user@host> show interfaces terse
Interface           Admin Link Proto  Local           Remote
...
ge-1/0/0            up    up
ge-1/0/0.0         up    up    inet    10.0.0.10/24
multiservice
ge-1/0/1           up    up
ge-1/0/1.0         up    up    inet    10.0.1.10/24
multiservice
ge-1/0/2           up    up

```



```

ge-1/0/2.0          up   up   inet    10.0.2.10/24
                  up   up   multiservice
ge-1/0/3           up   up
ge-1/0/3.0         up   up   inet    10.0.3.10/24
                  up   up   multiservice
ge-1/0/4           up   up
ge-1/0/4.0         up   up   inet    10.0.4.10/24
                  up   up   multiservice
ge-1/0/5           up   up
ge-1/0/5.0         up   up   inet    10.0.5.10/24
                  up   up   multiservice
ge-1/0/6           up   up
ge-1/0/6.0         up   up   inet    10.0.6.10/24
                  up   up   multiservice
ge-1/0/7           up   up
ge-1/0/7.0         up   up   inet    10.0.7.10/24
                  up   up   multiservice
ge-1/0/8           up   up
ge-1/0/8.0         up   up   inet    10.0.8.10/24
                  up   up   multiservice
ge-1/0/9           up   up
ge-1/0/9.0         up   up   inet    10.0.9.10/24
                  up   up   multiservice
ge-1/1/0           up   up
ge-1/1/0.0         up   up   inet    10.1.0.11/24
                  up   up   multiservice
ge-1/1/1           up   up
ge-1/1/1.0         up   up   inet    10.1.1.11/24
                  up   up   multiservice
ge-1/1/2           up   up
ge-1/1/2.0         up   up   inet    10.1.2.11/24
                  up   up   multiservice
ge-1/1/3           up   up
ge-1/1/3.0         up   up   inet    10.1.3.11/24
                  up   up   multiservice
ge-1/1/4           up   up
ge-1/1/4.0         up   up   inet    10.1.4.11/24
                  up   up   multiservice
ge-1/1/5           up   up
ge-1/1/5.0         up   up   inet    10.1.5.11/24
                  up   up   multiservice
ge-1/1/6           up   up
ge-1/1/6.0         up   up   inet    10.1.6.11/24
                  up   up   multiservice
ge-1/1/7           up   up
ge-1/1/7.0         up   up   inet    10.1.7.11/24
                  up   up   multiservice
ge-1/1/8           up   up
ge-1/1/8.0         up   up   inet    10.1.8.11/24
                  up   up   multiservice
ge-1/1/9           up   up
ge-1/1/9.0         up   up   inet    10.1.9.11/24
                  up   up   multiservice
...

```

The **show interfaces terse** command displays the four SONET/SDH interfaces for the MIC installed in MIC slot 0/1 as **co3-0/2/0** through **co3-2/0/3**.

```
user@host> show interfaces terse
```

Interface	Admin	Link	Proto	Local	Remote
...					
coc3-0/2/0	up	up			
coc1-0/2/0:1	up	up			
coc3-0/2/1	up	up			
coc1-0/2/1:1	up	up			
coc3-0/2/2	up	up			
coc1-0/2/2:1	up	up			
coc3-0/2/3	up	up			
coc1-0/2/3:1	up	up			
...					

Related Documentation

- [MX104 3D Universal Edge Router Overview on page 3](#)
- [MX104 Hardware and CLI Terminology Mapping on page 6](#)
- [MX104 Chassis Overview on page 4](#)

MX104 Modular Interface Card (MIC) Overview

MICs receive incoming packets from the network and transmit outgoing packets to the network. During this process, each MIC performs framing and high-speed signaling for its media type. Before transmitting outgoing data packets through the MIC interfaces, the Packet Forwarding Engine encapsulates the packets received.

The MX104 routers support the following types of MICs:

- [Front-Pluggable MICs on page 66](#)
- [Built-in 10-Gigabit Ethernet MIC on page 66](#)
- [MIC LEDs on page 67](#)

Front-Pluggable MICs

Modular Interface Cards (MICs) install into four slots in the front of the MX104 router and provide the physical connections to various network media types. MICs are hot-removable and hot-insertable. The slots are labeled **0/0**, **0/1**, **1/0**, and **1/1**. You can install MICs of different media types on the same router as long as the router supports those MICs. For complete specifications, see “[MICs Supported by MX Series Routers](#)” on page 53 in the [MX Series Interface Module Reference](#).

Built-in 10-Gigabit Ethernet MIC

The built-in 10-Gigabit Ethernet MIC is fixed on the MX104 router. The MIC is labeled **XE** and is located on the front panel.



NOTE: If you ordered a license for the built-in 10-Gigabit Ethernet ports on the MX104 and you do not receive a paper license with your shipment, open a case with customer support. See “[Contacting Customer Support](#)” on page 213 for more information.

The built-in 10-Gigabit Ethernet MIC has the following components:

Hardware features:

- Four 10-Gigabit Ethernet ports labeled **2/0/0** through **2/0/3**, left to right
- High-performance throughput on each port at speeds up to 10 Gbps
- Line-rate on all four 10-Gigabit Ethernet ports
- LAN-PHY mode at 10.3125 Gbps
- Maximum transmission units (MTUs) of up to 9192 bytes
- One green Link LED per port

Software features:

- Configurable LAN-PHY mode options
- Synchronous Ethernet support
- Optical diagnostics and related alarms
- Virtual Router Redundancy Protocol (VRRP) support
- IEEE 802.1Q virtual LANs (VLANs) support
- Remote monitoring (RMON) EtherStats
- Source MAC learning
- MAC accounting and policing—Dynamic local address learning of source MAC addresses
- Flexible Ethernet encapsulation
- Multiple Tag Protocol Identifiers (TPID)

Cables and connectors:

- Duplex LC/PC connector (Rx and Tx)
- Fiber-optic 10-gigabit small form-factor pluggable (SFP+) transceivers:
 - Connector: Duplex LC/PC (Rx and Tx)
 - 10GBASE-SR (model numbers EX-SFP-10GE-SR, EX-SFP-10GE-USR, and SFPP-10GE-SR)
 - 10GBASE-LR (model numbers EX-SFP-10GE-LR and SFPP-10GE-LR)
 - 10GBASE-LRM (model number SFPP-10GE-LRM)

Optical interface specifications—see *10-Gigabit Ethernet 10GBASE Optical Interface Specifications*.

MIC LEDs

Each front-pluggable MIC has LEDs located on the faceplate. For more information about LEDs on the MIC faceplate, see the “LEDs” section for each MIC in the [MX Series Interface Module Reference](#).

The built-in 10-Gigabit Ethernet MIC labeled **XE** accepts 10-Gigabit Ethernet SFP+. Each transceiver has one pair of port LEDs. [Table 48 on page 53](#) describes the LEDs in more detail.

Table 55: SFP+ Port LEDs

Name	Location	Color	State	Description
Activity	Left	Green	Blinking	The port is receiving data.
		–	Off	The port is not receiving data.
Link	Right	Yellow	On	Link is online.
		–	Off	No link.

Related Documentation

- [MX104 Port and Interface Numbering on page 61](#)
- [Replacing an MX104 MIC on page 171](#)
- [Maintaining the MX104 MICs and Network Ports on page 202](#)

CHAPTER 6

Power System Components and Descriptions

- [MX104 Power Overview on page 69](#)
- [MX104 Power Overview on page 71](#)

MX104 Power Overview

The MX104 router uses either AC or DC power supplies (see [Figure 15 on page 70](#) and [Figure 16 on page 70](#)). The power supplies are located in the front of the chassis and offer 1+1 redundancy. Each power supply has a handle, an ejection tab, and a status LED.



CAUTION: The router cannot be powered from AC and DC power supplies simultaneously.

When two power supplies are present, they share power almost equally within a fully populated system. If one power supply in a redundant configuration fails or is removed, the remaining power supply assumes the entire electrical load without interruption. A single power supply provides the maximum configuration with full power for as long as the router is operational. A second power supply can be installed for redundancy. Each power supply is cooled by its own internal cooling system.

Redundant power supplies are hot-removable and hot-insertable. When you remove a power supply from a router that uses only one power supply, the router might shut down depending on your configuration.


- [AC Power Supplies on page 69](#)
- [DC Power Supplies on page 70](#)
- [Power Supply LEDs on page 70](#)

AC Power Supplies

Each AC power supply weighs approximately 2.5 lb (1.13 kg) and consists of a handle, a power cord retainer clip, an ejection latch, an AC appliance inlet, a fan, and an LED to monitor the status of the power supply. [Figure 15 on page 70](#) shows the power supply.

Each inlet requires a dedicated AC power feed and a dedicated customer site circuit breaker. We recommend that you use a dedicated customer site circuit breaker rated for 10 A (100 VAC), or as required by local code.

Figure 15: AC Power Supply

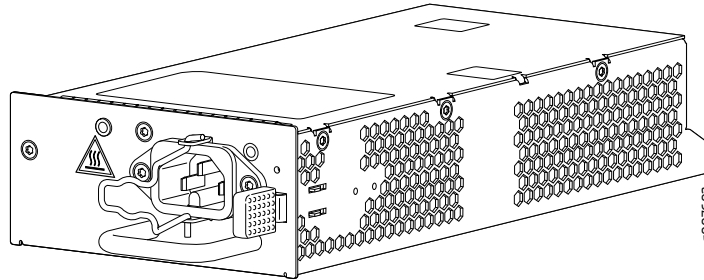


WARNING: The router is pluggable type A equipment installed in a restricted-access location. It has a separate protective earthing terminal (sized for SAE 10-32 ground screws) provided on the chassis in addition to the grounding pin of the power supply cord. This separate protective earthing terminal must be permanently connected to earth.

DC Power Supplies

Each DC power supply weighs approximately 3 lb (1.36 kg) and consists of a handle, an ejection latch, a status LED, a grounding point, and a terminal block that provides a single DC input (24, -48, or -60 VDC and return) that requires a dedicated customer site circuit breaker. We recommend that you provide at least 40 A @ 24 VDC and use a facility circuit breaker. [Figure 16 on page 70](#) shows the power supply.

Figure 16: DC Power Supply

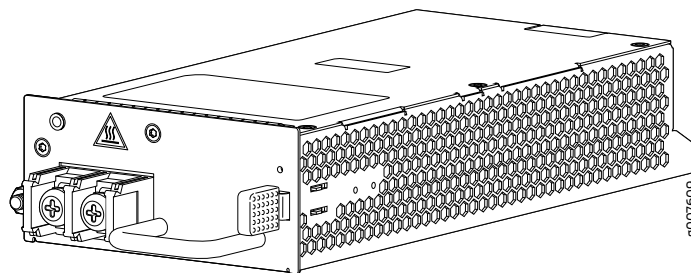

Power Supply LEDs

One LED labeled **PS STATUS** indicates the status of the power supply. [Table 56 on page 71](#) describes the system LED in more detail.

Table 56: Power Supply LED

Label	Color	State	Description
PS STATUS	Green	On steadily	Power supply is functioning normally, and input voltage is within allowable operating range.
	Yellow	On steadily	Primary OTP
		Blinking	Secondary OTP
	Red	On steadily	Power supply is receiving input voltage below the allowable operating range, but the redundant power supply is functioning normally.
—	Off	Power supply is receiving input voltage below the allowable operating range and is not part of a redundant configuration.	

Related Documentation

- [Connecting AC Power Cords to the MX104 Router on page 123](#)
- [Connecting DC Power Cables to the MX104 Router on page 125](#)
- [MX104 AC Power Specifications on page 103](#)
- [MX104 DC Power Specifications on page 107](#)

MX104 Power Overview

The MX104 router uses either AC or DC power supplies (see [Figure 15 on page 70](#) and [Figure 16 on page 70](#)). The power supplies are located in the front of the chassis and offer 1+1 redundancy. Each power supply has a handle, an ejection tab, and a status LED.



CAUTION: The router cannot be powered from AC and DC power supplies simultaneously.

When two power supplies are present, they share power almost equally within a fully populated system. If one power supply in a redundant configuration fails or is removed, the remaining power supply assumes the entire electrical load without interruption. A single power supply provides the maximum configuration with full power for as long as the router is operational. A second power supply can be installed for redundancy. Each power supply is cooled by its own internal cooling system.

Redundant power supplies are hot-removable and hot-insertable. When you remove a power supply from a router that uses only one power supply, the router might shut down depending on your configuration.


- [AC Power Supplies on page 72](#)
- [DC Power Supplies on page 72](#)
- [Power Supply LEDs on page 73](#)

AC Power Supplies

Each AC power supply weighs approximately 2.5 lb (1.13 kg) and consists of a handle, a power cord retainer clip, an ejection latch, an AC appliance inlet, a fan, and an LED to monitor the status of the power supply. [Figure 15 on page 70](#) shows the power supply.

Each inlet requires a dedicated AC power feed and a dedicated customer site circuit breaker. We recommend that you use a dedicated customer site circuit breaker rated for 10 A (100 VAC), or as required by local code.

Figure 17: AC Power Supply

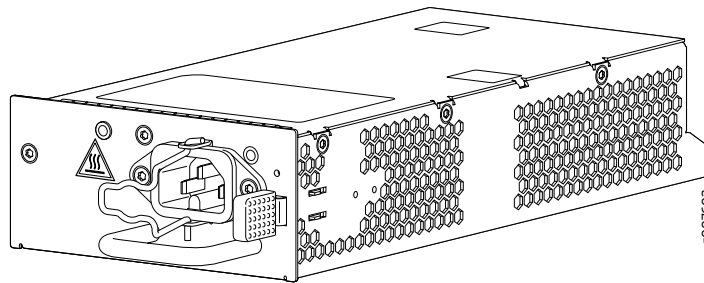


WARNING: The router is pluggable type A equipment installed in a restricted-access location. It has a separate protective earthing terminal (sized for SAE 10-32 ground screws) provided on the chassis in addition to the grounding pin of the power supply cord. This separate protective earthing terminal must be permanently connected to earth.

DC Power Supplies

Each DC power supply weighs approximately 3 lb (1.36 kg) and consists of a handle, an ejection latch, a status LED, a grounding point, and a terminal block that provides a single DC input (24, -48, or -60 VDC and return) that requires a dedicated customer site circuit breaker. We recommend that you provide at least 40 A @ 24 VDC and use a facility circuit breaker. [Figure 16 on page 70](#) shows the power supply.

Figure 18: DC Power Supply

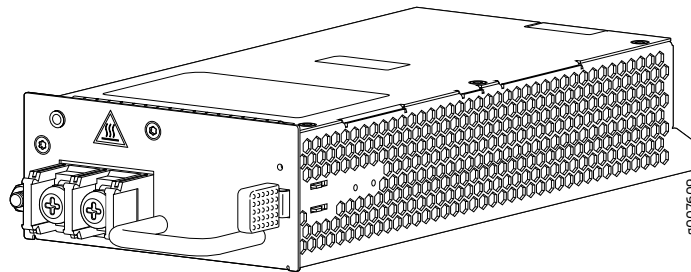

Power Supply LEDs

One LED labeled **PS STATUS** indicates the status of the power supply. [Table 56 on page 71](#) describes the system LED in more detail.

Table 57: Power Supply LED

Label	Color	State	Description
PS STATUS	Green	On steadily	Power supply is functioning normally, and input voltage is within allowable operating range.
	Yellow	On steadily	Primary OTP
		Blinking	Secondary OTP
Red	On steadily	Power supply is receiving input voltage below the allowable operating range, but the redundant power supply is functioning normally.	
—	Off	Power supply is receiving input voltage below the allowable operating range and is not part of a redundant configuration.	

Related Documentation

- [Connecting AC Power Cords to the MX104 Router on page 123](#)
- [Connecting DC Power Cables to the MX104 Router on page 125](#)
- [MX104 AC Power Specifications on page 103](#)
- [MX104 DC Power Specifications on page 107](#)

PART 2

Site Planning, Preparation, and Specifications

- [Preparation Overview on page 77](#)
- [Transceiver and Cable Specifications on page 87](#)
- [Port Cable and Pinout Specifications on page 91](#)
- [Power Specifications on page 101](#)
- [AC Power Specifications on page 103](#)
- [DC Power Specifications on page 107](#)

CHAPTER 7

Preparation Overview

- [MX104 Router Physical Specifications on page 77](#)
- [MX104 Router Environmental Specifications on page 78](#)
- [Preparing the Site for the MX104 Router Overview on page 79](#)
- [Rack Requirements for MX104 Routers on page 80](#)
- [Cabinet Requirements for MX104 Routers on page 81](#)
- [Clearance Requirements for Airflow and Hardware Maintenance on MX104 Routers on page 83](#)
- [MX104 Router Grounding Specifications on page 84](#)

MX104 Router Physical Specifications

The MX104 router is a rigid sheet-metal structure that houses the hardware components. [Table 58 on page 77](#) summarizes the physical specifications of the MX104 router and its components.

Table 58: Physical Specifications of the MX104 Router Chassis

Component	Weight	Width	Height	Depth
Chassis	<ul style="list-style-type: none">• Chassis without power supplies, fan tray, or MICs: 19.56 lb (9 kg)• Chassis with power supplies, fan tray, and MICs: 32 lb (14.5 kg)	17.22 in. (43.7 cm) 19.2 in. (48.7 cm) with mounting brackets attached	6.09 in. (15.47 cm)	9.461 in. (24 cm)
Fan tray	1 lb (0.45 kg)	1.48 in. (3.8 cm)	5.39 in. (13.7 cm)	8.58 in. (21.8 cm)
MIC	Maximum up to 1.2 lb (0.54 kg)	6.25 in. (15.9 cm)	1.9 in. (3.28 cm)	7.38 in (18.74 cm)
AC power supply	2.5 lb (1.13 kg)	4 in. (10.16 cm)	1.75 in. (4.45 cm)	8.88 in. (22.55 cm)
DC power supply	3 lb (1.36 kg)	4 in. (10.16 cm)	1.75 in. (4.45 cm)	8.88 in. (22.55 cm)
Routing Engine	8.9 oz (0.3 kg)	4.59 in. (11.66 cm)	0.87 in. (2.2 cm)	7.25 in. (18.42 cm)

- Related Documentation**
- [MX104 Router Environmental Specifications on page 78](#)

MX104 Router Environmental Specifications

The router must be installed in a rack or cabinet housed in a dry, clean, well-ventilated, and temperature-controlled environment.

Ensure that these environmental guidelines are followed:

- The site must be as dust-free as possible, because dust can clog air intake vents and filters, reducing the efficiency of the router cooling system.
- Maintain ambient airflow for normal router operation. If the airflow is blocked or restricted, or if the intake air is too warm, the router might overheat, leading to the router temperature monitor shutting down the router to protect the hardware components.



NOTE: Depending on the ambient temperature, it may take up to 5 minutes for the router to heat up to the operating temperature.

[Table 59 on page 78](#) provides the required environmental conditions for normal router operation.

Table 59: MX104 Environmental Specifications

Description	Value
Altitude	No performance degradation to 6,000 ft (1,900 m)
Relative humidity	Normal operation ensured in relative humidity range of 5% to 85%, noncondensing
Temperature	<ul style="list-style-type: none"> • Harsh environment: -40°F (-40°C) to 149°F (65°C), de-rate 1°C for every 1000 ft. • Central office environment: 23°F (-5°C) to 131°F (55°C)
Commercial grade SFP/SFP+ temperature	<ul style="list-style-type: none"> • Harsh environment: -40°F (-40°C) to 122°F (50°C) • Central office environment: -40°F (-40°C) to 104°F (40°C)
Seismic	Designed to meet Telcordia Technologies Zone 4 earthquake requirements



NOTE: Install the router only in restricted areas, such as dedicated equipment rooms and equipment closets, in accordance with Articles 110-16, 110-17, and 110-18 of the National Electrical Code, ANSI/NFPA 70.



NOTE: The MX104 complies with GR3108 as Class-2 equipment.

- Related Documentation**
- [MX104 Router Physical Specifications on page 77](#)

Preparing the Site for the MX104 Router Overview

To prepare a site for router installation:

1. Verify that environmental factors such as temperature and humidity do not exceed router tolerances. See [“MX104 Router Environmental Specifications” on page 78](#).
2. Verify that the site and installation plan meets all safety guidelines and requirements. See [“General Safety Guidelines for Juniper Networks Devices” on page 227](#).
3. Measure distance between external power sources and the router installation site. See:
 - [MX104 AC Power Cord Specifications on page 104](#)
 - [MX104 DC Power Cable and Lug Specifications on page 108](#)
4. Locate sites for connection of system grounding. See [“MX104 Router Grounding Specifications” on page 84](#).
5. Calculate the power consumption and requirements. See:
 - [MX104 Power Consumption on page 101](#)
 - [MX104 AC Power Specifications on page 103](#)
 - [MX104 DC Power Specifications on page 107](#)
6. Verify that the plan for power installation meets all electrical safety guidelines. See:
 - [General Electrical Safety Guidelines and Electrical Codes for Juniper Networks Devices on page 255](#)
 - [MX104 AC Power Electrical Safety Guidelines and Warnings on page 256](#)
 - [MX104 DC Power Electrical Safety Guidelines on page 257](#)
7. Verify that your rack or cabinet meets the minimum requirements for the installation of the router. See:
 - [Rack Requirements for MX104 Routers on page 80](#)
 - [Cabinet Requirements for MX104 Routers on page 81](#)
8. Plan the location of the rack, including required space for airflow and maintenance. See [“Clearance Requirements for Airflow and Hardware Maintenance on MX104 Routers” on page 83](#).

9. Plan to secure the rack to the floor and building structure. See “[Rack Requirements for MX104 Routers](#)” on page 80.
10. Acquire cables and connectors:
 - Determine the number of cables needed based on your planned configuration.
 - Review the maximum distance allowed for each cable. Choose the length of cable based on the distance between the hardware components being connected.

See the *MX Series Interface Module Reference*.
11. Plan the cable routing and management. See “[Maintaining Cables That Connect to MX104 Network Ports](#)” on page 201.

Related Documentation

- [Installing and Connecting an MX104 Router Overview](#) on page 117

Rack Requirements for MX104 Routers

You can mount the router on two-post racks or four-post racks.

Rack requirements consist of:

- Rack type
- Mounting bracket hole spacing
- Rack size and strength
- Rack connection to the building structure

[Table 60 on page 80](#) provides the rack requirements and specifications for the router.

Table 60: Rack Requirements and Specifications for the Router

Rack Requirement	Guidelines
Rack type	<p>Use a two-post rack or a four-post rack. You can mount the router on any two-post or four-post rack that provides bracket holes or hole patterns spaced at 1 U (1.75 in., or 4.45 cm) increments and that meets the size and strength requirements to support the weight.</p> <p>A U is the standard rack unit defined in <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310-D) published by the Electronics Components Industry Association (http://www.ecianow.org/).</p> <p>The rack must meet the strength requirements to support the weight of the chassis.</p>
Mounting bracket hole spacing	<p>The holes in the mounting brackets are spaced at 1 U (1.75 in., or 4.45 cm) so that the router can be mounted in any rack that provides holes spaced at that distance.</p>

Table 60: Rack Requirements and Specifications for the Router (continued)

Rack Requirement	Guidelines
Rack size and strength	<ul style="list-style-type: none"> Ensure that the rack complies with this standard: <ul style="list-style-type: none"> A 19-in. (48.3 cm) rack as defined in <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310-D) published by the Electronics Industry Association (http://www.eia.org). Ensure that the rack rails are spaced widely enough to accommodate the external dimensions of the router chassis. The outer edges of the front-mounting brackets extend the width of the chassis to 19.2 in. (48.7 cm). The rack must be strong enough to support the weight of the router. Ensure that the spacing of rails and adjacent racks allows for the proper clearance around the router and rack.
Rack connection to building structure	<ul style="list-style-type: none"> Secure the rack to the building structure. If earthquakes are a possibility in your geographical area, secure the rack to the floor. Secure the rack to the ceiling brackets as well as to the wall or floor brackets for maximum stability.

One pair of mounting brackets for mounting the router on two posts of a rack is supplied with each router. For mounting the router on four posts of a rack or cabinet, you can order a four-post rack-mount kit separately.

Related Documentation

- [Cabinet Requirements for MX104 Routers on page 81](#)
- [Installing and Connecting an MX104 Router Overview on page 117](#)

Cabinet Requirements for MX104 Routers

You can mount the router in a cabinet that contains a 19-in. (48.3 cm) rack.

Cabinet requirements consist of:

- Cabinet size
- Clearance requirements
- Cabinet airflow requirements

[Table 61 on page 82](#) provides the cabinet requirements and specifications for the router.

Table 61: Cabinet Requirements and Specifications for the MX104 Router

Cabinet Requirement	Guidelines
Cabinet size	<ul style="list-style-type: none"> You can mount the router in a cabinet that contains a 19-in. (48.3 cm) rack as defined in <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310-D) published by the Electronic Components Industry Association (ECIA) (http://www.ecianow.org). <p>NOTE: The rack must meet the strength requirements to support the weight of the router.</p> <ul style="list-style-type: none"> The minimum cabinet size must be able to accommodate the maximum external dimensions of the router.
Cabinet clearance	<ul style="list-style-type: none"> The outer edges of the mounting brackets extend the width of the chassis to 19 in. (48.3 cm). The minimum total clearance inside the cabinet is 30 in. (76.2 cm) between the inside of the front door and the inside of the rear door.
Cabinet airflow requirements	<p>When you mount the router in a cabinet, ensure that ventilation through the cabinet is sufficient to prevent overheating.</p> <ul style="list-style-type: none"> Ensure an adequate cool air supply to dissipate the thermal output of the router or routers. Ensure that the cabinet allows the hot exhaust air from the chassis to exit the cabinet without recirculating into the router. An open cabinet (without a top or doors) that employs hot air exhaust extraction from the top allows the best airflow through the chassis. If the cabinet contains a top or doors, perforations in these elements assist with removing the hot air exhaust. Install the router in the cabinet in a way that maximizes the open space on the side of the chassis that has the hot air exhaust. This space maximizes the clearance for critical airflow. Route and dress all cables to minimize the blockage of airflow to and from the chassis. Ensure that the spacing of rails and adjacent cabinets allows for proper clearance around the router and cabinet. A cabinet larger than the minimum required provides better airflow and reduces the chance of overheating.

- Related Documentation**
- [Preparing the Site for the MX104 Router Overview on page 79](#)
 - [Rack Requirements for MX104 Routers on page 80](#)
 - [Clearance Requirements for Airflow and Hardware Maintenance on MX104 Routers on page 83](#)
 - [Installing and Connecting an MX104 Router Overview on page 117](#)

MX104 Router Grounding Specifications


- [Grounding Points Specifications on page 84](#)
- [Grounding Cable Lug Specifications on page 85](#)
- [Grounding Cable Specifications on page 86](#)

Grounding Points Specifications

To meet safety and electromagnetic interference (EMI) requirements and to ensure proper operation, the router must be adequately grounded before power is connected. To ground AC-powered and DC-powered routers, you must connect a grounding cable to earth ground and then attach it to the chassis grounding points using two washers and two screws (see [Figure 20 on page 84](#)).

Two threaded holes are provided on the front the router chassis for connecting the router to earth ground. The grounding points fit SAE 10-32 screws (American). The grounding points are spaced at 0.625-in. (15.86-mm) centers.

Figure 20: Grounding Points on the MX104 Routers

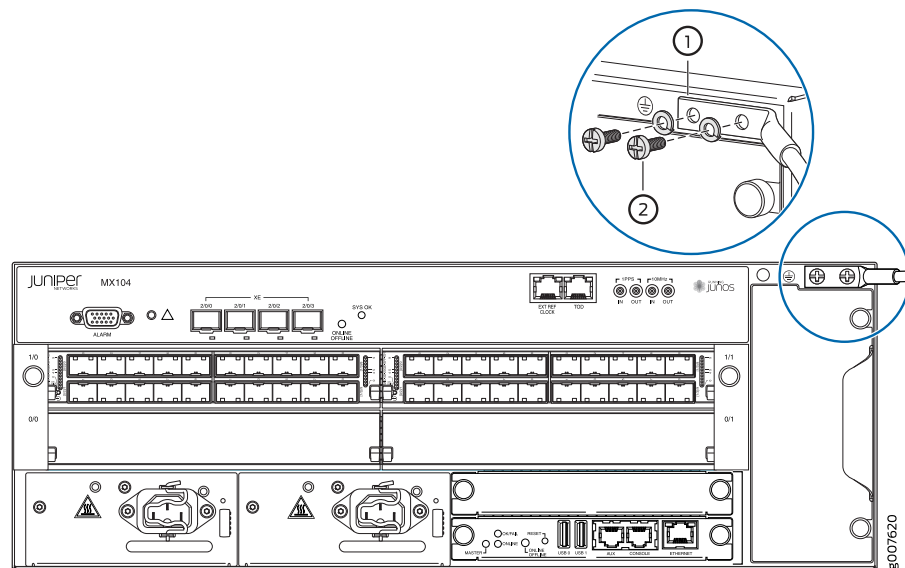

NOTE: All bare grounding connection points to the router must be cleaned and coated with an antioxidant solution before grounding the router.



NOTE: All surfaces on the router that are unplated must be brought to a bright finish and treated with an antioxidant solution before connecting the router.




NOTE: All nonconductive surfaces on the router must be removed from all threads and connection points to ensure electrical continuity.

Grounding Cable Lug Specifications

The grounding cable lug is used to secure the grounding cable to the grounding points on the chassis. The grounding cable lug attaches to the grounding cable and is secured to the router by two SAE 10-32 screws. We recommend using washers between the grounding lug and the screws. The grounding cable lug, screws, and washers are supplied with the router. See [Figure 21 on page 85](#) for AC systems and [Figure 22 on page 86](#) for 24 VDC systems.


Figure 21: Grounding Cable Lug for MX104 AC Systems

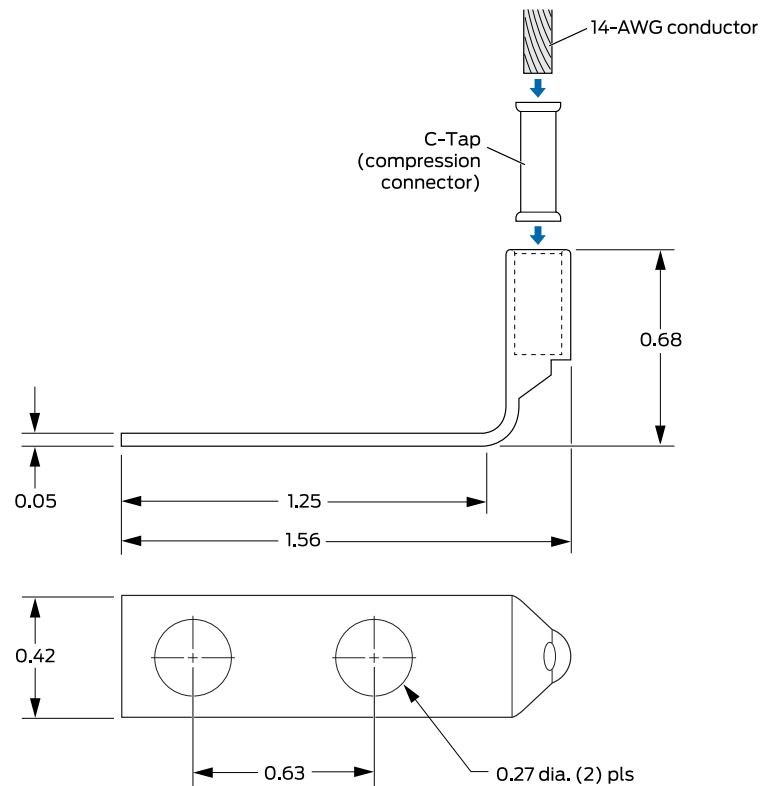

All measurements in inches.

8C009127

Figure 22: Grounding Cable Lug for MX104 24 VDC Systems

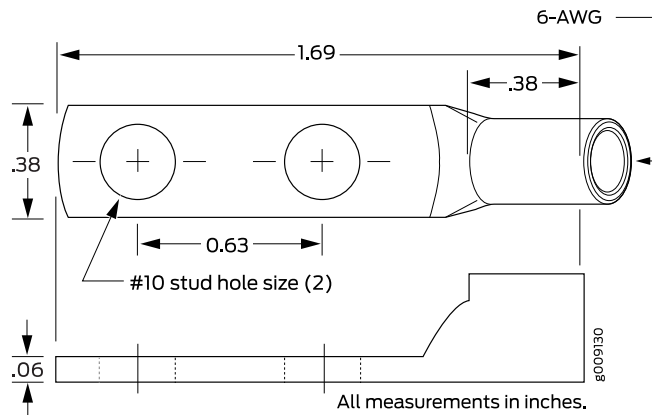

CAUTION: Before router installation begins, a licensed electrician must attach a cable lug to the grounding and power cables that you supply. A cable with an incorrectly attached lug can damage the router.



CAUTION: The maximum torque rating of the grounding screws on the router is 4.34 lb-in. (0.49 Nm). The grounding screws may be damaged if excessive torque is applied. Use only a torque-controlled driver to tighten screws. Use an appropriately sized driver, with a maximum torque capacity of 5 lb-in. or less. Ensure that the driver is undamaged and properly calibrated and that you have been trained in its use. You may wish to use a driver that is designed to prevent overtorque when the preset torque level is achieved.

Grounding Cable Specifications

You must provide one grounding cable that meets the following specifications:

- For AC systems, use 14-AWG (2.08 mm²) 90° C wire. See, [Figure 21 on page 85](#)
- For 24 VDC systems, use 6-AWG (13.3 mm²) 60° C wire, or as required by the local code. See [Figure 22 on page 86](#)

Related Documentation

- [Connecting the MX104 Router to Earth Ground on page 121](#)
- [Preventing Electrostatic Discharge Damage to an MX104 Router on page 230](#)

CHAPTER 8

Transceiver and Cable Specifications

- [Calculating Power Budget and Power Margin for Fiber-Optic Cables on page 87](#)
- [Understanding Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion on page 89](#)

Calculating Power Budget and Power Margin for Fiber-Optic Cables

Use the information in this topic and the specifications for your optical interface to calculate the power budget and power margin for fiber-optic cables.



TIP: You can use the [Hardware Compatibility Tool](#) to find information about the pluggable transceivers supported on your Juniper Networks device.

To calculate the power budget and power margin, perform the following tasks:

1. [Calculating Power Budget for Fiber-Optic Cable on page 87](#)
2. [Calculating Power Margin for Fiber-Optic Cable on page 88](#)

Calculating Power Budget for Fiber-Optic Cable

To ensure that fiber-optic connections have sufficient power for correct operation, you need to calculate the link's power budget, which is the maximum amount of power it can transmit. When you calculate the power budget, you use a worst-case analysis to provide a margin of error, even though all the parts of an actual system do not operate at the worst-case levels. To calculate the worst-case estimate of power budget (P_B), you assume minimum transmitter power (P_T) and minimum receiver sensitivity (P_R):

$$P_B = P_T - P_R$$

The following hypothetical power budget equation uses values measured in decibels (dB) and decibels referred to one milliwatt (dBm):

$$P_B = P_T - P_R$$

$$P_B = -15 \text{ dBm} - (-28 \text{ dBm})$$

$$P_B = 13 \text{ dB}$$

Calculating Power Margin for Fiber-Optic Cable

After calculating a link's power budget, you can calculate the power margin (P_M), which represents the amount of power available after subtracting attenuation or link loss (LL) from the power budget (P_B). A worst-case estimate of P_M assumes maximum LL:

$$P_M = P_B - LL$$

P_M greater than zero indicates that the power budget is sufficient to operate the receiver.

Factors that can cause link loss include higher-order mode losses, modal and chromatic dispersion, connectors, splices, and fiber attenuation. [Table 62 on page 88](#) lists an estimated amount of loss for the factors used in the following sample calculations. For information about the actual amount of signal loss caused by equipment and other factors, refer to vendor documentation.

Table 62: Estimated Values for Factors Causing Link Loss

Link-Loss Factor	Estimated Link-Loss Value
Higher-order mode losses	Single-mode—None Multimode—0.5 dB
Modal and chromatic dispersion	Single-mode—None Multimode—None, if product of bandwidth and distance is less than 500 MHz-km
Connector	0.5 dB
Splice	0.5 dB
Fiber attenuation	Single-mode—0.5 dB/km Multimode—1 dB/km

The following sample calculation for a 2-km-long multimode link with a power budget (P_B) of 13 dB uses the estimated values from [Table 62 on page 88](#) to calculate link loss (LL) as the sum of fiber attenuation (2 km @ 1 dB/km, or 2 dB) and loss for five connectors (0.5 dB per connector, or 2.5 dB) and two splices (0.5 dB per splice, or 1 dB) as well as higher-order mode losses (0.5 dB). The power margin (P_M) is calculated as follows:

$$P_M = P_B - LL$$

$$P_M = 13 \text{ dB} - 2 \text{ km (1 dB/km)} - 5 (0.5 \text{ dB}) - 2 (0.5 \text{ dB}) - 0.5 \text{ dB}$$

$$P_M = 13 \text{ dB} - 2 \text{ dB} - 2.5 \text{ dB} - 1 \text{ dB} - 0.5 \text{ dB}$$

$$P_M = 7 \text{ dB}$$

The following sample calculation for an 8-km-long single-mode link with a power budget (P_B) of 13 dB uses the estimated values from [Table 62 on page 88](#) to calculate link loss (LL) as the sum of fiber attenuation (8 km @ 0.5 dB/km, or 4 dB) and loss for seven connectors (0.5 dB per connector, or 3.5 dB). The power margin (P_M) is calculated as follows:

$$P_M = P_B - LL$$

$$P_M = 13 \text{ dB} - 8 \text{ km} (0.5 \text{ dB/km}) - 7(0.5 \text{ dB})$$

$$P_M = 13 \text{ dB} - 4 \text{ dB} - 3.5 \text{ dB}$$

$$P_M = 5.5 \text{ dB}$$

In both examples, the calculated power margin is greater than zero, indicating that the link has sufficient power for transmission and does not exceed the maximum receiver input power.

Understanding Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion

This topic describes signal loss, attenuation, and dispersion in fiber-optic cable.

- [Signal Loss in Multimode and Single-Mode Fiber-Optic Cable on page 89](#)
- [Attenuation and Dispersion in Fiber-Optic Cable on page 89](#)

Signal Loss in Multimode and Single-Mode Fiber-Optic Cable

Multimode fiber is large enough in diameter to allow rays of light to reflect internally (bounce off the walls of the fiber). Interfaces with multimode optics typically use LEDs as light sources. However, LEDs are not coherent sources. They spray varying wavelengths of light into the multimode fiber, which reflects the light at different angles. Light rays travel in jagged lines through a multimode fiber, causing signal dispersion. When light traveling in the fiber core radiates into the fiber cladding, higher-order mode loss results. Together these factors limit the transmission distance of multimode fiber compared with single-mode fiber.

Single-mode fiber is so small in diameter that rays of light can reflect internally through one layer only. Interfaces with single-mode optics use lasers as light sources. Lasers generate a single wavelength of light, which travels in a straight line through the single-mode fiber. Compared with multimode fiber, single-mode fiber has higher bandwidth and can carry signals for longer distances.

Exceeding the maximum transmission distances can result in significant signal loss, which causes unreliable transmission.

Attenuation and Dispersion in Fiber-Optic Cable

Correct functioning of an optical data link depends on modulated light reaching the receiver with enough power to be demodulated correctly. *Attenuation* is the reduction in power of the light signal as it is transmitted. Attenuation is caused by passive media components, such as cables, cable splices, and connectors. Although attenuation is significantly lower for optical fiber than for other media, it still occurs in both multimode

and single-mode transmission. An efficient optical data link must have enough light available to overcome attenuation.

Dispersion is the spreading of the signal over time. The following two types of dispersion can affect an optical data link:

- Chromatic dispersion—Spreading of the signal over time resulting from the different speeds of light rays.
- Modal dispersion—Spreading of the signal over time resulting from the different propagation modes in the fiber.

For multimode transmission, modal dispersion, rather than chromatic dispersion or attenuation, usually limits the maximum bit rate and link length. For single-mode transmission, modal dispersion is not a factor. However, at higher bit rates and over longer distances, chromatic dispersion rather than modal dispersion limits maximum link length.

An efficient optical data link must have enough light to exceed the minimum power that the receiver requires to operate within its specifications. In addition, the total dispersion must be less than the limits specified for the type of link in Telcordia Technologies document GR-253-CORE (Section 4.3) and International Telecommunications Union (ITU) document G.957.

When chromatic dispersion is at the maximum allowed, its effect can be considered as a power penalty in the power budget. The optical power budget must allow for the sum of component attenuation, power penalties (including those from dispersion), and a safety margin for unexpected losses.

Port Cable and Pinout Specifications

- [MX104 Clocking and Timing Ports Overview on page 91](#)
- [MX104 Routing Engine Ethernet Port Specifications on page 92](#)
- [MX104 Routing Engine Auxiliary and Console Ports Specifications on page 93](#)
- [MX104 Routing Engine USB Port Specifications on page 94](#)
- [MX104 Alarm Contact Port Specifications on page 95](#)
- [MX104 BITS Port Specifications on page 97](#)
- [MX104 1-PPS and 10-MHz GPS Port Specifications on page 98](#)
- [MX104 Time of Day Port Specifications on page 98](#)

MX104 Clocking and Timing Ports Overview

Four Subminiature B (SMB) connectors (for 10-MHz and 1-PPS), one RJ-48 port (for BITS), and one RS-232 port (for TOD) on the front panel of the router connect to external clock signal sources. The clocking ports provide the synchronized output clocks from any one of the reference clock inputs based on the clock's priority.

The reference clock inputs can be Ethernet-recovered clocks, T1 or E1 line clocks, IEEE 1588v2-recovered clocks, BITS timing, 10-MHz timing, and 1-PPS timing. The T1 or E1 line clock also supports loop timing. These clocking ports distribute a synchronized clock signal throughout the chassis by locking onto the selected clock source. In the absence of these configured ports, the local oscillator present in the system provides the chassis synchronization.

Clock sources within the MX104 router include:

- External clock timing port
- 10-MHz timing connectors (one input and one output)
- 1-pulse-per-second (PPS) connectors (one input and one output)
- Time-of-day (TOD) RS-232 port
- Synchronous Ethernet support on SFP ports as timing input or output
- Packet (IEEE 1588-2008) v2 timing includes:
 - Timing input when configured as Ordinary Clock (OC) or Boundary Clock (BC)

- Timing output when configured as BC

Related Documentation

- [Connecting the MX104 Router to External Clocking and Timing Devices on page 131](#)
- [MX104 BITS Port Specifications on page 97](#)
- [MX104 1-PPS and 10-MHz GPS Port Specifications on page 98](#)
- [MX104 Time of Day Port Specifications on page 98](#)

MX104 Routing Engine Ethernet Port Specifications

- [Cable Specifications on page 92](#)
- [Pinouts on page 92](#)

Cable Specifications

Table 63 on page 92 lists the specifications for the cables that connect to the **ETHERNET** port.

Table 63: MX104 Routing Engine Ethernet Port Cable Specifications

Specification	Value
Cable specification	Category 5 cable or equivalent suitable for 1000Base-T operation
Cable/wire supplied	One 15-ft (4.57-m) length with RJ-45/RJ-45 connectors
Maximum length	328 ft (100 m)
Router receptacle	RJ-45 autosensing

Pinouts

The port on the front panel labeled **ETHERNET** is an autosensing 10/100/1000-Mbps Ethernet RJ-45 receptacle that accepts an Ethernet cable for connecting the Routing Engine to a management LAN (or other device that supports out-of-band management). Table 64 on page 92 describes the RJ-45 connector pinout.

Table 64: Ethernet Port Pinouts

Pin	Signal	Description
1	TX+_D1	Transmit data+
2	TX-_D1	Transmit data-
3	RX+_D2	Receive data+
4	BI+_D3	Bidirectional+

Table 64: Ethernet Port Pinouts (continued)

Pin	Signal	Description
5	BI-_D3	Bidirectional-
6	RX-_D2	Receive data-
7	BI+_D4	Bidirectional+
8	BI-_D4	Bidirectional-

Related Documentation

- [MX104 Routing Engine Overview on page 21](#)
- [Maintaining the MX104 Routing Engines on page 202](#)

MX104 Routing Engine Auxiliary and Console Ports Specifications

The Routing Engine contains two ports labeled **AUX** and **CONSOLE**.



NOTE: The AUX port is not supported.

The ports are asynchronous serial interfaces that accept an RJ-45 connector. The ports connect the Routing Engine to an auxiliary or console management device.

[Table 66 on page 94](#) describes the RJ-45 connector pinout.

- [Cable Specifications on page 93](#)
- [Pinouts on page 93](#)

Cable Specifications

[Table 65 on page 93](#) lists the specifications for the cables that connect to console port.

Table 65: MX104 Routing Engine Console Port Cable Specifications

Specification	Value
Cable specification	RS-232 (EIA-232) serial cable
Cable/wire supplied	One 6-ft (1.83-m) length with RJ-45/DB-9 connectors
Maximum length	6 ft (1.83 m)
Router receptacle	RJ-45 female

Pinouts

[Table 66 on page 94](#) describes the RJ-45 connector pinout.

Table 66: Console Port Pinouts

Pin	Signal	Description
1	RTS	Request to Send
2	DTR	Data Terminal Ready
3	TXD	Transmit Data
4	Ground	Signal Ground
5	Ground	Signal Ground
6	RXD	Receive Data
7	DSR/DCD	Data Set Ready
8	CTS	Clear to Send

Related Documentation

- [MX104 Routing Engine Overview on page 21](#)
- [Maintaining the MX104 Routing Engines on page 202](#)

MX104 Routing Engine USB Port Specifications

The following Juniper Networks USB Flash drives have been tested and are officially supported for the USB port on all MX Series routers:

- RE-USB-1G-S
- RE-USB-2G-S
- RE-USB-4G-S



CAUTION: Any USB memory product not listed as supported for MX Series routers has not been tested by Juniper Networks. The use of any unsupported USB memory product could expose your MX Series router to unpredictable behavior. Juniper Networks Technical Assistance Center (JTAC) can provide only limited support for issues related to unsupported hardware. We strongly recommend that you use only supported USB Flash drives.

All USB Flash drives used on MX Series routers must have the following features:

- USB 2.0 or later.
- Formatted with a FAT or MS-DOS file system.

- Related Documentation**
- [MX104 Routing Engine Overview on page 21](#)
 - [Initially Configuring the MX104 Router on page 137](#)

MX104 Alarm Contact Port Specifications

Cable Specifications

Table 67 on page 95 lists the specifications for the cables that connect to the **ALARM** port.

Table 67: MX104 Alarm Contact Port Cable Specifications

Specification	Value
Cable	DE-15 alarm cable
Wire gauge	Between 20 AWG (0.52 mm ²) and 14 AWG (2.08 mm ²)
Router receptacle	15-pin D-type

Port Pinouts

You can independently configure alarm input ports (0 to 3) to operate in Normally Open or Normally Closed mode, and to trigger a red alarm condition or a yellow alarm condition, or to ignore alarm conditions.

You can independently configure alarm output ports (0 and 1) to relay alarm information when the system condition goes to a red or yellow alarm condition and when the alarm output port is configured to trigger based on alarm input condition. Alarm output ports (2 and 3) are used to indicate major and minor system alarms and are normally in open mode.

Table 68 on page 95 shows the alarm contact connector pinouts.

Table 68: Alarm Contact Connector Pinouts

Pin Number	Signal Definition	Direction	CLI Port Mapping	Function
1	ALARM_IN0_NO/NC	Input	Input Alarm Port 0	External alarm input 0 (if voltage on this pin is between 24V to 72V with reference to Pin 6, alarm input 0 is in closed condition)
2	ALARM_IN1_REF	Input	Input Alarm Port 1	External alarm input 1 (Reference for Pin 7)
3	ALARM_IN2_NO/NC	Input	Input Alarm Port 2	External alarm input 2 (if voltage on this pin is between 24V to 72V with reference to Pin 8, alarm input 2 is in closed condition)

Table 68: Alarm Contact Connector Pinouts (continued)

Pin Number	Signal Definition	Direction	CLI Port Mapping	Function
4	ALARM_IN3_NO/NC	Input	Input Alarm Port 3	External alarm input 3 (if voltage on this pin is between 24V to 72V with reference to Pin 8, alarm input 3 is in closed condition)
5	ALARM_OUT3_REF	Output	Reserved for Minor alarm	External alarm output 3 (this pin is connected to Pin 10 in closed condition)
6	ALARM_IN0_REF	Input	Input Alarm Port 0	External alarm input 0 (Reference for Pin 1)
7	ALARM_IN1_NO/NC	Input	Input Alarm Port 1	External alarm input 1 (if voltage on this pin is between 24V to 72V with reference to Pin 2, alarm input 1 is closed)
8	ALARM_IN2_IN3_REF	Input	Input Alarm Port 2 and Input Alarm Port 3	Common contact for external alarm input 2 and 3 (Reference for Pin 3 and Pin 4)
9	ALARM_OUT2_REF	Output	Reserved for Major alarm	External alarm output 2 (this pin is connected to Pin 15 in closed condition)
10	ALARM_OUT3_NO/NC	Output	Reserved for Minor alarm	External alarm output 3 (this pin is connected to Pin 5 in closed condition)
11	ALARM_OUT0_NO/NC	Output	Output Alarm Port 0	External alarm output 0 (this pin is connected to Pin 12 in closed condition)
12	ALARM_OUT0_REF	Output	Output Alarm Port 0	External alarm output 0 (this pin is connected to Pin 11 in closed condition)
13	ALARM_OUT1_NO/NC	Output	Output Alarm Port 1	External alarm output 1 (this pin is connected to Pin 14 in closed condition)
14	ALARM_OUT1_REF	Output	Output Alarm Port 1	External alarm output 1 (this pin is connected to Pin 13 in closed condition)
15	ALARM_OUT2_NO/NC	Output	Reserved for Major alarm	External alarm output 2 (this pin is connected to Pin 9 in closed condition)

Related Documentation

- [MX104 3D Universal Edge Router Overview on page 3](#)
- [MX104 Chassis Overview on page 4](#)
- [MX104 LEDs Overview on page 11](#)
- [MX104 Alarm Contact Port Overview on page 9](#)
- [Connecting the MX104 Router to an External Alarm-Reporting Device on page 132](#)

MX104 BITS Port Specifications

The external Building-Integrated Timing Supply (BITS) clock interface port labeled **EXT REF CLK IN** on the front panel of the router allows you to connect external clock signal sources.

Two LEDs indicate link status on the port and function in the same way as the T1/E1 ports. The clocking information is extracted from the input, but the data is discarded.

- [Cable Specifications on page 97](#)
- [Port Pinouts on page 97](#)

Cable Specifications

[Table 69 on page 97](#) lists the specifications for the cables that connect to the **EXT REF CLK IN** port.



NOTE: The plastic connector at the end of the RJ-48 cable is physically identical to an RJ-45 connector (see [Figure 23 on page 97](#)). You must ensure that the cable pinouts match the pinouts described in [Table 70 on page 97](#).

Figure 23: RJ-48 Connector for MX104 BITS Ports

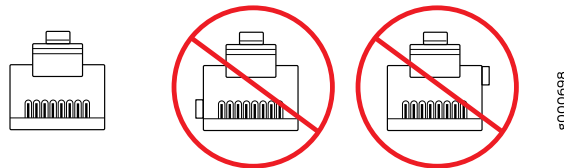


Table 69: MX104 BITS Port Cable Specifications

Specification	Value
Cable	RJ-48 shielded cable
Router receptacle	Autosensing RJ-48 connector

Port Pinouts

[Table 70 on page 97](#) provides the pinout information for the RJ-48 connector for the external clocking input port.

Table 70: BITS Port Pinouts

Pin	Description	Direction
1	EXT_CLKA_RRING_LINE	Input
2	EXT_CLKA_RTIP_LINE	Input

Table 70: BITS Port Pinouts (continued)

Pin	Description	Direction
3	Reserved	–
4	EXT_CLKA_TRING_LINE	Output
5	EXT_CLKA_TTIP_LINE	Output
6	Reserved	–
7	Reserved	–
8	Reserved	–

Related Documentation

- [Connecting the MX104 Router to External Clocking and Timing Devices on page 131](#)

MX104 1-PPS and 10-MHz GPS Port Specifications

The router contains four ports that support 1-pulse-per-second (PPS) and 10-MHz GPS signals. These signals are internally isolated and have surge protection.

[Table 71 on page 98](#) lists the specifications for the cables that connect to the **1PPS** and **10MHZ** input and output ports.

Table 71: 1-PPS and 10-MHz GPS Port Specifications

Specification	Value
Cable specification	Coaxial
Router receptacle	Four SMB input and output connectors
Connector specification	Molex 50-ohm SMB (or equivalent)
Signal support	10-MHz GPS and 1-pulse-per-second (PPS)

MX104 Time of Day Port Specifications

A time-of-day (ToD) port on the front panel of the router allows you to connect external timing signal sources. The external timing input port is labeled **TOD**.

- [Cable Specifications on page 98](#)
- [Port Pinouts on page 99](#)

Cable Specifications

[Table 72 on page 99](#) lists the specifications for the cable that connects to the **TOD** port.



NOTE: The output signals are not supported

Table 72: TOD Cable Specifications

Specification	Value
Cable specification	RS-232 (EIA-232) serial cable
Cable/wire	One 6-ft (1.83-m) length with RJ-45 connectors
Maximum length	6 ft (1.83 m)
Connector	RJ-45 female

Port Pinouts

Table 73 on page 99 provides the pinout information for the RS-232 connector for the ToD port.

Table 73: ToD Port Connector Pinouts

Pin	Description	Direction
1	Reserved	–
2	Reserved	–
3	Transmit Data	Output
4	Signal Ground	–
5	Signal Ground	–
6	Receive Data	Input
7	Reserved	–
8	Reserved	–

Related Documentation

- [MX104 3D Universal Edge Router Overview on page 3](#)
- [MX104 Chassis Overview on page 4](#)
- [MX104 LEDs Overview on page 11](#)
- [MX104 Clocking and Timing Ports Overview on page 17](#)

Power Specifications

- [MX104 Power Consumption on page 101](#)

MX104 Power Consumption

The MX104 router supports installation of up to two AC or DC power supplies in slots labeled on the front of the router.

[Table 74 on page 101](#) lists the power consumed by the MX104 router.



NOTE: The power consumption values are measured from the power source and are based on systems that contain redundant power supplies, redundant Routing Engines, a fan tray, and are fully loaded with MICs.

Table 74: Power Consumed by MX104 Routers

Description	Value
Power consumed by the AC router (typical)	600 W
Power consumed by the DC router (typical)	625 W
Power consumed by the AC router without MICs (typical)	325 W
Power consumed by the DC router without MICs (typical)	350 W

Related Documentation

- [Connecting DC Power Cables to the MX104 Router on page 125](#)
- [MX104 DC Power Electrical Safety Guidelines on page 257](#)
- [MX104 DC Power Specifications on page 107](#)

AC Power Specifications

- [MX104 AC Power Specifications on page 103](#)
- [MX104 AC Power Cord Specifications on page 104](#)

MX104 AC Power Specifications

Table 75 on page 103 lists the AC power electrical specifications.

Table 75: AC Power Electrical Specifications

Item	Specification
Power Supplies	
AC input voltage	Operating range: 100 to 240 VAC
AC input line frequency	50 to 60 Hz (nominal)
AC input current rating	10 A maximum per inlet at 100 VAC
Efficiency	91% @ 800 W@ 230 V
Maximum AC power supply output power	800 W
System	
Maximum output power	800 W



NOTE: We recommend that you use a facility circuit breaker rated for 10 A maximum per inlet at 100 VAC to 240 VAC. Doing so enables you to operate the router in any configuration without upgrading the power infrastructure, and allows the router to function at full capacity using multiple power supplies.

Related Documentation

- [Connecting AC Power Cords to the MX104 Router on page 123](#)
- [Replacing an MX104 AC Power Supply on page 180](#)

- [MX104 AC Power Electrical Safety Guidelines and Warnings on page 256](#)
- [MX104 AC Power Cord Specifications on page 104](#)

MX104 AC Power Cord Specifications

Each AC power supply has a single AC appliance inlet that requires a dedicated AC power feed. Most sites distribute power through a main conduit that leads to frame-mounted power distribution panels, one of which can be located at the top of the rack that houses the router. An AC power cord connects each power supply to the power distribution panel.

You can order detachable AC power cords, each approximately 8 ft (2.5 m) long that supply AC power to the router. The C15 appliance coupler at the female end of the cord, as described by International Electrotechnical Commission (IEC) standard 60320, inserts into the AC appliance inlet coupler. The plug at the male end of the power cord fits into the power source receptacle that is standard for your geographic location.

[Table 76 on page 104](#) provides specifications on the AC power cord provided for each country or region.

Table 76: AC Power Cord Specifications

Country	Model Number	Electrical Specification	Plug Type	Design Standard
Argentina	CBL-PWR-C15M-HITEMP-AR	250 VAC, 10 A, 50 Hz	RA/3	IRAM 2073
Australia	CBL-PWR-C15M-HITEMP-AU	250 VAC, 10 A, 50 Hz	SAA/3	AS/NZS 3112-2000
Brazil	CBL-PWR-C15M-HITEMP-BR	250 VAC, 10 A, 50 Hz	BR/3	NBR 14136
China	CBL-PWR-C15M-HITEMP-CH	250 VAC, 10 A, 50 Hz	PRC/3	GB2099, GB1002
Europe (except Italy, Switzerland, and United Kingdom)	CBL-PWR-C15M-HITEMP-EU	250 VAC, 10 A, 50 Hz	VIIG	CEE (7) VII
India	CBL-PWR-C15M-HITEMP-IN	250 VAC, 10 A, 50 Hz	ZA/3	SABS 164/1:1992
Israel	CBL-PWR-C15M-HITEMP-IL	250 VAC, 10 A, 50 Hz	IL/3G	SI 32
Italy	CBL-PWR-C15M-HITEMP-IT	250 VAC, 10 A, 50 Hz	I/3G	CEI 23-16
Japan	CBL-PWR-C15M-HITEMP-JP	125 VAC, 15 A, 50 Hz or 60 Hz	498GJ	JIS 8303
Korea	CBL-PWR-C15M-HITEMP-KR	250 VAC, 10 A, 50 Hz	VIIG	CEE (7) VII
South Africa	CBL-PWR-C15M-HITEMP-SA	250 VAC, 10 A, 50 Hz	ZA/3	SABS 164/1:1992
Switzerland	CBL-PWR-C15M-HITEMP-SZ	250 VAC, 10 A, 50 Hz	12G	SEV 1011 / 6534-2

Table 76: AC Power Cord Specifications (continued)

Country	Model Number	Electrical Specification	Plug Type	Design Standard
North America	CBL-PWR-C15M-HITEMP-US	125 VAC, 13 A, 60 Hz	498G	NEMA 5-15
United Kingdom	CBL-PWR-C15M-HITEMP-UK	250 VAC, 10 A, 50 Hz	BS89/13	BS 1363/A



WARNING: The attached power cable is only for this product. Do not use the cable for another product. Translation in Japanese follows:

注意

附属の電源コードセットはこの製品専用です。
他の電気機器には使用しないでください。

g017263



NOTE: In North America, AC power cords must not exceed approximately 14.75 ft (4.5 m) in length, to comply with National Electrical Code (NEC) Sections 400-8 (NFPA 75, 5-2.2) and 210-52, and Canadian Electrical Code (CEC) Section 4-010(3). You can order AC power cords that are in compliance.



CAUTION: Power cords and cables must not block access to device components or drape where people could trip on them.



NOTE: Use power cords rated up to 149° F (65° C) for ambient temperatures up to 140° F (60° C).

Related Documentation

- [Connecting AC Power Cords to the MX104 Router on page 123](#)
- [Replacing an MX104 AC Power Supply on page 180](#)
- [MX104 AC Power Electrical Safety Guidelines and Warnings on page 256](#)
- [MX104 AC Power Specifications on page 103](#)

DC Power Specifications

- [MX104 DC Power Specifications on page 107](#)
- [MX104 DC Power Cable and Lug Specifications on page 108](#)

MX104 DC Power Specifications

The MX104 power supply contains DC power terminals to connect power to the router and supports the specifications shown in [Table 77 on page 107](#).

Table 77: DC Power Electrical Specifications

Item	Specification
Power Supplies	
DC input voltages	<ul style="list-style-type: none"> • 18 to 30 VDC; nominal 24 VDC • -39 to -56 VDC; nominal 48 VDC • -39 to -72 VDC; nominal 60 VDC
DC input currents	<ul style="list-style-type: none"> • 40 A @ 24 VDC • 20 A @ -48 VDC • 15 A @ -60 VDC
Maximum power supply output	800 W
System	
Maximum output power	800 W

Each DC power supply has a single DC input (24, -48, or -60 VDC and return) that requires a dedicated circuit breaker. We recommend that you use a facility circuit breaker rated for 40 A @ 24 VDC. Doing so enables you to operate the router in any configuration without upgrading the power infrastructure, and allows the router to function at full capacity using multiple power supplies.

Related Documentation

- [Connecting DC Power Cables to the MX104 Router on page 125](#)
- [Replacing an MX104 DC Power Supply on page 187](#)
- [MX104 DC Power Electrical Safety Guidelines on page 257](#)

- [DC Power Electrical Safety Warnings for Juniper Networks Devices on page 258](#)
- [MX104 DC Power Cable and Lug Specifications on page 108](#)


MX104 DC Power Cable and Lug Specifications

- [DC Power Cable Lug Specifications on page 108](#)
- [DC Power Cable Specifications on page 108](#)

DC Power Cable Lug Specifications

Use cable lugs with the specifications shown in [Figure 24 on page 108](#) to attach each DC power cable to the DC power supply.

Figure 24: DC Power Cable Lug

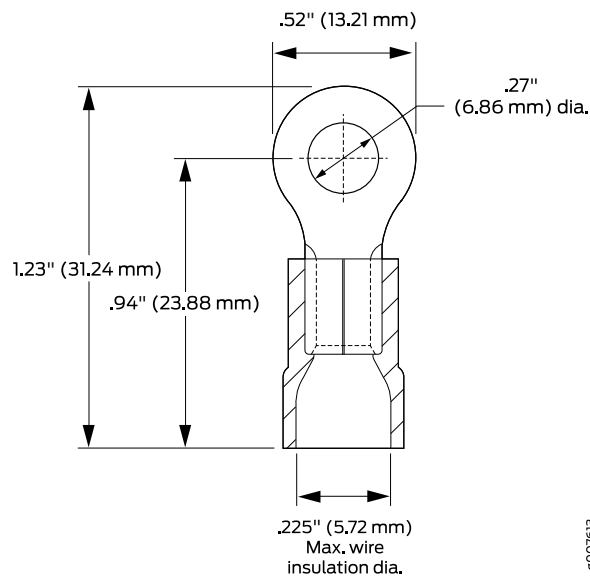

CAUTION: Before router installation begins, a licensed electrician must attach a cable lug to the grounding and power cables that you supply. A cable with an incorrectly attached lug can damage the router.

DC Power Cable Specifications

You must supply two DC power cables for each DC power supply that meet the following specifications: 14-AWG (2.08 mm²), minimum 90° C wire, or as required by the local code.

Related Documentation

- [Connecting DC Power Cables to the MX104 Router on page 125](#)
- [Replacing an MX104 DC Power Supply on page 187](#)
- [MX104 DC Power Electrical Safety Guidelines on page 257](#)

- [DC Power Electrical Safety Warnings for Juniper Networks Devices on page 258](#)
- [MX104 DC Power Specifications on page 107](#)

PART 3

Initial Installation and Configuration

- [Unpacking the MX104 Router on page 113](#)
- [Installing the MX104 Router on page 117](#)
- [Connecting the MX104 Router to Power on page 121](#)
- [Connecting the MX104 Router to the Network on page 129](#)
- [Initially Configuring the MX104 Router on page 137](#)

Unpacking the MX104 Router

- [Unpacking an MX104 Router on page 113](#)
- [Parts Inventory \(Packing List\) for an MX104 Router on page 114](#)

Unpacking an MX104 Router

The MX104 routers are shipped in a cardboard carton, secured with foam packing material. The carton also contains an accessory box.



CAUTION: MX104 routers are maximally protected inside the shipping carton. Do not unpack the routers until you are ready to begin installation.

To unpack the router and prepare for installation, you need the following tools:

- Blank panels to cover any slots not occupied by a component

To unpack the router:

1. Move the shipping carton to a staging area as close to the installation site as possible, but where you have enough room to remove the system components.
2. Position the carton so that the arrows are pointing up.
3. Open the top flaps on the shipping carton.
4. Remove the accessory box and verify the contents in it against the parts inventory on the label attached to the carton.
5. Pull out the packing material holding the router in place.

6. Verify the chassis components received against the packing list included with the router. An inventory of parts provided with the router is provided in [“Parts Inventory \(Packing List\) for an MX104 Router”](#) on page 114.
7. Save the shipping carton and packing materials in case you need to move or ship the router later.

- Related Documentation**
- [MX104 3D Universal Edge Router Overview on page 3](#)
 - [Preparing the Site for the MX104 Router Overview on page 79](#)

Parts Inventory (Packing List) for an MX104 Router

The MX104 routers are shipped in a cardboard carton, secured with foam packing material. The carton also contains an accessory box.

The router shipment includes a packing list. Check the parts you receive in the router shipping carton against the items on the packing list. The packing list specifies the part number and description of each part in your order. The parts shipped depend on the configuration you order.

If any part on the packing list is missing, contact your customer service representative or contact Juniper Customer Care from within the U.S. or Canada by telephone at 1-888-314-5822. For international-dial or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/>.



NOTE: If you ordered a license for the built-in 10-Gigabit Ethernet ports on the MX104 and you do not receive a paper license with your shipment, open a case with customer support. See [“Contacting Customer Support”](#) on page 213 for more information.

[Table 78 on page 114](#) lists the parts and their quantities in the packing list. [Table 79 on page 115](#) lists the contents provided in the accessory box.

Table 78: Parts List for a Fully Configured MX104 Router

Component	Quantity
Chassis with mounting brackets, attached	1
MICs	Up to 4
Routing Engines	1 or 2
Power supplies (AC or DC)	1 or 2
Fan tray	1

Table 78: Parts List for a Fully Configured MX104 Router (continued)

Component	Quantity
Air filter	1
Quick start installation instructions	1
Blank panels for slots without components installed	One blank panel for each slot not occupied by a component

Table 79: Accessory Box Parts List for an MX104 Router

Component	Quantity
USB media kit	1
Phillips screws, 10-32 x 1/2, with square cone sems washers	2
Phillips screws, M3 x 10 mm, with square cone sems washers	2
Ground terminal lug, two hole, sized for #10 screws, 14 AWG	1
Philips screws, 6-32 x 1/4 in.	4
DC power ring terminal 6-14 AWG	6
RJ-45 cable with RJ-45 Jack to female DB-9	1
ESD wrist strap with cable	1
Read Me	1
Affidavit for T1 connection	1
Documentation card	1
Quick Start installation instructions	1
Juniper Networks Product Warranty	1
End User License Agreement	1



NOTE: AC power cords are not included in the accessory box. You must purchase them separately. For information on AC power cord, see “MX104 AC Power Cord Specifications” on page 104.



NOTE: You must provide additional mounting screws if needed that are appropriate for your rack or cabinet to mount the chassis on a rack or a cabinet.

**Related
Documentation**

- [MX104 3D Universal Edge Router Overview on page 3](#)
- [Unpacking an MX104 Router on page 113](#)

Installing the MX104 Router

- [Installing and Connecting an MX104 Router Overview on page 117](#)
- [Installing the MX104 Router in the Rack on page 118](#)

Installing and Connecting an MX104 Router Overview

To install and connect an MX104 router:

1. Review all safety guidelines and warnings for the router. See:
 - [General Safety Warnings for Juniper Networks Devices on page 228](#)
 - [General Safety Guidelines for Juniper Networks Devices on page 227](#)
2. Prepare the installation site for the router. See [“Preparing the Site for the MX104 Router Overview” on page 79](#).
3. Unpack the router and verify the parts received. See [“Unpacking an MX104 Router” on page 113](#).
4. Install the router in a rack. See [“Installing the MX104 Router in the Rack” on page 118](#).
5. Ground the router. See [“Connecting the MX104 Router to Earth Ground” on page 121](#).
6. Connect the router to external devices. See:
 - [Connecting the MX104 Router to Management Devices on page 129](#)
 - [Connecting the MX104 Router to External Clocking and Timing Devices on page 131](#)
 - [Connecting the MX104 Router to an External Alarm-Reporting Device on page 132](#)
7. Connect power to the router:
 - AC-powered models—See [“Connecting AC Power Cords to the MX104 Router” on page 123](#).

- DC-powered models—See “Connecting DC Power Cables to the MX104 Router” on page 125.
8. Perform initial configuration of the router by following instructions in “Initially Configuring the MX104 Router” on page 137.

Related Documentation

- [MX104 3D Universal Edge Router Overview on page 3](#)

Installing the MX104 Router in the Rack



NOTE: The router can be installed horizontally in a rack or cabinet.

To install the router in the rack (see [Figure 25 on page 119](#)):



CAUTION: Before front mounting the router in a rack, have a qualified technician verify that the rack is strong enough to support the router's weight and is adequately supported at the installation site.



NOTE: One person must be available to lift the router while another secures it to the rack.



CAUTION: If you are mounting multiple units on a rack, mount the heaviest unit at the bottom of the rack and mount the other units from the bottom of the rack to the top in decreasing order of the weight of the units.

1. Ensure that the rack is in its permanent location and is secured to the building. Ensure that the installation site allows adequate clearance for both airflow and maintenance.
2. Position the router in front of the rack or cabinet.
3. Hold onto the bottom of the chassis and carefully lift it so that the mounting brackets contact the rack rails.




WARNING: To prevent injury, keep your back straight and lift with your legs, not your back. Avoid twisting your body as you lift. Balance the load evenly and be sure that your footing is solid.

4. Align the mounting brackets with the holes in the rack rails.

5. Install a mounting screw into each of the open mounting holes aligned with the rack, starting from the bottom.
6. Visually inspect the alignment of the router. If the router is installed properly in the rack, all the mounting screws on one side of the rack should be aligned with the mounting screws on the opposite side and the router should be level.

Figure 25: Install the Front-Mounted Router in the Rack

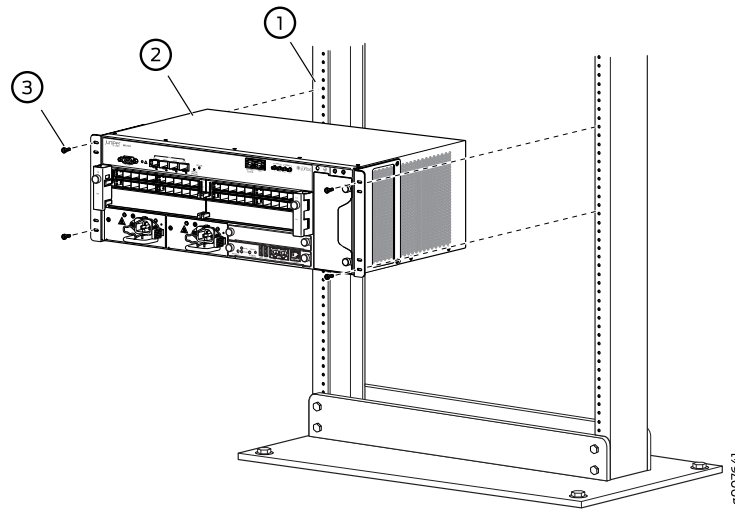

1—Rack	3—Mounting screws
2—MX104 router	

Related Documentation

- [Preparing the Site for the MX104 Router Overview on page 79](#)
- [Installing and Connecting an MX104 Router Overview on page 117](#)
- [Connecting the MX104 Router to Earth Ground on page 121](#)

Connecting the MX104 Router to Power

- [Connecting the MX104 Router to Earth Ground on page 121](#)
- [Connecting AC Power Cords to the MX104 Router on page 123](#)
- [Connecting DC Power Cables to the MX104 Router on page 125](#)

Connecting the MX104 Router to Earth Ground

To ground the router, you need the following tools:

- Phillips (+) screwdriver, number 2
- ESD grounding wrist strap
- Two SAE 10-32 screws and flat washers
- Grounding lug, Panduit LCD10-10-L
- Grounding cable that meets the following specifications:
 - For AC systems—Use a 14-AWG (2.08 mm²) 90° C wire
 - For 24 V systems—Use 6-AWG (13.3 mm²) 60° C wire (not provided)

You ground the router by connecting a grounding cable to earth ground and then attaching it to the chassis grounding points on the front of the router. To ground the router:

1. Verify that a licensed electrician has attached the cable lug provided with the router to the grounding cable.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Ensure that all grounding surfaces are clean and brought to a bright finish before grounding connections are made.
4. Connect the grounding cable to a proper earth ground.
5. Detach the ESD grounding strap from the site ESD grounding point.

6. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
7. Place the grounding cable lug over the grounding points on the front of the chassis (see [Figure 26 on page 123](#)).
8. Secure the grounding cable lug with the washers and screws. The holes are sized for SAE 10-32 screws. Apply 4.34 lb-in. (0.49 Nm) of torque to each screw. Do not overtighten the screw. (Use a number 2 Phillips screwdriver.)




CAUTION: Ensure that each grounding cable lug seats flush against the surface of the grounding points as you are tightening the screws. Ensure that each screw is properly threaded into the grounding points. Applying installation torque to the screw when it is improperly threaded may damage the terminal.



CAUTION: The maximum torque rating of the grounding screws on the router is 4.34 lb-in. (0.49 Nm). The grounding screws may be damaged if excessive torque is applied. Use only a torque-controlled driver to tighten screws. Use an appropriately sized driver, with a maximum torque capacity of 5 lb-in. or less. Ensure that the driver is undamaged and properly calibrated and that you have been trained in its use. You may wish to use a driver that is designed to prevent overtorque when the preset torque level is achieved.

9. Dress the grounding cable, and verify that it does not touch or block access to router components, and that it does not drape where people could trip on it.

Figure 26: Grounding Points on the MX104 Router

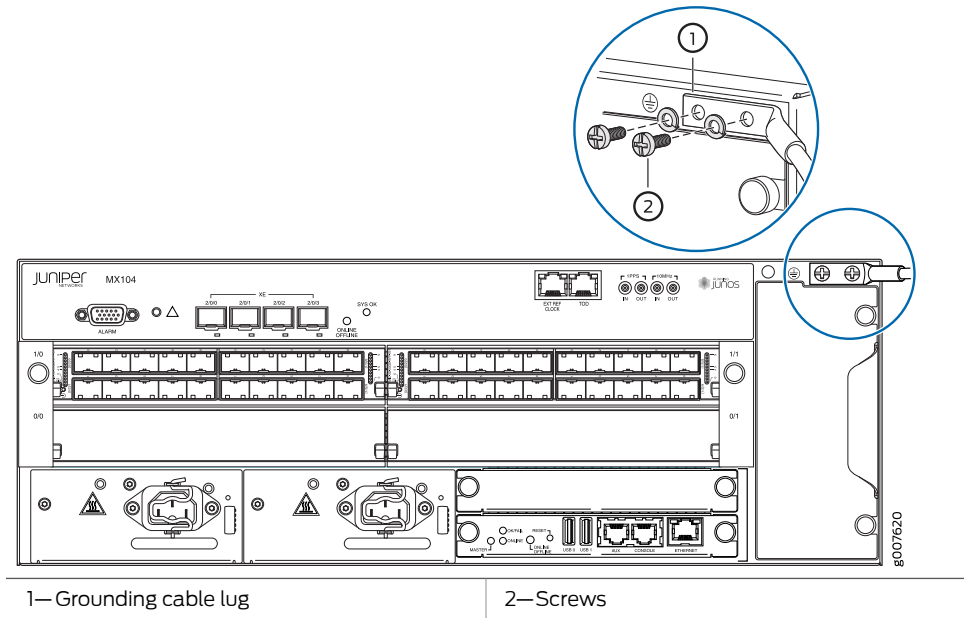

Related Documentation

- [Installing and Connecting an MX104 Router Overview on page 117](#)
- [Connecting AC Power Cords to the MX104 Router on page 123](#)
- [Connecting DC Power Cables to the MX104 Router on page 125](#)
- [Preventing Electrostatic Discharge Damage to an MX104 Router on page 230](#)

Connecting AC Power Cords to the MX104 Router

To connect AC power to the router, you need the following tools:

- ESD grounding wrist strap
- AC power cords



WARNING: You must ground the router before connecting the router to power.

To connect AC power to the router:

1. Locate the power cords, which should have a plug appropriate for your geographical location. See the “MX104 AC Power Cord Specifications” on page 104.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.


3. Insert the appliance coupler end of the power cord into the appliance inlet on the power supply.
4. Insert the power cord plug into an external AC power source receptacle.



NOTE: Each power supply must be connected to a dedicated AC power feed and a dedicated customer site circuit breaker. We recommend that you use a dedicated customer site circuit breaker rated for 10 A (100 VAC), or as required by local code.

5. Secure the power cord with the power cord retainer clip.
6. Dress the power cord appropriately. Verify that the power cord does not block the air exhaust and access to router components, or drape where people could trip on it.
7. Repeat Step 1 through Step 6 for the remaining power supply.
8. Observe the LED on the power supply. The LED blinks green as it transitions online. If the power supply is functioning normally, the LED lights green steadily.
If the LED is red or not lit, the power supply is not functioning normally. Repeat the cabling procedures.

Figure 27: Connecting AC Power to the Router

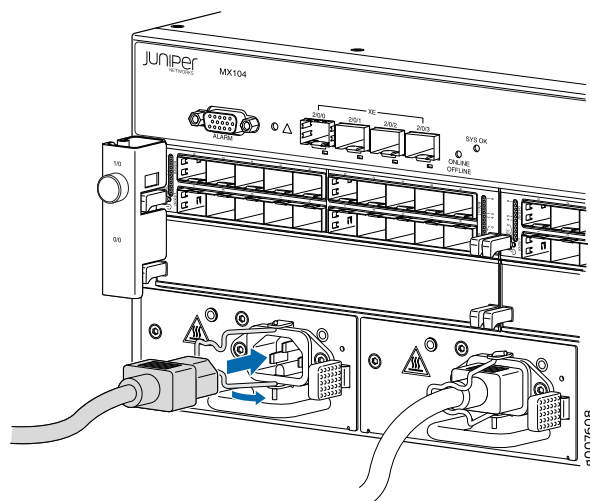

Related Documentation

- [MX104 Power Overview on page 69](#)
- [MX104 AC Power Electrical Safety Guidelines and Warnings on page 256](#)
- [MX104 AC Power Specifications on page 103](#)

Connecting DC Power Cables to the MX104 Router

To connect power to the router, you need the following tools:

- Phillips (+) screwdriver, number 2
- ESD grounding wrist strap
- Grounding ring lug with hole sized for an M5 screw
- M5 nut and washer (one per DC power supply, attached)
- DC power source cables, minimum 14 AWG or as required by local code (not provided)
- DC power ring lugs, Panduit PV12-14HDRB-2k (two per DC power supply)
- M6 screws and washers (two per DC power supply, attached)
- Grounding cable, minimum 14 AWG or as required by local code (not provided)

The DC power supply has one grounding point and two terminals on each power supply, covered by a clear plastic cover.




WARNING: You must ground the router before connecting the DC power cables.

To connect the power cables:

1. Switch off the dedicated customer site circuit breakers. Ensure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cable leads might become active during installation.
2. Ground the DC power supply (see [Figure 28 on page 126](#)):
 - a. Remove the nut and washer from the grounding point on the power supply.
 - b. Secure each grounding cable lug to the grounding point with the washer and nut.

Figure 28: Connecting the Ground Cable to the MX104 DC Power Supply

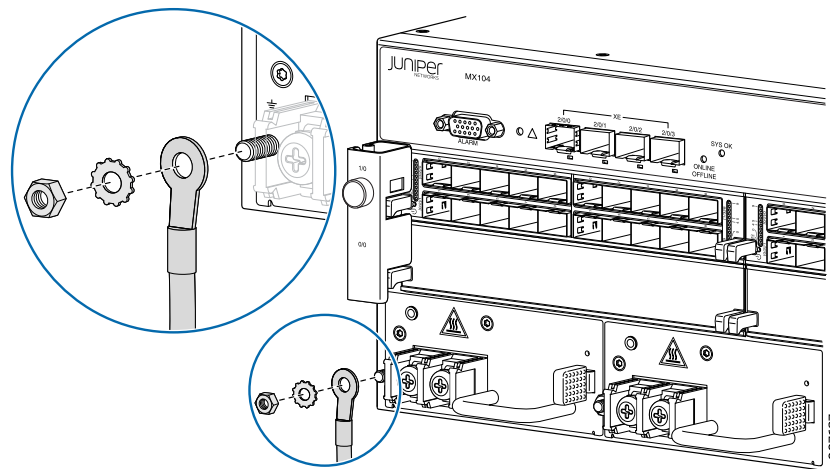

3. Remove the plastic cover protecting the terminal on the faceplate.
4. Verify that the DC power cables are correctly labeled before making connections to the power supply. In a typical power distribution scheme where the return is connected to chassis ground at the battery plant, you can use a multimeter to verify the resistance of the $-48V$ and return DC cables to chassis ground:

For $-48V$ and $-60V$:

 - a. The cable with very high resistance (indicating an open circuit) to chassis ground is the DC input cable ($-$).
 - b. The cable with very low resistance (indicating a closed circuit) to chassis ground is the return cable ($+$).

For $+24V$:

 - a. The cable with very low resistance (indicating a closed circuit) to chassis ground is the DC input cable ($-$).
 - b. The cable with very high resistance (indicating an open circuit) to chassis ground is the return cable ($+$).
5. Remove the screws and washers from the terminals.
6. Secure each power cable lug to the terminal with the washers and screw (see [Figure 29 on page 128](#)). Apply 27.4 lb-in. (3.1 Nm) of torque to each screw. Do not overtighten the screw. (Use a number 2 Phillips screwdriver.)
 - a. Secure the positive DC source power cable lug to the return ($+$) terminal.
 - b. Secure the negative DC source power cable lug to the input ($-$) terminal.



CAUTION: Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the screws. Ensure that each screw is properly threaded into the terminal. Applying installation torque to the screw when it is improperly threaded may damage the terminal.



CAUTION: The maximum torque rating of the terminal screws on the DC power supply is 27.4 lb-in. (3.1 Nm). The terminal screws may be damaged if excessive torque is applied. Use only a torque-controlled driver to tighten screws on the DC power supply terminals. Use an appropriately-sized driver, with a maximum torque capacity of 27.4 lb-in. or less. Ensure that the driver is undamaged and properly calibrated and that you have been trained in its use. You may wish to use a driver that is designed to prevent overtorque when the preset torque level is achieved.


7. Replace the plastic cover over the terminals on the faceplate.
8. Connect each DC power cable to the appropriate external DC power source.



NOTE: For information about connecting to external DC power sources, see the instructions for your site.

9. Switch on the external circuit breakers to provide voltage to the DC power source cable leads.
10. Repeat Step 2 through Step 9 for the remaining power supply.
11. Observe the LED on the power supply. The LED blinks green as it transitions online. If the power supply is functioning normally, the LED lights green steadily.
If the LED is red or not lit, the power supply is not functioning normally. Repeat the cabling procedures.

Figure 29: Connecting DC Power to the Router

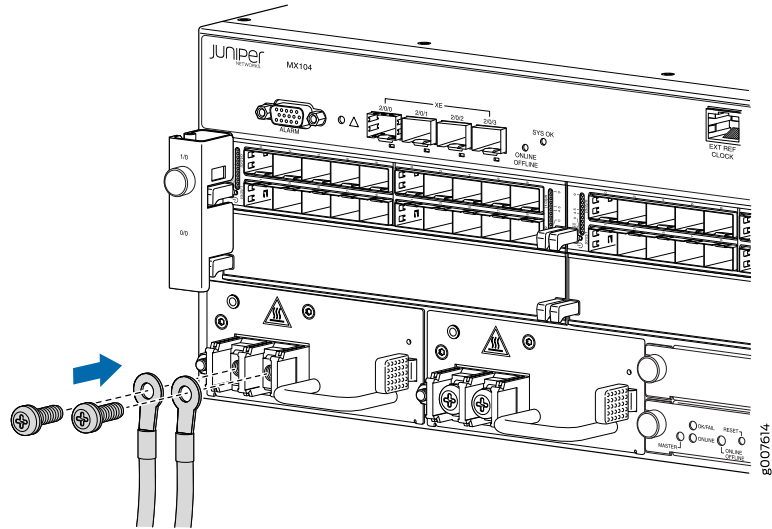

Related Documentation

- [MX104 Power Overview on page 69](#)
- [Installing and Connecting an MX104 Router Overview on page 117](#)
- [Connecting the MX104 Router to Earth Ground on page 121](#)
- [MX104 DC Power Electrical Safety Guidelines on page 257](#)
- [MX104 DC Power Specifications on page 107](#)
- [MX104 DC Power Cable and Lug Specifications on page 108](#)

CHAPTER 16

Connecting the MX104 Router to the Network

- [Connecting the MX104 Router to Management Devices on page 129](#)
- [Connecting the MX104 Router to External Clocking and Timing Devices on page 131](#)
- [Connecting the MX104 Router to an External Alarm-Reporting Device on page 132](#)
- [Connecting Interface Cables to MX104 Routers on page 133](#)

Connecting the MX104 Router to Management Devices

To connect external devices and cables to the router, you need the following tools:

- RJ-45 Ethernet cable and RJ-45 to DB-9 serial port adapter (provided)
- Management host, such as a PC, with an Ethernet port (not provided)

The following topics provide instructions for connecting the router to management devices:

- [Connecting the Router to a Network for Out-of-Band Management on page 129](#)
- [Connecting the Router to a Management Console Device on page 130](#)

Connecting the Router to a Network for Out-of-Band Management

To connect to the **ETHERNET** port on the MX104 Routing Engine:

1. Turn off the power to the management device.
2. Plug one end of the Ethernet cable into the **MGMT** port on the Routing Engine. (Figure 30 on page 129 shows the connector. Figure 31 on page 130 shows the port.)
3. Plug the other end of the cable into the network device.

Figure 30: Ethernet Cable Connector


 


Figure 31: Ethernet Port



Connecting the Router to a Management Console Device

You can connect a console, laptop, modem, or other auxiliary device by connecting a serial cable to the port on the front panel labeled **CONSOLE**. This port accepts a serial cable with an RJ-45 connector that is provided with the router.

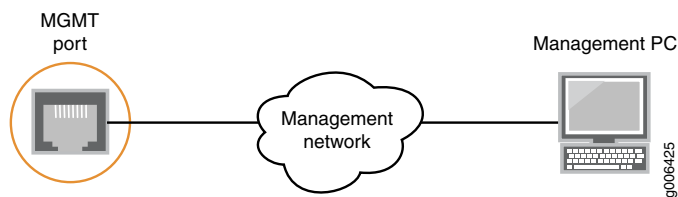

NOTE: The AUX port is not supported.

To connect a management console or auxiliary device:

1. Turn off the power to the console or auxiliary device.
2. Plug the RJ-45 end of the serial cable into the **CONSOLE** port on the Routing Engine (Figure 32 on page 130 shows the connector. Figure 33 on page 131 shows the ports.)
3. Plug the female DB-9 end into the serial port of the device.



NOTE:

For console devices, configure the serial port to the following values:

- Baud rate—9600
- Parity—N
- Data bits—8
- Stop bits—1
- Flow control—none

Figure 32: Routing Engine Console Cable Connector


 


Figure 33: Console Connections

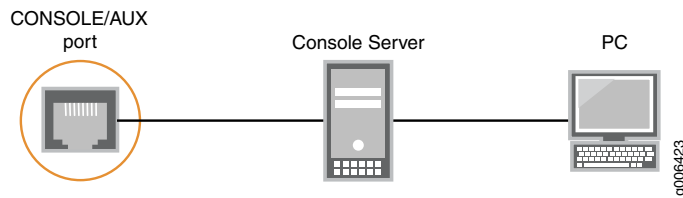

Related Documentation

- [Installing and Connecting an MX104 Router Overview on page 117](#)
- [MX104 Routing Engine Ethernet Port Specifications on page 92](#)
- [MX104 Routing Engine Auxiliary and Console Ports Specifications on page 93](#)
- [Initially Configuring the MX104 Router on page 137](#)

Connecting the MX104 Router to External Clocking and Timing Devices

The MX104 router supports external clock synchronization for Synchronous Ethernet, T1 or E1 line timing sources, and external inputs.

- [Connecting 1-PPS and 10-MHz Timing Devices to the MX104 Router on page 131](#)
- [Connecting a T1 or E1 External Clocking Device to the MX104 Router on page 132](#)
- [Connecting a Time-of-Day Device to the MX104 Router on page 132](#)

Connecting 1-PPS and 10-MHz Timing Devices to the MX104 Router

The MX104 router has four SMB connectors that support 1-PPS and 10-MHz timing devices.



NOTE: Ensure a cable of 3 m or less in length is used for the 10-MHz and 1-PPS connectors.

To connect the SMB coaxial cable to the external clocking input port:

1. Connect one end of the SMB coaxial cable to either the 1-PPS SMB connector or the 10-MHz SMB connector on the router.
2. Connect the other end of the SMB coaxial cable to the 10-MHz or 1-PPS source network equipment.



NOTE: Ensure that the 10-MHz or 1-PPS source network equipment contains a complementary metal oxide semiconductor (LVCMOS) of a low voltage of 50 ohms or is compatible with low-voltage transistor-transistor logic (LVTTTL) (3.3v).

Connecting a T1 or E1 External Clocking Device to the MX104 Router

The MX104 router contains an external building-integrated timing supply (BITS) port labeled **EXT REF CLOCK** on the front panel of the router.

To connect the router to a BITS T1 or E1 external clocking device:

1. Attach an electrostatic discharge (ESD) grounding trap on your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Plug one end of the RJ-45 cable into the internal clock port on the craft interface.
3. Plug the other end of the RJ-45 cable into the T1 or E1 external clocking device.
4. Verify that the LEDs for the external clock input are lit steadily green.
5. Configure the port. See *Configuring Clock Synchronization Interface on MX Series Routers*.

Connecting a Time-of-Day Device to the MX104 Router

A time-of-day port labeled **TOD** on the front panel of the router allows you to connect external timing devices such as the TCA6500 timing client.

To connect the router to a TOD external timing device:

1. Attach an electrostatic discharge (ESD) grounding trap on your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Plug one end of the RJ-45 cable into the TOD port on the front panel.
3. Plug the other end of the RJ-45 cable into the TOD timing device.
4. Verify that the LEDs for the TOD port on the router are lit steadily green.
5. Configure the port. See *Configuring Clock Synchronization Interface on MX Series Routers*.

- Related Documentation**
- [MX104 Clocking and Timing Ports Overview on page 17](#)
 - [MX104 Time of Day Port Specifications on page 98](#)

Connecting the MX104 Router to an External Alarm-Reporting Device

Ensure that you have the following parts and tools available:

- Electrostatic discharge (ESD) grounding strap
- 2.5-mm flat-blade (–) screwdriver

To connect the router to external alarm-reporting devices, attach wires to the **ALARM** relay contacts on the front panel of the router. A system condition that triggers the red or yellow alarm on the router also activates the corresponding alarm relay contact.

The terminal blocks that plug into the alarm relay contacts are supplied with the router. They accept wire of any gauge between 20 AWG (0.52 mm²) and 14 AWG (2.08 mm²), which is not provided. Use the gauge of wire appropriate for the external device you are connecting.

To connect an external device to an alarm relay contact:

1. Prepare the required length of wire with gauge between 20 AWG (0.52 mm²) and 14 AWG (2.08 mm²).
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. While the terminal block is not plugged into the relay contact, use a screwdriver to loosen the small screws on its side. With the small screws on its side facing left, insert wires into the slots in the front of the block based on the wiring for the external device. Tighten the screws to secure the wire.
4. Orient the terminal block according to the labels to the left of the appropriate relay contact (**NC** means “normally closed, **C** means “common,” and **NO** means “normally open”).
5. Plug the terminal block into the relay contact and use a screwdriver to tighten the screws on the face of the block.
6. Attach the other end of the wires to the external device.

If attaching a reporting device for the other kind of alarm, repeat the procedure.

**Related
Documentation**

- [MX104 Alarm Contact Port Overview on page 9](#)
- [MX104 Alarm Contact Port Specifications on page 95](#)

Connecting Interface Cables to MX104 Routers

To connect the physical interfaces to the network (see [Figure 34 on page 134](#)):

1. Have ready a length of the type of cable used by the component. For MIC cable specifications, see the [MX Series Interface Module Reference](#).
2. Remove the rubber safety plug from the cable connector port.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

3. Insert the cable connector into the cable connector port on the faceplate.



NOTE: The XFP cages and optics on the components are industry standard parts that have limited tactile feedback for insertion of optics and fiber. You need to insert the optics and fiber firmly until the latch is securely in place.

4. Arrange the cable to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.




CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.

Figure 34: Attaching a Cable to a MIC

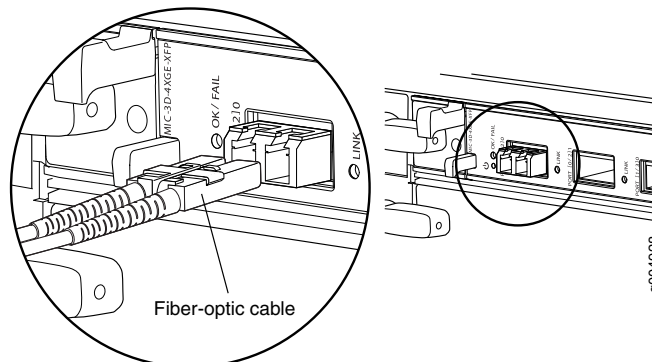

**Related
Documentation**

- [Installing and Connecting an MX104 Router Overview on page 117](#)
- [Connecting the MX104 Router to Management Devices on page 129](#)
- [Initially Configuring the MX104 Router on page 137](#)

Initially Configuring the MX104 Router

- [Initially Configuring the MX104 Router on page 137](#)

Initially Configuring the MX104 Router

The MX104 router ships with Junos OS preinstalled and ready to be configured when the router is powered on. One 8-GB internal NAND Flash memory (**da0**) acts as the hard drive. Two USB ports on the front panel accept USB storage devices (**usb0** and **usb1**) that can also function as alternative boot devices.

When the router boots, it first attempts to start the image on the USB 0 flash memory device, if present, then attempts to start the image on the USB 1 flash memory device, if present. If a USB flash memory device is not inserted into either of the two slots on the Routing Engine, or the attempt otherwise fails, the router next tries the active partition on the NAND Flash device.

You configure the router by issuing Junos OS command-line interface (CLI) commands, either on a console device attached to the **CONSOLE** port on the front panel, or over a telnet connection to a network connected to the Routing Engine **ETHERNET** port on the front panel.



NOTE: For the initial configuration, use a device attached to the **CONSOLE** port.

Gather the following information before configuring the router:

- Name that the router will use on the network
- Domain name that the router will use
- IP address and prefix length information for the Ethernet interface
- IP address of a default router
- IP address of a DNS server
- Password for the root user

This procedure connects the router to the network but does not enable it to forward traffic. For complete information about enabling the router to forward traffic, including examples, see the Junos OS configuration guides.

To configure the software:

1. Verify that the router is powered on.
2. Log in as the “root” user. There is no password.
3. Start the CLI.

```
root# cli
root@>
```

4. Enter configuration mode.

```
cli> configure
[edit]
root@#
```

5. Configure the name of the router. If the name includes spaces, enclose the name in double quotation marks (“ ”).

```
[edit]
root@# set system host-name host-name
```

6. Create a user account for the management console.

```
[edit]
root@# set system login user user-name authentication plain-text-password
New password: password
Retype new password: password
```

7. Set the user account class to **super-user**.

```
[edit]
root@# set system login user user-name class super-user
```

8. Configure the router’s domain name.

```
[edit]
root@# set system domain-name domain-name
```

9. Configure the IP address and prefix length for the router’s Ethernet interface.

```
[edit]
root@# set interfaces fxp0 unit 0 family inet address address/prefix-length
```

10. Configure the IP address of a backup router, which is used only while the routing protocol is not running.

```
[edit]
root@# set system backup-router address
```

11. Configure the IP address of a DNS server.

```
[edit]
root@# set system name-server address
```

12. Set the root authentication password by entering either a clear-text password, an encrypted password, or an SSH public key string (DSA or RSA):

```
[edit]
root@# set system root-authentication plain-text-password
New password: password
Retype new password: password
```

or

```
[edit]
root@# set system root-authentication encrypted-password encrypted-password
```

or

```
[edit]
root@# set system root-authentication ssh-dsa public-key
```

or

```
[edit]
root@# set system root-authentication ssh-rsa public-key
```

13. (Optional) Configure the static routes to remote subnets with access to the management port. Access to the management port is limited to the local subnet. To access the management port from a remote subnet, you need to add a static route to that subnet within the routing table. For more information about static routes, see the *Junos OS Administration Library*.

```
[edit]
root@# set routing-options static route remote-subnet next-hop destination-IP retain
no-readvertise
```

14. Configure the telnet service at the `[edit system services]` hierarchy level.

```
[edit]
root@# set system services telnet
```

15. (Optional) Display the configuration to verify that it is correct.

```
[edit]
root@# show
system {
  host-name host-name;
  domain-name domain-name;
  backup-router address;
  root-authentication {
    authentication-method (password | public-key);
```

```
    }
    name-server {
        address;
    }
}
interfaces {
    fxp0 {
        unit 0 {
            family inet {
                address address/prefix-length;
            }
        }
    }
}
```

16. Commit the configuration to activate it on the router.

```
[edit]
root@# commit
```

17. (Optional) Configure additional properties by adding the necessary configuration statements. Then commit the changes to activate them on the router.

```
[edit]
root@host# commit
```

18. When you have finished configuring the router, exit configuration mode.

```
[edit]
root@host# exit
root@host>
```

Related Documentation

- [MX104 Hardware and CLI Terminology Mapping on page 6](#)

PART 4

Installing and Replacing Components

- [Overview of Installing and Replacing Components on page 143](#)
- [Replacing Chassis Components on page 145](#)
- [Replacing Cooling System Component on page 153](#)
- [Replacing Host Subsystem Components on page 161](#)
- [Replacing Line Card Components on page 169](#)
- [Replacing Power System Components on page 179](#)

Overview of Installing and Replacing Components

- [MX104 Field-Replaceable Units \(FRUs\) on page 143](#)

MX104 Field-Replaceable Units (FRUs)

Field-replaceable units (FRUs) are router components that can be replaced at the customer site. Replacing most FRUs requires minimal router downtime. The router uses the following types of FRUs:

- Hot-removable and hot-insertable FRUs—You can remove and replace these components without powering off the router or disrupting the routing functions.
- Hot-pluggable FRUs—You can remove and replace these components without powering off the router, but the routing functions of the system are interrupted when the component is removed.

[Table 80 on page 143](#) lists the FRUs for the MX104 router. Before you replace a Routing Engine, you must take the Routing Engine offline.

Table 80: Field-Replaceable Units

Hot-Removable and Hot-Insertable FRUs	Hot-Pluggable FRUs
<ul style="list-style-type: none"> • Air filter • Backup Routing Engine (if redundant) • Master Routing Engine (if nonstop active routing is configured) • Modular Interface Cards (MICs) • AC and DC power supplies (if redundant) • Fan tray • Transceivers 	<ul style="list-style-type: none"> • Master Routing Engine (if nonstop active routing is not configured) • Routing Engine (nonredundant)

Related Documentation

- [MX104 3D Universal Edge Router Overview on page 3](#)
- [Taking an MX104 Routing Engine Offline on page 164](#)

Replacing Chassis Components

- [Replacing an MX104 Console or Auxiliary Cable on page 145](#)
- [Replacing an MX104 Management Ethernet Cable on page 146](#)
- [Replacing an MX104 Fiber-Optic Cable on page 147](#)
- [Replacing an MX104 Alarm Cable on page 149](#)

Replacing an MX104 Console or Auxiliary Cable



NOTE: The AUX port is not supported.


1. [Removing an MX104 Console or Auxiliary Cable on page 145](#)
2. [Installing an MX104 Console or Auxiliary Cable on page 146](#)

Removing an MX104 Console or Auxiliary Cable

To remove a serial cable connected to a console or auxiliary device:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Press the tab on the connector, and pull the connector straight out of the **AUX** or **CONSOLE** port. [Figure 35 on page 145](#) shows the connector.
3. Disconnect the cable from the console or auxiliary device.

Figure 35: Ethernet Cable Connectors

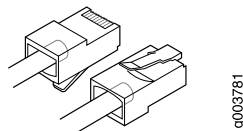

- See Also**
- [MX104 Routing Engine Auxiliary and Console Ports Specifications on page 93](#)
 - [Installing an MX104 Console or Auxiliary Cable on page 146](#)

Installing an MX104 Console or Auxiliary Cable

The **CONSOLE** port on the front panel of the router accepts an RS-232 (EIA-232) serial cable with RJ-45 connectors.



NOTE: The AUX port is not supported.

To connect a cable between the router and the console or auxiliary device:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Connect one end of the replacement cable into the **CONSOLE/AUX** port.
3. Plug the other end of the cable into the device's serial port.

- See Also**
- [Removing an MX104 Console or Auxiliary Cable on page 145](#)
 - [MX104 Routing Engine Auxiliary and Console Ports Specifications on page 93](#)

- Related Documentation**
- [MX104 Routing Engine Auxiliary and Console Ports Specifications on page 93](#)

Replacing an MX104 Management Ethernet Cable


1. [Removing an MX104 Management Ethernet Cable on page 146](#)
2. [Installing an MX104 Management Ethernet Cable on page 147](#)

Removing an MX104 Management Ethernet Cable

To remove a serial cable connected to a management device:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Press the tab on the connector, and pull the connector straight out of the **ETHERNET** port. [Figure 36 on page 146](#) shows the connector.
3. Disconnect the cable from the network device.

Figure 36: Ethernet Cable Connectors

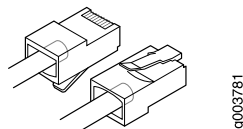

- See Also**
- [Installing an MX104 Management Ethernet Cable on page 147](#)
 - [MX104 Routing Engine Ethernet Port Specifications on page 92](#)

Installing an MX104 Management Ethernet Cable

To install a serial cable connected to a management device:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Plug one end of the replacement cable into the appropriate **ETHERNET** port.
3. Plug the other end of the cable into the network device.

- See Also**
- [Removing an MX104 Management Ethernet Cable on page 146](#)
 - [MX104 Routing Engine Ethernet Port Specifications on page 92](#)

- Related Documentation**
- [MX104 Routing Engine Ethernet Port Specifications on page 92](#)

Replacing an MX104 Fiber-Optic Cable

1. [Disconnecting an MX104 Fiber-Optic Cable on page 147](#)
2. [Connecting an MX104 Fiber-Optic Cable on page 148](#)

Disconnecting an MX104 Fiber-Optic Cable

The MX104 router has field-replaceable unit (FRU) optical transceivers to which you can connect fiber-optic cables.

Before you begin disconnecting a fiber-optic cable from an optical transceiver installed in an MX104 router, ensure that you have taken the necessary precautions for safe handling of lasers (see “[Laser Safety Warnings for Juniper Networks Devices](#)” on page 241).

Ensure that you have the following parts and tools available:

- A rubber safety cap to cover the transceiver
- A rubber safety cap to cover the fiber-optic cable connector

To disconnect a fiber-optic cable from an optical transceiver installed in the router:

1. Disable the port in which the transceiver is installed by issuing the following command:

```
[edit interfaces]  
user@router# set interface-name disable
```



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to transceivers emit laser light that can damage your eyes.

2. Carefully unplug the fiber-optic cable connector from the transceiver.
3. Cover the transceiver with a rubber safety cap.



WARNING: Do not leave a fiber-optic transceiver uncovered except when inserting or removing a cable. The rubber safety cap keeps the port clean and prevents accidental exposure to laser light.

4. Cover the fiber-optic cable connector with the rubber safety cap.

Connecting an MX104 Fiber-Optic Cable

MX104 routers have field-replaceable unit (FRU) optical transceivers to which you can connect fiber-optic cables.

Before you begin connecting a fiber-optic cable to an optical transceiver installed in a router, ensure that you have taken the necessary precautions for safe handling of lasers (see “[General Laser Safety Guidelines for Juniper Networks Devices](#)” on page 241).


To connect a fiber-optic cable to an optical transceiver installed in a router:



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to transceivers emit laser light that can damage your eyes.

1. If the fiber-optic cable connector is covered by a rubber safety cap, remove the cap. Save the cap.
2. Remove the rubber safety cap from the optical transceiver. Save the cap.
3. Insert the cable connector into the optical transceiver (see [Figure 37](#) on page 149).

Figure 37: Connecting a Fiber-Optic Cable to an Optical Transceiver Installed in a Router

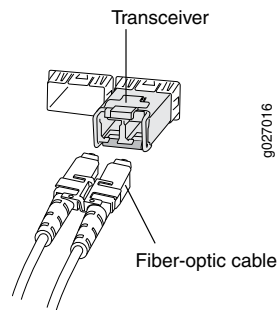

4. Secure the cables so that they are not supporting their own weight. Place excess cable out of the way in a neatly coiled loop. Placing fasteners on a loop helps cables maintain their shape.



CAUTION: Do not bend fiber-optic cables beyond their minimum bend radius. An arc smaller than a few inches in diameter can damage the cables and cause problems that are difficult to diagnose.

Do not let fiber-optic cables hang free from the connector. Do not allow fastened loops of cables to dangle, which stresses the cables at the fastening point.

- See Also**
- [Maintaining Cables That Connect to MX104 Network Ports on page 201](#)
 - [Understanding Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion on page 89](#)
 - [Calculating Power Budget and Power Margin for Fiber-Optic Cables on page 87](#)

Replacing an MX104 Alarm Cable

- [Disconnecting the Router from an External Alarm-Reporting Device on page 149](#)
- [Connecting the MX104 Router to an External Alarm-Reporting Device on page 150](#)

Disconnecting the Router from an External Alarm-Reporting Device

Ensure that you have the following parts and tools available:

- Electrostatic discharge (ESD) grounding strap
- 2.5-mm flat-blade (–) screwdriver

To connect an external device to an alarm relay contact:

1. Remove the other end of the wires to the external device.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Loosen the small screws on the face of the terminal block using a screwdriver and remove the block from the relay contact.
4. Loosen the small screws on the side of the terminal block using a screwdriver. Remove existing wires from the slots in the front of the block.

Connecting the MX104 Router to an External Alarm-Reporting Device

Ensure that you have the following parts and tools available:

- Electrostatic discharge (ESD) grounding strap
- 2.5-mm flat-blade (–) screwdriver

To connect the router to external alarm-reporting devices, attach wires to the **ALARM** relay contacts on the front panel of the router. A system condition that triggers the red or yellow alarm on the router also activates the corresponding alarm relay contact.

The terminal blocks that plug into the alarm relay contacts are supplied with the router. They accept wire of any gauge between 20 AWG (0.52 mm²) and 14 AWG (2.08 mm²), which is not provided. Use the gauge of wire appropriate for the external device you are connecting.

To connect an external device to an alarm relay contact:

1. Prepare the required length of wire with gauge between 20 AWG (0.52 mm²) and 14 AWG (2.08 mm²).
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. While the terminal block is not plugged into the relay contact, use a screwdriver to loosen the small screws on its side. With the small screws on its side facing left, insert wires into the slots in the front of the block based on the wiring for the external device. Tighten the screws to secure the wire.
4. Orient the terminal block according to the labels to the left of the appropriate relay contact (**NC** means “normally closed, **C** means “common,” and **NO** means “normally open”).

5. Plug the terminal block into the relay contact and use a screwdriver to tighten the screws on the face of the block.
6. Attach the other end of the wires to the external device.

If attaching a reporting device for the other kind of alarm, repeat the procedure.

- See Also**
- [MX104 Alarm Contact Port Overview on page 9](#)
 - [MX104 Alarm Contact Port Specifications on page 95](#)

Replacing Cooling System Component

- Replacing an MX104 Air Filter on page 153
- Installing an MX104 Air Filter on page 155
- Replacing an MX104 Fan Tray on page 156
- Installing an MX104 Fan Tray on page 158

Replacing an MX104 Air Filter

1. Removing an MX104 Air Filter on page 153
2. Installing an MX104 Air Filter on page 154

Removing an MX104 Air Filter



CAUTION: Do not run the router for more than a few minutes without the air filter in place.




CAUTION: Always keep the air filter in place while the router is operating, except during replacement. Because the fans are very powerful, they could pull small bits of wire or other materials into the router through the unfiltered air intake. This could damage the router components.

The air filter must be installed on the right side of the fan tray. To remove the air filter (see [Figure 38 on page 154](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Remove the fan tray as described in “[Removing an MX104 Fan Tray](#)” on page 156.
3. Press the release tab on the rear of the fan tray to release the air filter.
4. Grasp the sides of the air filter, and slide it away from the fan tray faceplate.

Figure 38: Removing the MX104 Air Filter

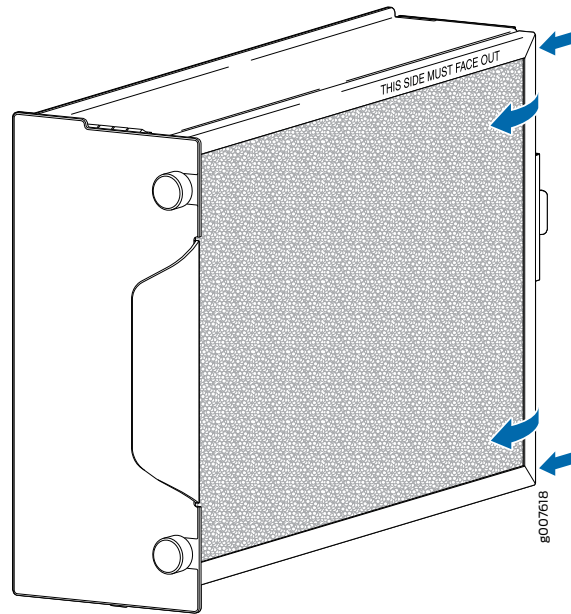


See Also • [Installing an MX104 Air Filter on page 154](#)

Installing an MX104 Air Filter

The air filter installs on the right side of the fan tray. To install the air filter (see [Figure 39 on page 155](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Locate the THIS SIDE MUST FACE OUT label and ensure that the air filter is right side up.
3. Insert the air filter into the groove located toward the front of the fan tray.
4. Press the tab on the rear of the fan tray to allow the air filter to slide into place.

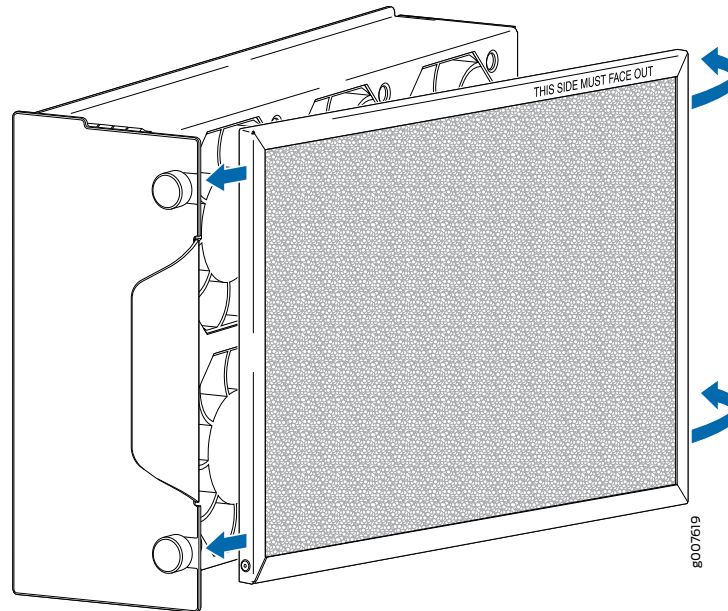Figure 39: Installing the Air Filter

See Also • [Removing an MX104 Air Filter on page 153](#)


Related Documentation • [MX104 Cooling System and Airflow Overview on page 19](#)

Installing an MX104 Air Filter

The air filter installs on the right side of the fan tray. To install the air filter (see [Figure 39 on page 155](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Locate the THIS SIDE MUST FACE OUT label and ensure that the air filter is right side up.
3. Insert the air filter into the groove located toward the front of the fan tray.
4. Press the tab on the rear of the fan tray to allow the air filter to slide into place.

Figure 40: Installing the Air Filter

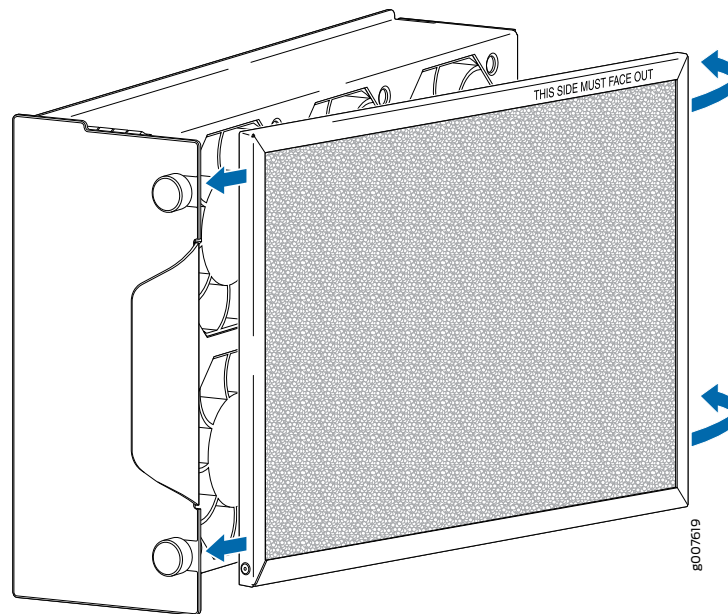

Related Documentation

- [Removing an MX104 Air Filter on page 153](#)

Replacing an MX104 Fan Tray

1. [Removing an MX104 Fan Tray on page 156](#)
2. [Installing an MX104 Fan Tray on page 157](#)

Removing an MX104 Fan Tray



NOTE: To prevent overheating, install the replacement fan tray immediately after removing the existing fan tray.

To remove the fan tray (see [Figure 41 on page 157](#)):


1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Loosen the captive screws on the corners of the fan tray faceplate.
3. Grasp the fan tray handle, and begin to pull the fan tray from the chassis.



WARNING: To avoid injury, keep tools and your fingers away from the fans as you slide the fan module out of the chassis. The fans might still be spinning.

4. Place one hand under the fan tray to support it, and pull the fan tray completely out of the chassis.

Figure 41: Removing the Fan Tray

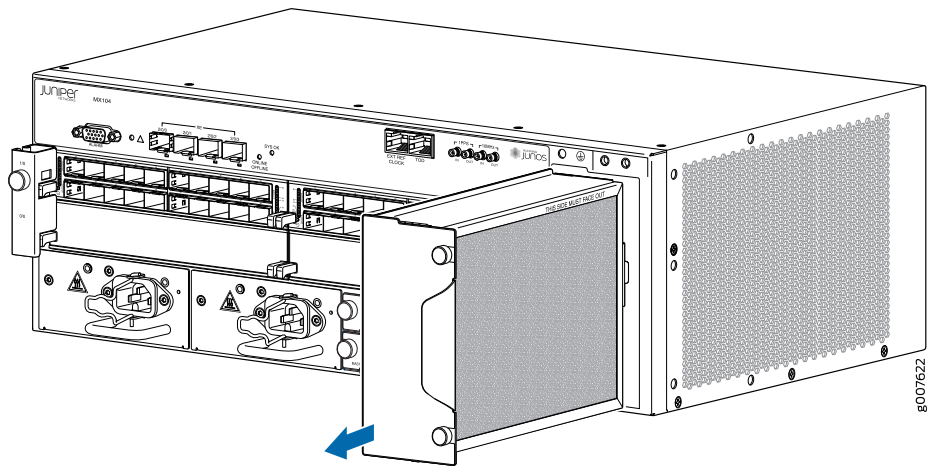


- See Also**
- [MX104 Cooling System and Airflow Overview](#) on page 19
 - [Replacing an MX104 Air Filter](#) on page 153
 - [Installing an MX104 Fan Tray](#) on page 157

Installing an MX104 Fan Tray

To install the fan tray (see [Figure 42](#) on page 158):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Orient the fan tray in the slot so that the arrow is pointing up, and slide the fan tray straight into the chassis.
3. Verify that the front of the fan tray is firmly seated in the chassis.
4. Tighten the captive screws on the fan tray faceplate to secure it in the chassis.

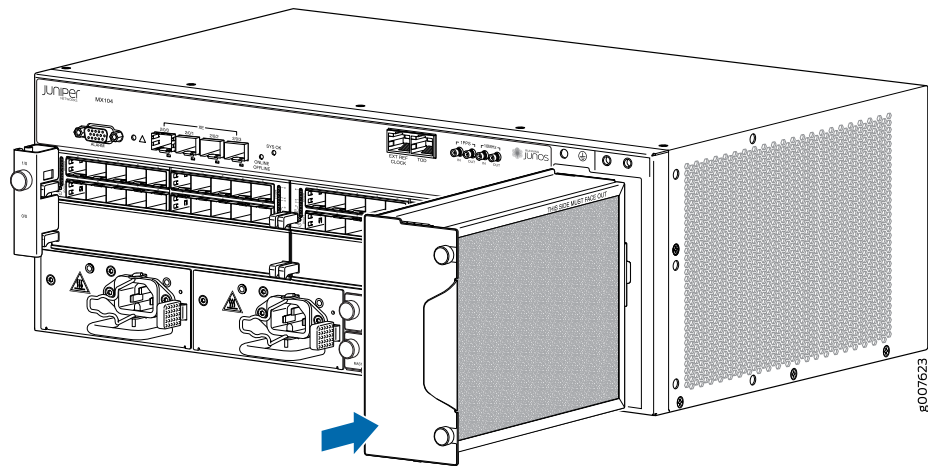Figure 42: Installing the Fan Tray

- See Also**
- [MX104 Cooling System and Airflow Overview on page 19](#)
 - [Replacing an MX104 Air Filter on page 153](#)
 - [Removing an MX104 Fan Tray on page 156](#)


- Related Documentation**
- [MX104 Cooling System and Airflow Overview on page 19](#)
 - [Replacing an MX104 Air Filter on page 153](#)

Installing an MX104 Fan Tray

To install the fan tray (see [Figure 42 on page 158](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Orient the fan tray in the slot so that the arrow is pointing up, and slide the fan tray straight into the chassis.
3. Verify that the front of the fan tray is firmly seated in the chassis.
4. Tighten the captive screws on the fan tray faceplate to secure it in the chassis.

Figure 43: Installing the Fan Tray

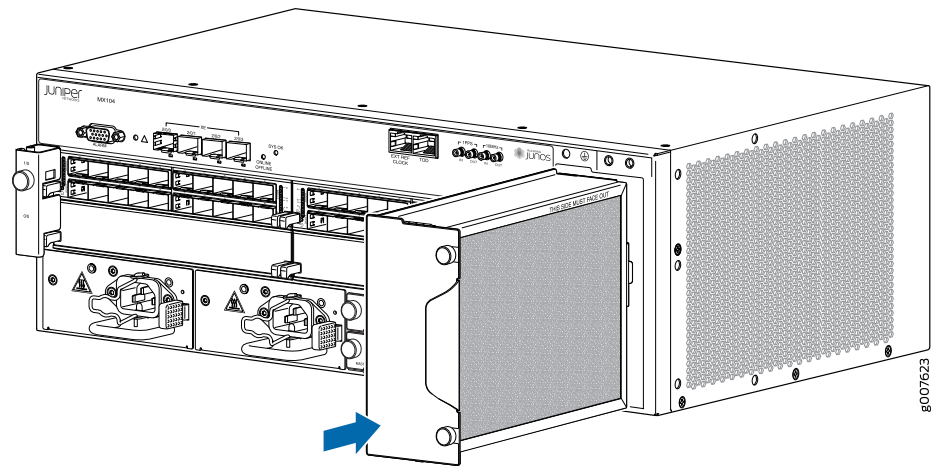

Related Documentation

- [MX104 Cooling System and Airflow Overview on page 19](#)
- [Replacing an MX104 Air Filter on page 153](#)
- [Removing an MX104 Fan Tray on page 156](#)

Replacing Host Subsystem Components

- Installing an MX104 Routing Engine on page 161
- Replacing an MX104 Routing Engine on page 162

Installing an MX104 Routing Engine

To install a Routing Engine (see [Figure 44 on page 162](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place one hand underneath the Routing Engine to support it.
3. Carefully align the sides of the Routing Engine with the guides inside the opening on the chassis.
4. Slide the Routing Engine into the chassis until you feel resistance.
5. Tighten the captive screws on both sides of the Routing Engine.
6. Connect the management device cables to the Routing Engine.



NOTE: The Routing Engine might require several minutes to boot.

7. After the Routing Engine boots, verify that it is installed correctly:
 - Check the LEDs on the Routing Engine. If the router is operational and the Routing Engine is functioning properly, the green **ONLINE** LED lights steadily. If the red **OK/FAIL** LED lights steadily instead, remove and install the Routing Engine again. If the red **OK/FAIL** LED still lights steadily, the Routing Engine is not functioning properly. Contact your customer support representative.
 - Check the status of the Routing Engine, using the **show chassis environment routing-engine** CLI command:


```

user@ host > show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  Temperature     34 degrees C / 93 degrees F
  CPU Temperature 43 degrees C / 109 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature     33 degrees C / 91 degrees F
  CPU Temperature 39 degrees C / 102 degrees F

```

If the router is operational and the Routing Engine is functioning properly, the state shows **Online Master** or **Online Standby**. For more information about using the **show chassis routing-engine** CLI command, see *show chassis environment routing-engine*.

Figure 44: Installing a Routing Engine

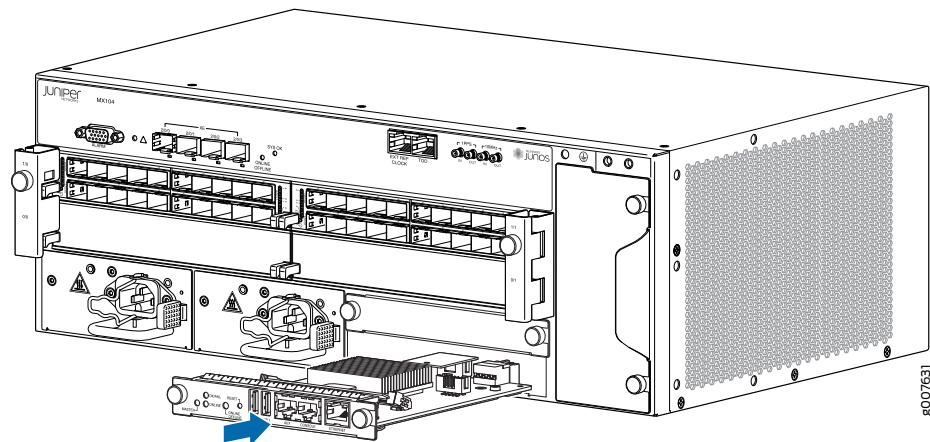

Related Documentation

- [MX104 Routing Engine Overview on page 21](#)
- [Maintaining the MX104 Routing Engines on page 202](#)
- [Removing an MX104 Routing Engine on page 165](#)
- [Effect of Taking the MX104 Routing Engine Offline on page 162](#)
- [MX104 Routing Engine Serial Number Label on page 218](#)

Replacing an MX104 Routing Engine

1. [Effect of Taking the MX104 Routing Engine Offline on page 162](#)
2. [Taking an MX104 Routing Engine Offline on page 164](#)
3. [Removing an MX104 Routing Engine on page 165](#)
4. [Installing an MX104 Routing Engine on page 167](#)

Effect of Taking the MX104 Routing Engine Offline

Before you replace a Routing Engine, you must take the Routing Engine offline. The Routing Engine is hot-pluggable.

Normally, if two Routing Engines are installed in the router, **RE 0** functions as the master and **RE 1** functions as the backup. You can remove the backup Routing Engine (or either of its components) without interrupting the functioning of the router. If you take the master Routing Engine offline, the backup Routing Engine becomes the master (the router might reboot, depending on your configuration). If the router has only one Routing Engine, taking the Routing Engine offline causes the router to shut down. The effect of taking the master Routing Engine offline varies depending on your configuration of high availability features.

Table 81 on page 163 explains the effect of taking the Routing Engine offline.

Table 81: Effect of Taking the Routing Engine Offline

Type of Routing Engine	Effect of Taking the Routing Engine Offline
Nonredundant Routing Engine	The router shuts down.
Backup Routing Engine	The functioning of the router is not interrupted. The backup Routing Engine is hot-removable and hot-insertable.
Master Routing Engine	<p>The backup Routing Engine becomes the master. The backup Routing Engine assumes Routing Engine functions. The master Routing Engine is hot-pluggable. Removal or failure of the master Routing Engine affects forwarding and routing based on the high availability configuration:</p> <ul style="list-style-type: none"> • Dual Routing Engines without any high availability features enabled—Traffic is interrupted while the Packet Forwarding Engine is reinitialized. All kernel and forwarding processes are restarted. When the switchover to the new master Routing Engine is complete, routing convergence takes place and traffic is resumed. • Graceful Routing Engine switchover (GRES) is enabled—Graceful Routing Engine switchover preserves interface and kernel information. Traffic is not interrupted. However, graceful Routing Engine switchover does not preserve the control plane. Neighboring routers detect that the router has restarted and react to the event in a manner prescribed by individual routing protocol specifications. To preserve routing without interruption during a switchover, graceful Routing Engine switchover must be combined with nonstop active routing. • Nonstop active routing is enabled (graceful Routing Engine switchover must be configured for nonstop active routing to be enabled)—Nonstop active routing supports Routing Engine switchover without alerting peer nodes that a change has occurred. Nonstop active routing uses the same infrastructure as graceful Routing Engine switchover to preserve interface and kernel information. However, nonstop active routing also preserves routing information and protocol sessions by running the routing protocol process (rpd) on both Routing Engines. In addition, nonstop active routing preserves TCP connections maintained in the kernel. • Graceful restart is configured—Graceful restart provides extensions to routing protocols so that neighboring helper routers restore routing information to a restarting router. These extensions signal neighboring routers about the graceful restart and prevent the neighbors from reacting to the router restart and from propagating the change in state to the network during the graceful restart period. Neighbors provide the routing information that enables the restarting router to stop and restart routing protocols without causing network reconvergence. Neighbors are required to support graceful restart. The routing protocol process (rpd) restarts. A graceful restart interval is required. For certain protocols, a significant change in the network can cause graceful restart to stop.



NOTE: Router performance might change if the backup Routing Engine's configuration differs from the former master's configuration. For the most predictable performance, configure the two Routing Engines identically, except for parameters unique to each Routing Engine.

To configure Routing Engine-specific parameters and still use the same configuration on both Routing Engines, include the appropriate configuration statements under the `re0` and `re1` statements at the `[edit groups]` hierarchy level and use the `apply-groups` statement. For instructions, see the *Junos OS Administration Library*.

To configure Routing Engine-specific parameters and still use the same configuration on both Routing Engines, include the appropriate configuration statements under the `re0` and `re1` statements at the `[edit groups]` hierarchy level and use the `apply-groups` statement. For instructions, see the *Junos OS Administration Library*.



NOTE: For information about configuring graceful Routing Engine switchover, graceful restart, and nonstop active routing, see the *Junos OS High Availability Library for Routing Devices*.



NOTE: Graceful restart software requirements depend on the routing protocols configured on the router. For the minimum software requirements for graceful restart, see the *Junos OS High Availability Library for Routing Devices*.

- See Also**
- [MX104 Routing Engine Overview on page 21](#)
 - [MX104 LEDs Overview on page 11](#)
 - [Maintaining the MX104 Routing Engines on page 202](#)
 - [Taking an MX104 Routing Engine Offline on page 164](#)

Taking an MX104 Routing Engine Offline

Before you take a Routing Engine offline, see “Effect of Taking the MX104 Routing Engine Offline” on page 162.

To take the Routing Engine offline:

1. Determine whether the Routing Engine is functioning as the master or as the backup, using one of the two following methods:
 - If the **MASTER** LED on the Routing Engine is lit, that Routing Engine is functioning as the master.
 - Issue the `show chassis routing-engine` command.

```

user@host> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)

```

The master Routing Engine is designated **Master** in the current state field.

2. If the Routing Engine is functioning as the master, switch it to backup using the **request chassis routing-engine master switch** command:

```
user@host> request chassis routing-engine master switch
```

3. On the console or other management device connected to the Routing Engine you are removing, enter CLI operational mode and issue the **request system halt** command. The command shuts down the Routing Engine cleanly, so its state information is preserved:

```
user@host> request system halt
```

Wait until a message appears on the console confirming that the operating system has halted.

For more information about the command, see the [CLI Explorer](#).



NOTE: The SCB might continue forwarding traffic for approximately five minutes after the **request system halt** command has been issued.

- See Also**
- [MX104 LEDs Overview on page 11](#)
 - [MX104 Routing Engine Overview on page 21](#)
 - [Maintaining the MX104 Routing Engines on page 202](#)

Removing an MX104 Routing Engine

Before you remove a Routing Engine, remove the cables that connect to it.



.....
CAUTION: Before you replace a Routing Engine, you must take the Routing Engine offline. If there is only one Routing Engine, taking the Routing Engine offline shuts down the router.
.....



.....
CAUTION: If the Routing Engine to be replaced is currently functioning as the master Routing engine, switch it to be the backup before removing it.
.....


To remove a Routing Engine from (see [Figure 45 on page 167](#)):

1. Take the Routing Engine offline gracefully.
2. Place an electrostatic bag or antistatic mat on a flat, stable surface.
3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Verify that the Routing Engine LEDs are off.
5. Loosen the captive screws on both sides of the Routing Engine.
6. Grasp the Routing Engine by the captive screws, and slide it about halfway out of the chassis.
7. Place one hand underneath the Routing Engine to support it, and slide it completely out of the chassis.
8. Place the Routing Engine on the antistatic mat.



.....
NOTE: To maintain proper airflow through the chassis, do not leave the chassis without a Routing Engine for extended periods of time. If a Routing Engine is removed, a replacement Routing Engine should be installed as soon as possible.
.....

Figure 45: Removing an MX104 Routing Engine

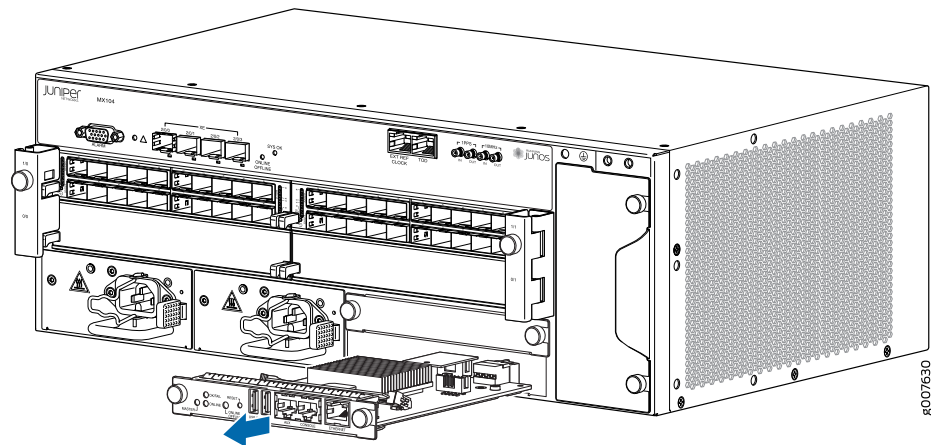

Installing an MX104 Routing Engine

To install a Routing Engine (see [Figure 44](#) on page 162):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place one hand underneath the Routing Engine to support it.
3. Carefully align the sides of the Routing Engine with the guides inside the opening on the chassis.
4. Slide the Routing Engine into the chassis until you feel resistance.
5. Tighten the captive screws on both sides of the Routing Engine.
6. Connect the management device cables to the Routing Engine.




NOTE: The Routing Engine might require several minutes to boot.

7. After the Routing Engine boots, verify that it is installed correctly:
 - Check the LEDs on the Routing Engine. If the router is operational and the Routing Engine is functioning properly, the green **ONLINE** LED lights steadily. If the red **OK/FAIL** LED lights steadily instead, remove and install the Routing Engine again. If the red **OK/FAIL** LED still lights steadily, the Routing Engine is not functioning properly. Contact your customer support representative.
 - Check the status of the Routing Engine, using the **show chassis environment routing-engine** CLI command:

```
user@ host > show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  Temperature     34 degrees C / 93 degrees F
  CPU Temperature 43 degrees C / 109 degrees F
Routing Engine 1 status:
  State           Online Standby
  Temperature     33 degrees C / 91 degrees F
  CPU Temperature 39 degrees C / 102 degrees F
```

If the router is operational and the Routing Engine is functioning properly, the state shows **Online Master** or **Online Standby**. For more information about using the **show chassis routing-engine** CLI command, see *show chassis environment routing-engine*.

Figure 46: Installing a Routing Engine

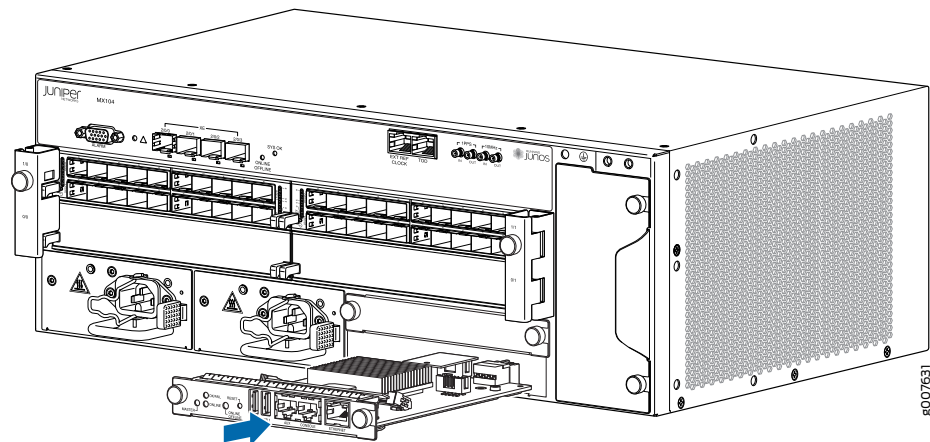

- See Also**
- [MX104 Routing Engine Overview on page 21](#)
 - [Maintaining the MX104 Routing Engines on page 202](#)
 - [Removing an MX104 Routing Engine on page 165](#)
 - [Effect of Taking the MX104 Routing Engine Offline on page 162](#)
 - [MX104 Routing Engine Serial Number Label on page 218](#)

- Related Documentation**
- [MX104 Routing Engine Overview on page 21](#)
 - [Maintaining the MX104 Routing Engines on page 202](#)

Replacing Line Card Components

- Installing an MX104 MIC on page 169
- Replacing an MX104 MIC on page 171
- Installing an MX104 Transceiver on page 175
- Replacing an MX104 Transceiver on page 176

Installing an MX104 MIC

To install a MIC (see [Figure 47 on page 171](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. If the MIC uses fiber-optic cable, verify that a rubber safety cap is over each transceiver on the faceplate. Install a cap if necessary.
3. Loosen the captive screw on the cover that is adjacent to the MIC slot. Swing the cover away from the MIC slot.
4. Align the rear of the MIC with the guides located at the corners of the MIC slot.
5. Slide the MIC into the MIC slot until it is firmly seated in the chassis.



CAUTION: Slide the MIC straight into the slot to avoid damaging the components on the MIC.

6. Swing the cover into place so that it sits over the MIC handle on one side.
7. Tighten the captive screw on the cover.
8. If the MIC uses fiber-optic cable, remove the rubber safety cap from each transceiver and the end of each cable.



.....
WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.
.....



.....
CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.
.....

9. Insert the appropriate cables into the cable connectors on the MIC.

10. Arrange each cable to prevent the cable from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



.....
CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.
.....




.....
CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.
.....

11. Bring the MIC online by issuing the following CLI command:

```
user@host> request chassis mic fpc-slot slot-number mic-slot slot-number online
```

The normal functioning status LED confirms that the MIC is online. You can also verify correct MIC functioning by issuing the **show chassis fpc pic-status** command described in [“Maintaining the MX104 MICs and Network Ports” on page 202](#).

Figure 47: Installing a MIC

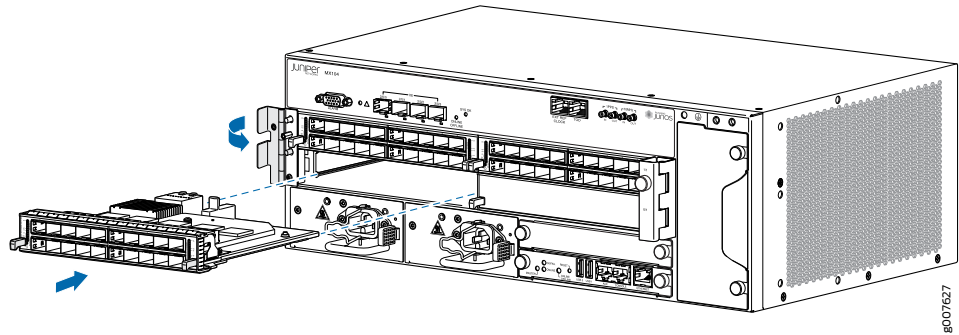

Related Documentation

- [MX104 Modular Interface Card \(MIC\) Overview on page 51](#)
- [Maintaining Cables That Connect to MX104 Network Ports on page 201](#)
- [Removing an MX104 MIC on page 171](#)

Replacing an MX104 MIC

1. [Removing an MX104 MIC on page 171](#)
2. [Installing an MX104 MIC on page 173](#)

Removing an MX104 MIC

MICs are hot-insertable and hot-removable. When you remove a MIC, the router continues to function, although the MIC interfaces being removed no longer function.

In the MX104 router, the MICs can be installed in four slots in the front of the router. A MIC weighs less than 2 lb (0.9 kg).

To remove a MIC (see [Figure 48 on page 173](#)):

1. Place an electrostatic bag or antistatic mat on a flat, stable surface to receive the MIC. If the MIC connects to fiber-optic cable, have ready a rubber safety cap for each transceiver and cable.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Use one of the following methods to take the MIC offline:
 - Press its online/offline button. Use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the MIC **OK/FAIL** LED goes off (about five seconds).
 - Issue the following CLI command:

```
user@host> request chassis mic fpc-slot slot-number mic-slot slot-number offline
```

4. Label the cables connected to the MIC so that you can later reconnect each cable to the correct MIC.
5. Disconnect the cables from the MIC. If the MIC uses a fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.


6. Arrange the cable to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

7. Loosen the captive screw on the cover that is adjacent to the MIC that you are removing. Swing the cover away from the MIC to expose the handles.
8. Grasp the handles on either side of the MIC faceplate, and slide the MIC out of the chassis. Place the MIC in the electrostatic bag or on the antistatic mat.
9. If you are not reinstalling a MIC into the emptied MIC slot within a short time, install a blank MIC panel over the slot to maintain proper airflow in the chassis card cage.

Figure 48: Removing a MIC

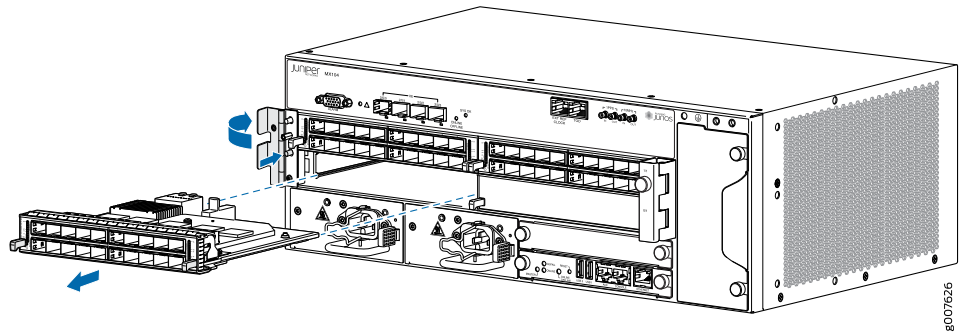

- See Also**
- [Maintaining the MX104 MICs and Network Ports on page 202](#)
 - [Installing an MX104 MIC on page 169](#)

Installing an MX104 MIC

To install a MIC (see [Figure 47 on page 171](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. If the MIC uses fiber-optic cable, verify that a rubber safety cap is over each transceiver on the faceplate. Install a cap if necessary.
3. Loosen the captive screw on the cover that is adjacent to the MIC slot. Swing the cover away from the MIC slot.
4. Align the rear of the MIC with the guides located at the corners of the MIC slot.
5. Slide the MIC into the MIC slot until it is firmly seated in the chassis.



CAUTION: Slide the MIC straight into the slot to avoid damaging the components on the MIC.

6. Swing the cover into place so that it sits over the MIC handle on one side.
7. Tighten the captive screw on the cover.
8. If the MIC uses fiber-optic cable, remove the rubber safety cap from each transceiver and the end of each cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

9. Insert the appropriate cables into the cable connectors on the MIC.
10. Arrange each cable to prevent the cable from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.




CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

11. Bring the MIC online by issuing the following CLI command:

```
user@host> request chassis mic fpc-slot slot-number mic-slot slot-number online
```

The normal functioning status LED confirms that the MIC is online. You can also verify correct MIC functioning by issuing the **show chassis fpc pic-status** command described in [“Maintaining the MX104 MICs and Network Ports” on page 202](#).

Figure 49: Installing a MIC

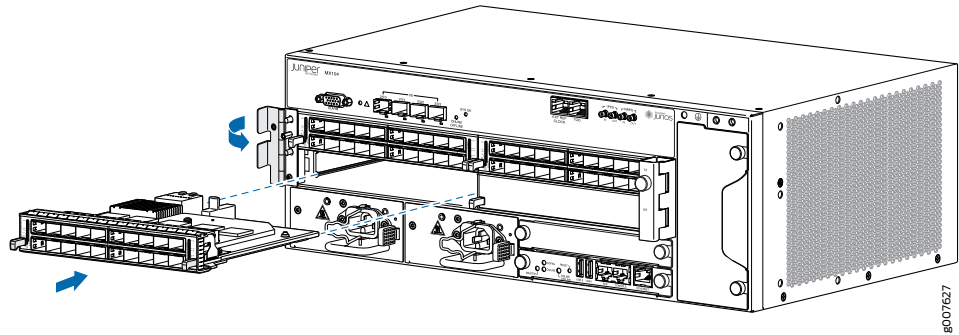

- See Also**
- [MX104 Modular Interface Card \(MIC\) Overview on page 51](#)
 - [Maintaining Cables That Connect to MX104 Network Ports on page 201](#)
 - [Removing an MX104 MIC on page 171](#)

- Related Documentation**
- [MX104 Modular Interface Card \(MIC\) Overview on page 51](#)
 - [Maintaining Cables That Connect to MX104 Network Ports on page 201](#)

Installing an MX104 Transceiver

To install a transceiver:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Take each transceiver to be installed out of its electrostatic bag, and identify the slot on the component where it will be installed.
3. Verify that each transceiver is covered by a rubber safety cap. If it is not, cover the transceiver with a safety cap.
4. Carefully align the transceiver with the slots in the component. The connectors should face the component.
5. Slide the transceiver until the connector is seated in the component slot. If you are unable to fully insert the transceiver, make sure the connector is facing the right way.
6. Close the ejector handle of the transceiver.
7. Remove the rubber safety cap from the transceiver and the end of the cable. Insert the cable into the transceiver.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.

8. Verify that the status LEDs on the front panel indicate that the transceiver is functioning correctly. For more information about the component LEDs, see the “[MX104 LEDs Overview](#)” on page 11.

Related Documentation

- [MX104 Chassis Overview on page 4](#)
- [MX104 Modular Interface Card \(MIC\) Overview on page 51](#)
- [Maintaining the MX104 MICs and Network Ports on page 202](#)
- [Removing an MX104 Transceiver on page 176](#)

Replacing an MX104 Transceiver

Small form-factor pluggable transceivers (SFPs) are optical transceivers that are installed in the front panel of the MX104 router. Transceivers are hot-insertable and hot-removable.

1. [Removing an MX104 Transceiver on page 176](#)
2. [Installing an MX104 Transceiver on page 178](#)

Removing an MX104 Transceiver

Removing a transceiver does not interrupt router functioning, but the removed transceiver no longer receives or transmits data.

To remove a transceiver (see [Figure 50 on page 177](#)):

1. Have ready a replacement transceiver or a transceiver slot plug, an antistatic mat, and a rubber safety cap for the transceiver.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Label the cables connected to the transceiver so that you can reconnect them correctly later.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.

4. Remove the cable connector from the transceiver.

- Pull the ejector handle out from the transceiver to unlock the transceiver.




CAUTION: Make sure that you open the ejector handle completely until you hear it click. This action prevents damage to the transceiver.

Use needlenose pliers to pull the ejector handle out from the transceiver.

- Grasp the transceiver ejector handle, and pull the transceiver approximately 0.5 in. (1.3 cm) out of the router.
- Using your fingers, grasp the body of the transceiver, and pull it the rest of the way out of the router.

Figure 50: Removing Transceivers

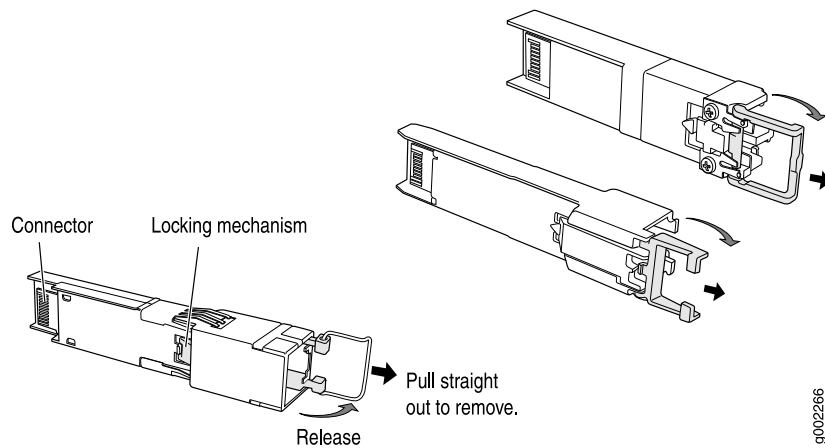

- Place a rubber safety cap over the transceiver.
- Place the removed transceiver on an antistatic mat or in an electrostatic bag.



CAUTION: After removing a transceiver from the chassis, wait at least 30 seconds before reinserting it or inserting a transceiver into a different slot.

- See Also**
- [MX104 Chassis Overview on page 4](#)
 - [MX104 Modular Interface Card \(MIC\) Overview on page 51](#)
 - [Maintaining the MX104 MICs and Network Ports on page 202](#)
 - [Installing an MX104 Transceiver on page 175](#)

Installing an MX104 Transceiver

To install a transceiver:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Take each transceiver to be installed out of its electrostatic bag, and identify the slot on the component where it will be installed.
3. Verify that each transceiver is covered by a rubber safety cap. If it is not, cover the transceiver with a safety cap.
4. Carefully align the transceiver with the slots in the component. The connectors should face the component.
5. Slide the transceiver until the connector is seated in the component slot. If you are unable to fully insert the transceiver, make sure the connector is facing the right way.
6. Close the ejector handle of the transceiver.
7. Remove the rubber safety cap from the transceiver and the end of the cable. Insert the cable into the transceiver.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.

8. Verify that the status LEDs on the front panel indicate that the transceiver is functioning correctly. For more information about the component LEDs, see the [“MX104 LEDs Overview” on page 11](#).

- See Also**
- [MX104 Chassis Overview on page 4](#)
 - [MX104 Modular Interface Card \(MIC\) Overview on page 51](#)
 - [Maintaining the MX104 MICs and Network Ports on page 202](#)
 - [Removing an MX104 Transceiver on page 176](#)

- Related Documentation**
- [MX104 Chassis Overview on page 4](#)
 - [MX104 Modular Interface Card \(MIC\) Overview on page 51](#)
 - [Maintaining the MX104 MICs and Network Ports on page 202](#)

Replacing Power System Components

- [Installing an MX104 AC Power Supply on page 179](#)
- [Replacing an MX104 AC Power Supply on page 180](#)
- [Installing an MX104 DC Power Supply on page 183](#)
- [Replacing an MX104 DC Power Supply on page 187](#)


Installing an MX104 AC Power Supply

To install an AC power supply (see [Figure 51 on page 180](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
3. Attach the power cord to the power supply.
4. Secure the power cord with the power cord retainer clip.
5. Attach the power cord to the AC power source, and switch on the dedicated customer site circuit breaker. Follow the instructions for your site.

Observe the status LED on the power supply faceplate. If the power supply is correctly installed and functioning normally, the status LED lights green steadily.

Figure 51: Installing an AC Power Supply

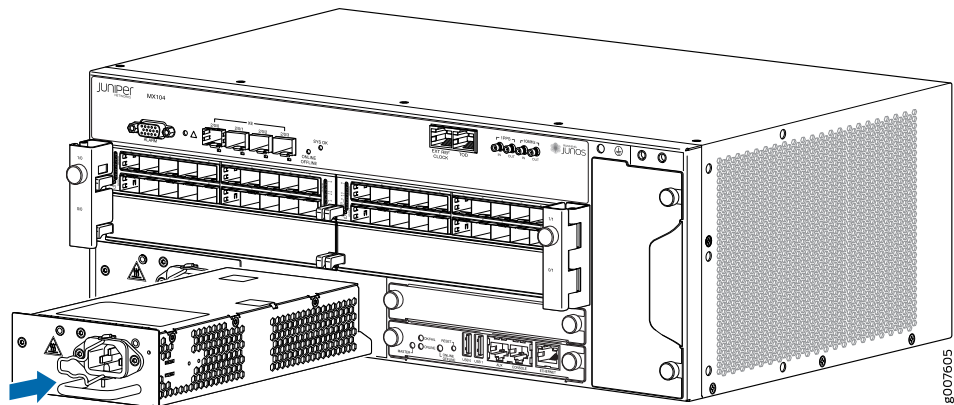

Related Documentation

- [Connecting AC Power Cords to the MX104 Router on page 123](#)
- [Removing an MX104 AC Power Supply on page 180](#)
- [MX104 AC Power Specifications on page 103](#)
- [MX104 AC Power Cord Specifications on page 104](#)

Replacing an MX104 AC Power Supply

1. [Removing an MX104 AC Power Supply on page 180](#)
2. [Installing an MX104 AC Power Supply on page 182](#)

Removing an MX104 AC Power Supply

Before you remove a power supply, be aware of the following:



NOTE: The minimum number of power supplies must be present in the router at all times.



CAUTION: To maintain proper cooling and prevent thermal shutdown of the operating power supply unit, each power supply slot must contain either a power supply or a blank panel. If you remove a power supply, you must install a replacement power supply or a blank panel shortly after the removal.



NOTE: After powering off a power supply, wait at least 60 seconds before turning it back on.

To remove an AC power supply (see [Figure 53 on page 182](#)):

1. Switch off the dedicated customer site circuit breaker for the power supply, and remove the power cord from the AC power source. Follow the instructions for your site.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Swing the power cord retention clip out of the way of the power cord.
4. Remove the power cord from the power supply.
5. Press the release latch on the right side of the power supply to disconnect the power supply from the chassis.
6. Pull the power supply straight out of the chassis.

Figure 52: Removing an AC Power Cord


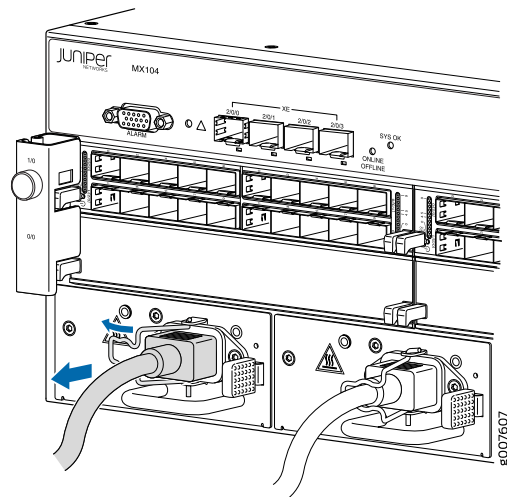


Figure 53: Removing an AC Power Supply

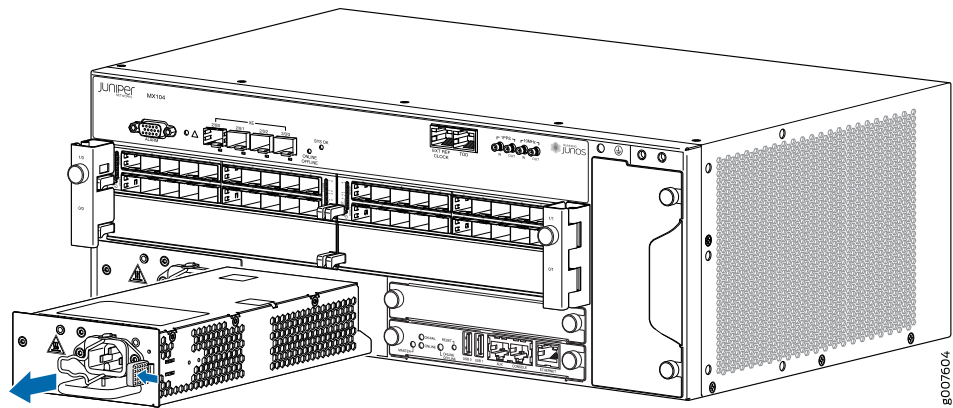

- See Also**
- [Connecting AC Power Cords to the MX104 Router on page 123](#)
 - [Installing an MX104 AC Power Supply on page 179](#)
 - [MX104 AC Power Specifications on page 103](#)
 - [MX104 AC Power Cord Specifications on page 104](#)

Installing an MX104 AC Power Supply

To install an AC power supply (see [Figure 51 on page 180](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
3. Attach the power cord to the power supply.
4. Secure the power cord with the power cord retainer clip.
5. Attach the power cord to the AC power source, and switch on the dedicated customer site circuit breaker. Follow the instructions for your site.


Observe the status LED on the power supply faceplate. If the power supply is correctly installed and functioning normally, the status LED lights green steadily.

- M6 screws and washers (two per DC power supply, attached)
- Grounding cable, minimum 14 AWG or as required by local code (not provided)

To install a DC power supply (see [Figure 56 on page 186](#)):

1. Ensure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cable leads might become active during installation.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
4. Remove the clear plastic cover protecting the terminal on the faceplate.
5. Ground the DC power supply (see [Figure 55 on page 184](#)):
 - Remove the nut and washer from the grounding point on the power supply.
 - Secure each grounding cable lug to the grounding point with the washer and nut.

Figure 55: Connecting a DC Power Supply Grounding Cable

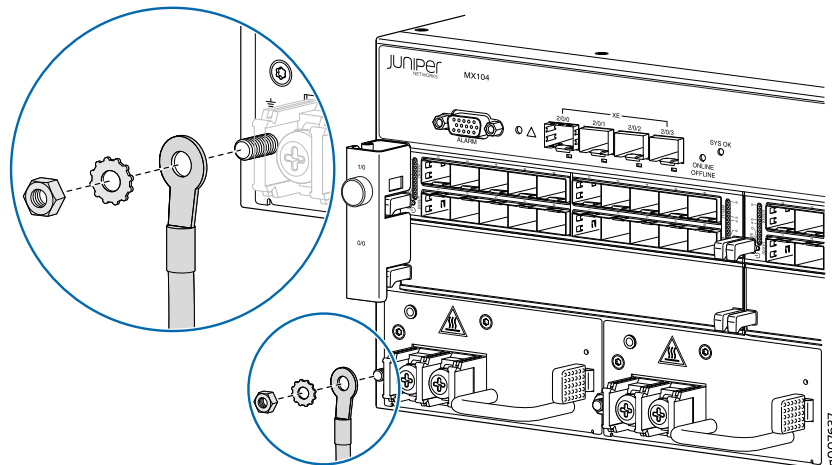

6. Remove the screws and washers from the DC terminals.
7. Verify that the DC power cables are correctly labeled before making connections to the power supply. In a typical power distribution scheme where the return is connected to chassis ground at the battery plant, you can use a multimeter to verify the resistance of the DC cables to chassis ground:

For –48V and –60V:

- a. The cable with very high resistance (indicating an open circuit) to chassis ground is the DC input cable (–).
- b. The cable with very low resistance (indicating a closed circuit) to chassis ground is the return cable (+).

For +24V:

- a. The cable with very low resistance (indicating a closed circuit) to chassis ground is the DC input cable (–).
 - b. The cable with very high resistance (indicating an open circuit) to chassis ground is the return cable (+).
8. Secure each power cable lug to the terminal with the flat washers and screw (see [Figure 57 on page 186](#)). Apply up to 27.4 lb-in. (3.1 Nm) of torque to each screw. Do not overtighten the screw. (Use a number 2 Phillips screwdriver.)
- a. Secure the positive DC source power cable lug to the return (+) terminal.
 - b. Secure the negative DC source power cable lug to the input (–) terminal.



CAUTION: Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the screws. Ensure that each screw is properly threaded into the terminal. Applying installation torque to the screw when improperly threaded may result in damage to the terminal.



CAUTION: The maximum torque rating of the terminal screws on the DC power supply is 27.4 lb-in. (3.1 Nm). The terminal screws may be damaged if excessive torque is applied. Use only a torque-controlled driver to tighten screws on the DC power supply terminals. Use an appropriately sized driver, with a maximum torque capacity of 27.4 lb-in. or less. Ensure that the driver is undamaged and properly calibrated and that you have been trained in its use. You may wish to use a driver that is designed to prevent overtorque when the preset torque level is achieved.

9. Replace the clear plastic cover over the terminals on the faceplate.
10. Connect each DC power cable to the appropriate external DC power source.

- [MX104 DC Power Electrical Safety Guidelines on page 257](#)
- [DC Power Electrical Safety Warnings for Juniper Networks Devices on page 258](#)
- [MX104 DC Power Specifications on page 107](#)
- [MX104 DC Power Cable and Lug Specifications on page 108](#)

Replacing an MX104 DC Power Supply

1. [Removing an MX104 DC Power Supply on page 187](#)
2. [Installing an MX104 DC Power Supply on page 190](#)

Removing an MX104 DC Power Supply

To remove a DC power supply from the router, you need the following tools:

- Phillips (+) screwdriver, number 2
- ESD grounding wrist strap

Before you remove a power supply, be aware of the following:



NOTE: The minimum number of power supplies must be present in the router at all times.



WARNING: Before performing DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.



CAUTION: To maintain proper cooling and prevent thermal shutdown of the operating power supply unit, each power supply slot must contain either a power supply or a blank panel. If you remove a power supply, you must install a replacement power supply or a blank panel shortly after the removal.



NOTE: After powering off a power supply, wait at least 60 seconds before turning it back on.

To remove a DC power supply (see [Figure 60 on page 189](#)):

1. Switch off the dedicated customer site circuit breaker for the power supply being removed. Follow your site's procedures for ESD.
2. Make sure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cables might become active during the removal process.
3. Verify that the status LED on the power supply is not lit.
4. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
5. Remove the clear plastic cover protecting the terminal studs on the faceplate (see [Figure 58 on page 189](#)).
6. Remove the screw and washer from each of the terminals. (Use a number 2 Phillips screwdriver.)
7. Remove the cable lugs from the terminals.
8. Carefully move the power cables out of the way.
9. Remove the nut and washer from the DC power supply grounding point (see [Figure 59 on page 189](#)).
10. Remove the cable lug from the grounding point.
11. Move the grounding cable out of the way.
12. Press the release latch on the right side of the power supply to disconnect the power supply from the chassis.
13. Grasp the handle on the power supply and pull the power supply straight out of the chassis.

Figure 58: Disconnecting the DC Power Cables

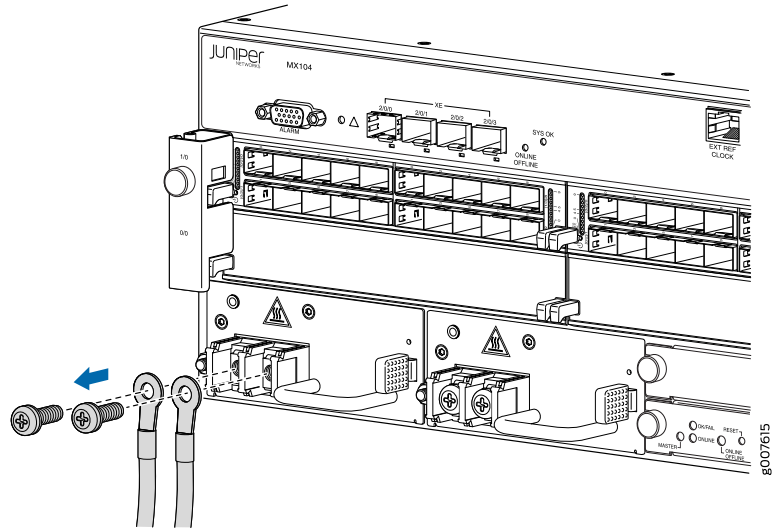


Figure 59: Disconnecting the Grounding Cable


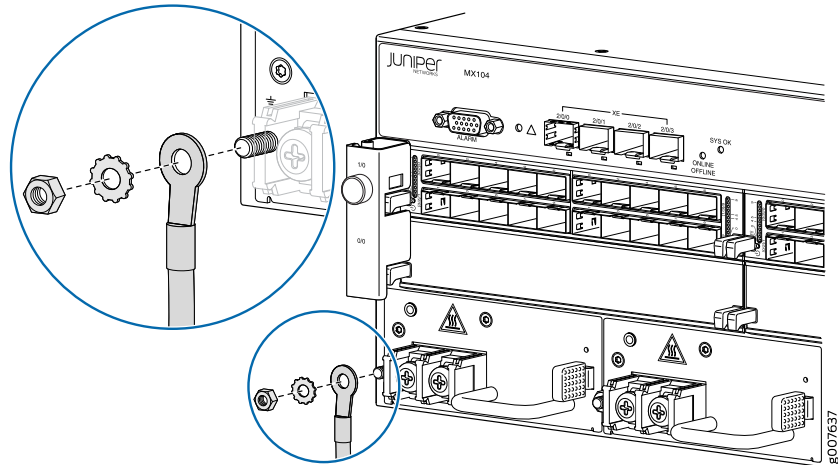


Figure 60: Removing a DC Power Supply



- See Also**
- [Connecting the MX104 Router to Earth Ground on page 121](#)
 - [MX104 Router Grounding Specifications on page 84](#)
 - [Installing an MX104 DC Power Supply on page 183](#)
 - [MX104 DC Power Electrical Safety Guidelines on page 257](#)
 - [DC Power Electrical Safety Warnings for Juniper Networks Devices on page 258](#)
 - [MX104 DC Power Specifications on page 107](#)
 - [MX104 DC Power Cable and Lug Specifications on page 108](#)

Installing an MX104 DC Power Supply

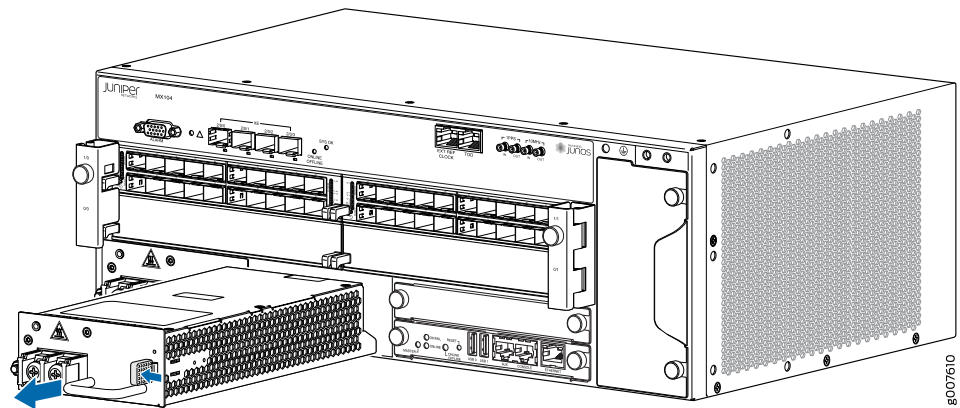

WARNING: Before performing DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

To install a DC power supply in the router, you need the following tools:


- Phillips (+) screwdriver, number 2
- ESD grounding wrist strap
- Grounding ring lug with hole sized for an M5 screw
- M5 nut and washer (one per DC power supply, attached)
- DC power source cables, minimum 14 AWG or as required by local code (not provided)
- DC power ring lugs, Panduit PV12-14HDRB-2k
- M6 screws and washers (two per DC power supply, attached)
- Grounding cable, minimum 14 AWG or as required by local code (not provided)

To install a DC power supply (see [Figure 56 on page 186](#)):

1. Ensure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cable leads might become active during installation.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
4. Remove the clear plastic cover protecting the terminal on the faceplate.

5. Ground the DC power supply (see [Figure 55 on page 184](#)):
 - Remove the nut and washer from the grounding point on the power supply.
 - Secure each grounding cable lug to the grounding point with the washer and nut.

Figure 61: Connecting a DC Power Supply Grounding Cable

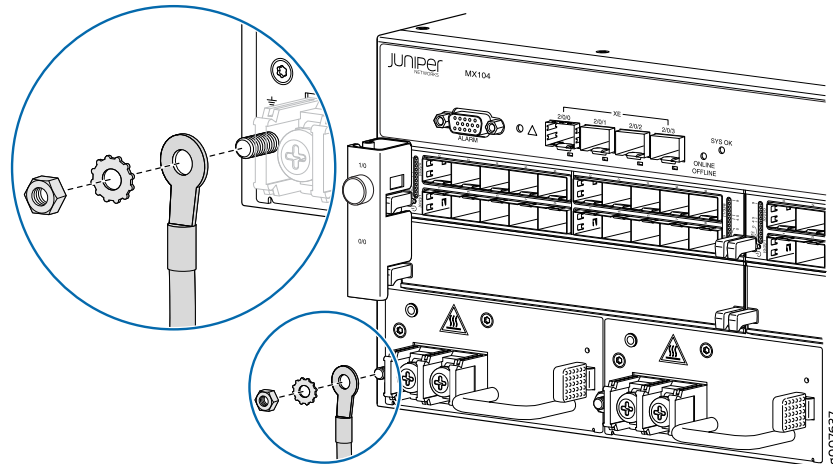

6. Remove the screws and washers from the DC terminals.
7. Verify that the DC power cables are correctly labeled before making connections to the power supply. In a typical power distribution scheme where the return is connected to chassis ground at the battery plant, you can use a multimeter to verify the resistance of the DC cables to chassis ground:

For -48V and -60V :

 - a. The cable with very high resistance (indicating an open circuit) to chassis ground is the DC input cable ($-$).
 - b. The cable with very low resistance (indicating a closed circuit) to chassis ground is the return cable ($+$).

For $+24\text{V}$:

 - a. The cable with very low resistance (indicating a closed circuit) to chassis ground is the DC input cable ($-$).
 - b. The cable with very high resistance (indicating an open circuit) to chassis ground is the return cable ($+$).
8. Secure each power cable lug to the terminal with the flat washers and screw (see [Figure 57 on page 186](#)). Apply up to 27.4 lb-in. (3.1 Nm) of torque to each screw. Do not overtighten the screw. (Use a number 2 Phillips screwdriver.)
 - a. Secure the positive DC source power cable lug to the return ($+$) terminal.
 - b. Secure the negative DC source power cable lug to the input ($-$) terminal.



CAUTION: Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the screws. Ensure that each screw is properly threaded into the terminal. Applying installation torque to the screw when improperly threaded may result in damage to the terminal.



CAUTION: The maximum torque rating of the terminal screws on the DC power supply is 27.4 lb-in. (3.1 Nm). The terminal screws may be damaged if excessive torque is applied. Use only a torque-controlled driver to tighten screws on the DC power supply terminals. Use an appropriately sized driver, with a maximum torque capacity of 27.4 lb-in. or less. Ensure that the driver is undamaged and properly calibrated and that you have been trained in its use. You may wish to use a driver that is designed to prevent overtorque when the preset torque level is achieved.

9. Replace the clear plastic cover over the terminals on the faceplate.
10. Connect each DC power cable to the appropriate external DC power source.



NOTE: For information about connecting to external DC power sources, see the instructions for your site.

11. Switch on the external circuit breakers to provide voltage to the DC power source cable leads. Observe the system LED on the front of the router. If the DC power cable is correctly installed and functioning normally, the system LED lights green steadily. If the status LED indicates that the power supply is not functioning normally, repeat the installation and cabling procedures.

Figure 62: Installing a DC Power Supply


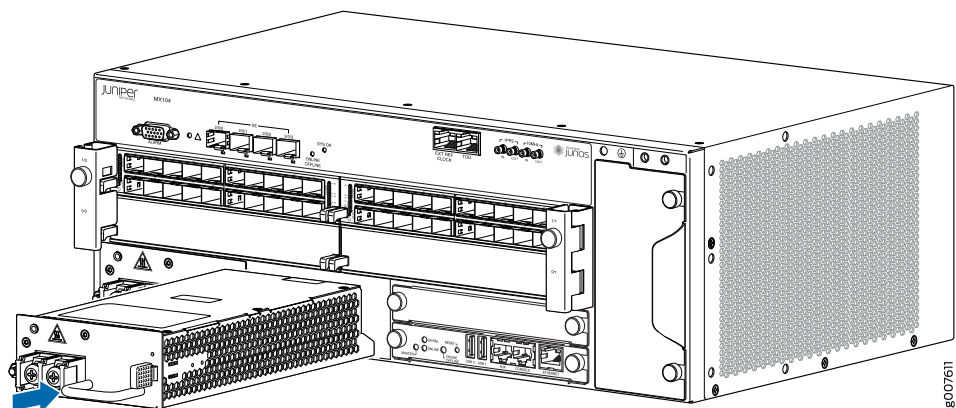


Figure 63: Connecting the DC Power Cables

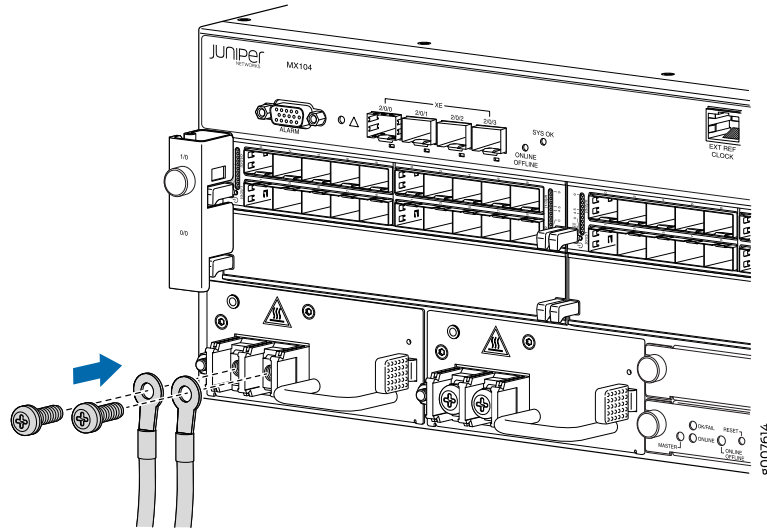

- See Also**
- [Connecting the MX104 Router to Earth Ground on page 121](#)
 - [MX104 Router Grounding Specifications on page 84](#)
 - [Removing an MX104 DC Power Supply on page 187](#)
 - [MX104 DC Power Electrical Safety Guidelines on page 257](#)
 - [DC Power Electrical Safety Warnings for Juniper Networks Devices on page 258](#)
 - [MX104 DC Power Specifications on page 107](#)
 - [MX104 DC Power Cable and Lug Specifications on page 108](#)

- Related Documentation**
- [Connecting the MX104 Router to Earth Ground on page 121](#)
 - [MX104 Router Grounding Specifications on page 84](#)
 - [MX104 DC Power Electrical Safety Guidelines on page 257](#)
 - [DC Power Electrical Safety Warnings for Juniper Networks Devices on page 258](#)
 - [MX104 DC Power Specifications on page 107](#)
 - [MX104 DC Power Cable and Lug Specifications on page 108](#)

PART 5

Maintaining the Chassis and Components

- [Routine Maintenance Procedures on page 197](#)
- [Maintaining Components on page 199](#)

Routine Maintenance Procedures

- [Routine Maintenance Procedures for the MX104 Router on page 197](#)

Routine Maintenance Procedures for the MX104 Router

Purpose For optimum router performance, perform preventive maintenance procedures.

- Action**
- Inspect the installation site for moisture, loose wires or cables, and excessive dust. Make sure that airflow is unobstructed around the router and into the air intake vents.
 - Inspect the air filter on the side of the fan tray, replacing them every six months. Do not run the router for more than a few minutes without the air filter in place.
 - Check the status-reporting devices on the front panel: system alarms and LEDs.

- Related Documentation**
- [Maintaining Cables That Connect to MX104 Network Ports on page 201](#)
 - [Maintaining the MX104 MICs and Network Ports on page 202](#)
 - [Maintaining the MX104 Air Filter on page 200](#)

Maintaining Components

- [Maintaining the MX104 Cooling System on page 199](#)
- [Maintaining the MX104 Air Filter on page 200](#)
- [Maintaining Cables That Connect to MX104 Network Ports on page 201](#)
- [Maintaining the MX104 MICs and Network Ports on page 202](#)
- [Maintaining the MX104 Routing Engines on page 202](#)

Maintaining the MX104 Cooling System

Purpose For optimum cooling, verify the condition of the fans.

Action The router has a single fan tray that installs into the front of the chassis, as shown in “MX104 3D Universal Edge Router Overview” on page 3.

To check the status of the fans in the fan tray, issue the **show chassis environment** command. The output includes an entry for each fan in the fan tray:

```
user@host> show chassis environment
Class Item                               Status      Measurement
Temp  PEM 0                                 OK          27 degrees C / 80 degrees F
      PEM 1                                 OK          18 degrees C / 64 degrees F
      ABB 0 Intake                          OK          29 degrees C / 84 degrees F
      ABB 0 Exhaust A                      OK          34 degrees C / 93 degrees F
      ABB 0 Exhaust B                      OK          36 degrees C / 96 degrees F
      ABB 1 Intake                          OK          29 degrees C / 84 degrees F
      ABB 1 Exhaust A                      OK          34 degrees C / 93 degrees F
      ABB 1 Exhaust B                      OK          36 degrees C / 96 degrees F
      Routing Engine 0                     OK          31 degrees C / 87 degrees F
      Routing Engine 0 CPU                  OK          39 degrees C / 102 degrees F
      Routing Engine 1                     Present
      Routing Engine 1 CPU                  Present
      AFEB 0 AFEB Processor                OK          28 degrees C / 82 degrees F
      AFEB 0 LU Temp                       OK          40 degrees C / 104 degrees F
      AFEB 0 MQ Temp                       OK          38 degrees C / 100 degrees F
      AFEB 0 QX Temp                       OK          40 degrees C / 104 degrees F
Pic   PIC 0/0 Channel 0                     OK          40 degrees C / 104 degrees F
      PIC 0/0 Channel 1                     OK          40 degrees C / 104 degrees F
      PIC 0/0 Channel 2                     OK          39 degrees C / 102 degrees F
      PIC 0/0 Channel 3                     OK          39 degrees C / 102 degrees F
      PIC 0/0 Channel 4                     OK          39 degrees C / 102 degrees F
      PIC 0/0 Channel 5                     OK          28 degrees C / 82 degrees F
```

	PIC 0/0 Channel 6	OK	29 degrees C / 84 degrees F
	PIC 0/0 Channel 7	OK	28 degrees C / 82 degrees F
	PIC 0/0 Channel 8	OK	44 degrees C / 111 degrees F
	PIC 1/0 Channel 0	OK	45 degrees C / 113 degrees F
	PIC 1/0 Channel 1	OK	30 degrees C / 86 degrees F
	PIC 1/0 Channel 2	OK	31 degrees C / 87 degrees F
	PIC 1/2 Channel 0	OK	42 degrees C / 107 degrees F
	PIC 1/2 Channel 1	OK	29 degrees C / 84 degrees F
	PIC 1/2 Channel 2	OK	30 degrees C / 86 degrees F
Fans	Fan 1	Check	
	Fan 2	OK	Spinning at high speed
	Fan 3	OK	Spinning at high speed
	Fan 4	OK	Spinning at high speed
	Fan 5	OK	Spinning at high speed

Meaning **Check** is displayed in the **Status** column if a fan that is not functioning. **OK** is displayed in the **Status** column if the fan is functioning normally.

For further description of the output from the command, see the *show chassis environment* command summary in the [CLI Explorer](#).

- Related Documentation**
- [MX104 Cooling System and Airflow Overview on page 19](#)
 - [Replacing an MX104 Fan Tray on page 156](#)

Maintaining the MX104 Air Filter

Purpose For optimum cooling, verify the condition of the air filter.

- Action**
- Regularly inspect the air filter. A dirty air filter restricts airflow in the unit, producing a negative effect on the ventilation of the chassis. The filter degrades over time. You must replace the filter every 6 months.



CAUTION: Always keep the air filter in place while the router is operating. Because the fans are very powerful, they could pull small bits of wire or other materials into the router through the unfiltered air intake. This could damage the router components.

- The shelf life of polyurethane filter varies from two years to five years depending on the storage conditions. Store in a cool, dry, and dark environment. Wrap the media in plastic and store in an environment with relative humidity between 40%- 80% and temperature between 40°F (4° C) to 90°F (32° C). Note that if the material flakes, or becomes brittle when rubbed or deformed, it is no longer usable.

- Related Documentation**
- [Replacing an MX104 Air Filter on page 153](#)
 - [Routine Maintenance Procedures for the MX104 Router on page 197](#)

Maintaining Cables That Connect to MX104 Network Ports

Purpose For optimum router performance, verify the condition of the cables that connect to the network ports.

Action On a regular basis:

- Use the cable management bracket to support cables and prevent cables from dislodging or developing stress points.
- Place excess cable out of the way in the cable management bracket. Do not allow fastened loops of cable to dangle from the connector or cable management bracket, because this stresses the cable at the fastening point. Putting fasteners on the loops helps to maintain their shape.
- Keep the cable connections clean and free of dust and other particles, which can cause drops in the received power level. Always inspect cables, and clean them if necessary before connecting an interface.
- Label both ends of the cables to identify them.

The following guidelines apply specifically to fiber-optic cables:

- When you unplug a fiber-optic cable, always place a rubber safety plug over the transceiver on the faceplate and on the end of the cable.
- Anchor fiber-optic cables to avoid stress on the connectors. Be sure to secure fiber-optic cables so that they do not support their own weight as they hang to the floor. Never let fiber-optic cable hang free from the connector.
- Avoid bending fiber-optic cable beyond its bend radius. An arc smaller than a few inches can damage the cable and cause problems that are difficult to diagnose.
- Frequent plugging and unplugging of fiber-optic cable into and out of optical instruments can cause damage to the instruments that is expensive to repair. Instead, attach a short fiber extension to the optical equipment. Any wear and tear due to frequent plugging and unplugging is then absorbed by the short fiber extension, which is easy and inexpensive to replace.
- Keep fiber-optic cable connections clean. Small microdeposits of oil and dust in the canal of the transceiver or cable connector could cause loss of light, reducing signal power and possibly causing intermittent problems with the optical connection.

To clean the transceivers, use an appropriate fiber-cleaning device, such as RIFOCs Fiber Optic Adaptor Cleaning Wands (part number 946). Follow the directions for the cleaning kit you use.

After you clean an optical transceiver, make sure that the connector tip of the fiber-optic cable is clean. Use only an approved alcohol-free fiber-optic cable cleaning kit, such as the Optex Cletop-S Fiber Cleaner. Follow the directions for the cleaning kit you use.

- Related Documentation**
- [Routine Maintenance Procedures for the MX104 Router on page 197](#)
 - [Troubleshooting Resources for MX104 Routers on page 207](#)
 - [Replacing an MX104 Fiber-Optic Cable on page 147](#)
 - [Replacing an MX104 Transceiver on page 176](#)

Maintaining the MX104 MICs and Network Ports

Purpose For optimum performance, verify the condition of the network ports.

Action On a regular basis:

- Check the port LEDs. The meaning of the LED states differs for various uplink ports. For more information, see “[MX104 LEDs Overview](#)” on [page 11](#). If the router detects a port failure, the router generates an alarm message to be sent to the Routing Engine. A green status LED indicates that the port is functioning normally.
- From the CLI, issue the **show chassis fpc pic-status** command.

```
user@host> show chassis fpc pic-status
Slot 0  Online
  PIC 0  Online      10x 1GE(LAN) SFP
  PIC 1  Online      10x 1GE(LAN) SFP
  PIC 2  Online      1xCOC12/4xCOC3 CH-CE
Slot 1  Online
  PIC 0  Online      10x 1GE(LAN) SFP
  PIC 1  Online      10x 1GE(LAN) SFP
Slot 2  Online
  PIC 0  Online      4x 10GE(LAN) SFP+
```

Meaning **Online** is displayed in the second column if a MIC is functioning normally.

For further description of the output from the command, see the *show chassis fpc* command summary in the [CLI Explorer](#).

- Related Documentation**
- [MX104 Hardware and CLI Terminology Mapping on page 6](#)

Maintaining the MX104 Routing Engines

Purpose For optimum router performance, verify the condition of the Routing Engines.

Action On a regular basis:

- Check the Routing Engine LEDs. For more information about the LEDs and the display, see “[MX104 Routing Engine LEDs](#)” on [page 23](#).

- Issue the **show chassis routing-engine** command to check the status of the Routing Engines. The output is similar to the following:

```

user@host> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state           Master
  Election priority      Master (default)
  Temperature            34 degrees C / 93 degrees F
  CPU temperature        43 degrees C / 109 degrees F
  DRAM                   3840 MB (3840 MB installed)
  Memory utilization     34 percent
  CPU utilization:
    User                 0 percent
    Background          0 percent
    Kernel               3 percent
    Interrupt            3 percent
    Idle                 94 percent
  Model                  RE-S-MX104
  Serial ID              CAAR5925
  Start time             2013-05-24 16:33:54 IST
  Uptime                 2 days, 20 hours, 11 minutes, 15 seconds
  Last reboot reason     0x200:normal shutdown
  Load averages:        1 minute  5 minute  15 minute
                       0.13      0.04      0.01

Routing Engine status:
Slot 1:
  Current state           Backup
  Election priority      Backup (default)
  Temperature            36 degrees C / 96 degrees F
  CPU temperature        42 degrees C / 107 degrees F
  DRAM                   3840 MB (3840 MB installed)
  Memory utilization     23 percent
  CPU utilization:
    User                 0 percent
    Background          0 percent
    Kernel               1 percent
    Interrupt            2 percent
    Idle                 97 percent
  Model                  RE-S-MX104
  Serial ID              CAAM6369
  Start time             2013-05-24 16:34:14 IST
  Uptime                 2 days, 20 hours, 10 minutes, 47 seconds
  Last reboot reason     0x200:normal shutdown
  Load averages:        1 minute  5 minute  15 minute
                       0.00      0.00      0.00

```

Meaning The command output displays the Routing Engine slot number, current state (**Master**, **Backup**, or **Disabled**), election priority (**Master** or **Backup**), and airflow temperature. The command output also displays the total DRAM available to the Routing Engine processor, the CPU utilization percentage, and the Routing Engine serial number for the slot. Additionally, the command output displays when the Routing Engine started running, how long the Routing Engine has been running, and the time, uptime, and load averages for the last 1, 5, and 15 minutes.

Check the **Uptime** to ensure that the Routing Engine has not rebooted since it started running.

To check the Routing Engine environmental status information, such as the operating state, function, and operating temperature, use the **show chassis environment routing-engine** command:

```
user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State           Online Master
  Temperature     37 degrees C / 98 degrees F
  CPU Temperature 47 degrees C / 116 degrees F
Routing Engine 1 status:
  State           Present
```

For further description of the output from the command, see the *show chassis routing-engine* command summary in the [CLI Explorer](#).

PART 6

Troubleshooting Hardware

- [Troubleshooting Components on page 207](#)

CHAPTER 26

Troubleshooting Components

- [Troubleshooting Resources for MX104 Routers on page 207](#)
- [Understanding Alarm Types and Severity Classes on MX104 Routers on page 208](#)
- [Verifying Active Alarms on MX104 Routers on page 209](#)
- [Monitoring System Log Messages on MX104 Routers on page 210](#)

Troubleshooting Resources for MX104 Routers

- [Command-Line Interface on page 207](#)
- [Front Panel LEDs on page 207](#)
- [Alarm Devices and Messages on page 208](#)

Command-Line Interface

The Junos OS command-line interface (CLI) is the primary tool for controlling and troubleshooting router hardware, the Junos OS, routing protocols, and network connectivity. CLI commands display information from routing tables, information specific to routing protocols, and information about network connectivity derived from the **ping** and **traceroute** utilities.

You enter CLI commands on one or more external management devices connected to ports on the front panel.

For information about using the CLI to troubleshoot the Junos OS, see the appropriate Junos OS configuration guide.

Front Panel LEDs

The front panel on the router contains LEDs that allow you to troubleshoot the router.

LEDs on the front panel include the following:

- **System LED**—One LED labeled **SYS OK** on the front panel indicates the status of the router.
- **Alarm LEDs**—One yellow and one red LED on the front panel indicate major and minor alarms.

For more information about component and front panel LEDs, see “[MX104 LEDs Overview](#)” on page 11.

Alarm Devices and Messages

When a major or minor alarm occurs, it logs the cause of the alarm. If the alarm relay contact is connected to alarm devices, the router also trips the corresponding alarm relay contact.

To view a detailed description of the alarm cause, issue the **show chassis alarms** command:

```
user@host> show chassis alarms
```

Related Documentation

- [Understanding Alarm Types and Severity Classes on MX104 Routers on page 208](#)
- [Verifying Active Alarms on MX104 Routers on page 209](#)
- [Monitoring System Log Messages on MX104 Routers on page 210](#)

Understanding Alarm Types and Severity Classes on MX104 Routers

Before monitoring alarms on the router, become familiar with the terms defined in [Table 82 on page 208](#).

Table 82: Alarm Terms

Term	Definition
alarm	Signal alerting you to conditions that might prevent normal operation. On a router, the alarm signal is the red system LED lit on the front of the chassis.
alarm condition	Failure event that triggers an alarm.
alarm severity	Seriousness of the alarm. The level of severity can be either major (steady red) or minor (blinking red).
chassis alarm	Predefined alarm triggered by a physical condition on the router or one of the router components. Alarms may be triggered by events such as a power failure, excessive component temperature, or media failure. Chassis alarms are preset and cannot be modified.
system alarm	Predefined alarm triggered by a missing rescue configuration or failure to install a license for a licensed software feature. System alarms are preset and cannot be modified, although you can configure them to appear automatically in the J-Web interface display or CLI display.
interface alarm	Predefined alarm triggered by a problem with a specific network interface.

Alarm Severity Classes

Alarms on the MX104 routers have two severity classes:

- Major (steady red)—Indicates a critical situation on the router that has resulted from one of the following conditions. A red alarm condition requires immediate action.
 - One or more hardware components have failed.
 - One or more hardware components have exceeded temperature thresholds.
 - An alarm condition configured on an interface has triggered a critical warning.
- Minor (steady yellow)—Indicates a noncritical condition on the router that, if left unchecked, might cause an interruption in service or degradation in performance. A minor alarm condition requires monitoring or maintenance.

A missing rescue configuration generates a minor system alarm.

Related Documentation

- [Chassis Conditions That Trigger Alarms](#)
- [Verifying Active Alarms on MX104 Routers on page 209](#)
- [Monitoring System Log Messages on MX104 Routers on page 210](#)

Verifying Active Alarms on MX104 Routers

Purpose Use the monitoring functionality to view alarm information for the MX104 routers, including alarm type, alarm severity, and a brief description for each active alarm on the router.

- Action**
- Observe the system LED on the front panel of the router. If the router is functioning normally with no alarms, the system LED lights green steadily.
 - Issue the CLI **show chassis alarms** command to verify the status of the router. As shown in the sample output, the value **Class** indicates the severity of the alarm.

```
user@host> show chassis alarms
2 alarms currently active
Alarm time           Class  Description
2010-01-01 00:05:24 UTC  Minor  Loss of communication with Backup RE
2010-01-01 00:05:24 UTC  Major  Fan Tray Failure
```

When the router is functioning normally with no active alarms, the CLI displays the output as shown:

```
user@host> show chassis alarms
No alarms currently active
```

Meaning [Table 83 on page 210](#) lists the alarm output fields.

Table 83: Alarm Output Fields

Field	Values
Alarm time	Date and time when the failure was detected
Class	Alarm severity—either major or minor
Description	Brief synopsis of the alarm

- Related Documentation**
- [Understanding Alarm Types and Severity Classes on MX104 Routers on page 208](#)
 - [Monitoring System Log Messages on MX104 Routers on page 210](#)

Monitoring System Log Messages on MX104 Routers

Purpose Use the monitoring functionality to view system log messages for MX Series routers.

Action To view events in the CLI, enter the **show log** command. For more information, see *Displaying a Log File from a Single-Chassis System*.

- Related Documentation**
- [Understanding Alarm Types and Severity Classes on MX104 Routers on page 208](#)
 - [Verifying Active Alarms on MX104 Routers on page 209](#)

PART 7

Contacting Customer Support and Returning the Chassis or Components

- [Contacting Customer Support on page 213](#)
- [Locating Component Serial Numbers on page 215](#)
- [Packing and Returning Components on page 219](#)

Contacting Customer Support

- [Contacting Customer Support on page 213](#)

Contacting Customer Support

You can contact Juniper Networks Technical Assistance Center (JTAC) 24 hours a day, 7 days a week in one of the following ways:

- On the Web, using the Case Manager link at:

<https://www.juniper.net/support/>

- By telephone:

From the US and Canada: 1-888-314-JTAC

From all other locations: 1-408-745-9500

If contacting JTAC by phone, enter your 12-digit case number followed by the # key if this is an existing case, or press the * key to be routed to the next available support engineer.

When requesting support from JTAC by telephone, be prepared to provide the following information:

- Your existing case number, if you have one
- Details of the failure or problem
- Type of activity being performed on the platform when the problem occurred
- Configuration data using one or more of the show commands

Locating Component Serial Numbers

- [Displaying MX104 Components and Serial Numbers on page 215](#)
- [MX104 Chassis Serial Number Label on page 216](#)
- [MX104 Fan Tray Serial Number Label on page 216](#)
- [MX104 MIC Serial Number Label on page 217](#)
- [MX104 Power Supply Serial Number Label on page 218](#)
- [MX104 Routing Engine Serial Number Label on page 218](#)

Displaying MX104 Components and Serial Numbers

Before contacting Juniper Networks, Inc. to request a Return Materials Authorization (RMA), you must find the serial number on the router or component. To display all of the router components and their serial numbers, enter the following command-line interface (CLI) command:

```
user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Midplane     REV 28   750-044219   CAAX5767      MX104
PEM 0        REV 03   740-045932   1H073050110   DC Power Entry Module
PEM 1        REV 03   740-045932   1H073050017   DC Power Entry Module
Routing Engine 0 REV 03   750-053342   CABP2893      RE-MX-104
Routing Engine 1 REV 03   750-053342   CABP2978      RE-MX-104
AFEB 0
Processor
FPC 0
  MIC 0      REV 02   750-046905   CAAV2145      3D 20x 1GE(LAN)-EH,SFP
  PIC 0
  PIC 1
  MIC 1      REV 02   750-047733   CAAN7024      16x CHE1T1 -H, RJ48
  PIC 2
FPC 1
  MIC 0      REV 05   750-046905   CAAY0325      3D 20x 1GE(LAN)-EH,SFP
  PIC 0
  PIC 1
  MIC 1      REV 05   750-046905   CAAW5365      1x COC12/4x COC3 CH-CE
-H, SFP
  PIC 2
-H, SFP
FPC 2
  MIC 0
```

PIC 0	BUILTIN	BUILTIN	4x 10GE(LAN) SFP+
Fan Tray 0	REV 02	711-049570	CAAX6564
			Fan Tray

Most components also have a small rectangular serial number ID label (see [Figure 64 on page 216](#)) attached to the component body.

Figure 64: Serial Number ID Label




Related Documentation

- [MX104 Chassis Serial Number Label on page 216](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 219](#)

MX104 Chassis Serial Number Label

The chassis serial number is located on the rear of the chassis (see [Figure 65 on page 216](#)).

Figure 65: MX104 Chassis Serial Number Label

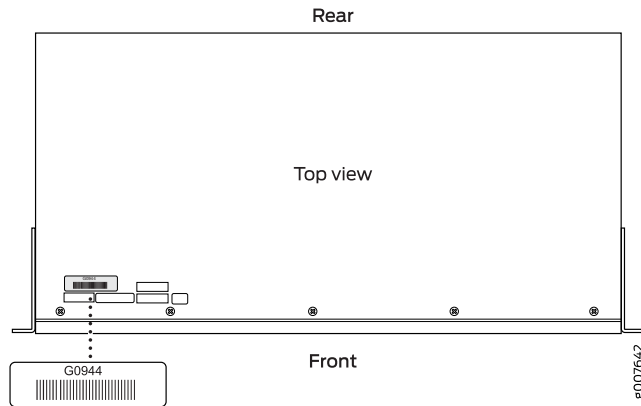


Related Documentation

- [Displaying MX104 Components and Serial Numbers on page 215](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 219](#)

MX104 Fan Tray Serial Number Label

The fan tray serial number is located on the rear of the fan tray (see [Figure 66 on page 217](#)).

Figure 66: MX104 Fan Tray Serial Number Label

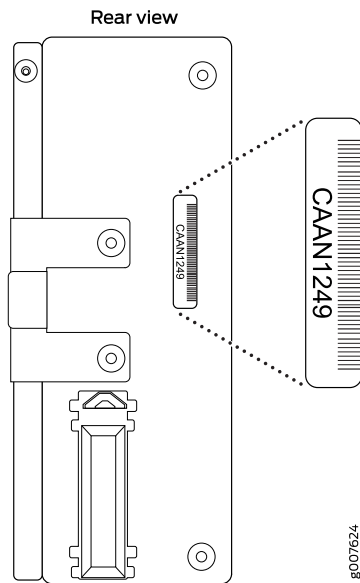


Related Documentation

- [Displaying MX104 Components and Serial Numbers on page 215](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 219](#)

MX104 MIC Serial Number Label

The MIC serial number label is located on the top of the MIC (see [Figure 67 on page 217](#)).

Figure 67: MX104 MIC Serial Number Label

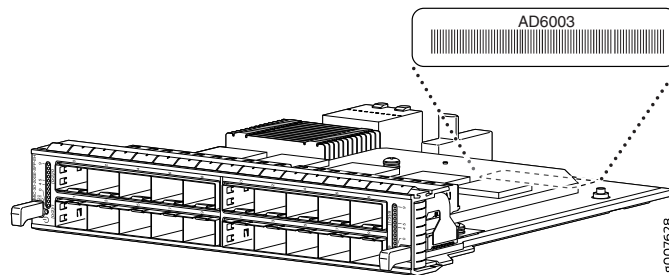

NOTE: The location of the serial number label may vary depending on model. Look for an alphanumeric sticker similar to the one shown in [Figure 67 on page 217](#).


Related Documentation

- [Displaying MX104 Components and Serial Numbers on page 215](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 219](#)

MX104 Power Supply Serial Number Label

The power supply serial number is located on the top of the power supply (see [Figure 68 on page 218](#)).

Figure 68: MX104 Power Supply Serial Number Label

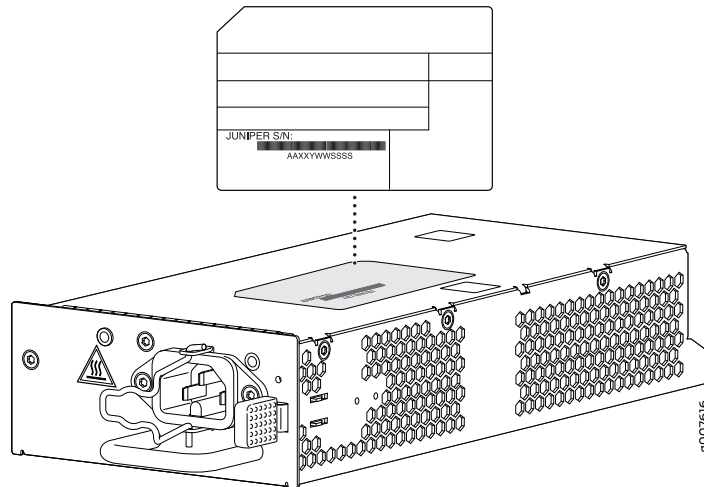


Related Documentation

- [Displaying MX104 Components and Serial Numbers on page 215](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 219](#)

MX104 Routing Engine Serial Number Label

The Routing Engine serial number is located on the top of the Routing Engine (see [Figure 69 on page 218](#)).

Figure 69: MX104 Routing Engine Serial Number Label

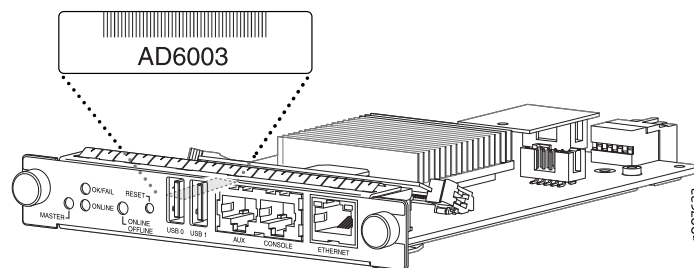

Related Documentation

- [Displaying MX104 Components and Serial Numbers on page 215](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 219](#)

Packing and Returning Components

- Returning a Hardware Component to Juniper Networks, Inc. on page 219
- Guidelines for Packing Hardware Components for Shipment on page 220
- Packing the MX104 Router for Shipment on page 220

Returning a Hardware Component to Juniper Networks, Inc.

In the event of a hardware failure, please contact Juniper Networks, Inc. to obtain a Return Material Authorization (RMA) number. This number is used to track the returned material at the factory and to return repaired or new components to the customer as needed.



NOTE: Do not return any component to Juniper Networks, Inc. unless you have first obtained an RMA number. Juniper Networks, Inc. reserves the right to refuse shipments that do not have an RMA. Refused shipments are returned to the customer by collect freight.

For more information about return and repair policies, see the customer support Web page at <https://www.juniper.net/support/guidelines.html>.

For product problems or technical support issues, contact the Juniper Networks Technical Assistance Center (JTAC) by using the Case Manager link at <https://www.juniper.net/support/> or at 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).

To return a defective hardware component:

1. Determine the part number and serial number of the defective component.
2. Obtain an RMA number from the Juniper Networks Technical Assistance Center (JTAC). You can send e-mail or telephone as described above.
3. Provide the following information in your e-mail message or during the telephone call:
 - Part number and serial number of component
 - Your name, organization name, telephone number, and fax number

- Description of the failure
4. The support representative validates your request and issues an RMA number for return of the component.
 5. Pack the component for shipment.

Guidelines for Packing Hardware Components for Shipment

To pack and ship individual components:

- When you return components, make sure they are adequately protected with packing materials and packed so that the pieces are prevented from moving around inside the carton.
- Use the original shipping materials if they are available.
- Place individual components in antistatic bags.
- Write the RMA number on the exterior of the box to ensure proper tracking.



CAUTION: Do not stack any of the hardware components.

Packing the MX104 Router for Shipment

To pack the router for shipment:

1. Retrieve the shipping box and packing materials in which the router was originally shipped. If you do not have these materials, contact your Juniper Networks representative about approved packaging materials.
2. On the console or other management device connected to the Routing Engine, enter CLI operational mode and issue the following command to shut down the router software.

```
user@host> request system halt
```

Wait until a message appears on the console confirming that the operating system has halted.

For more information about the command, see the [CLI Explorer](#).

3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Shut down power to the router by pressing the AC input switch or DC circuit breaker for all power supplies to the off (O) position.

5. Disconnect power from the router.
6. Remove the cables that connect to all external devices.
7. Remove all field replaceable units (FRUs) from the router.
8. Remove the router from the rack. One person should grasp the router while a second person unscrews and removes the mounting screws from the rack. One lifter can then move the router to the shipping container.
9. Place the router in the shipping container.
10. Cover the router with an ESD bag and place the packing foam on top of and around the router.
11. Replace the accessory box on top of the packing foam.
12. Securely tape the box closed.
13. Write the RMA number on the exterior of the box to ensure proper tracking.

**Related
Documentation**

- [Contacting Customer Support on page 213](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 219](#)
- [Guidelines for Packing Hardware Components for Shipment on page 220](#)

PART 8

Safety and Compliance Information

- [General Safety Guidelines and Warnings on page 225](#)
- [Fire Safety Requirements on page 233](#)
- [Installation Safety Guidelines and Warnings on page 235](#)
- [Laser and LED Safety Guidelines and Warnings on page 241](#)
- [Maintenance and Operational Safety Guidelines and Warnings on page 245](#)
- [Electrical Safety Guidelines and Warnings on page 251](#)
- [Agency Approvals and Compliance Statements on page 263](#)

General Safety Guidelines and Warnings

- Definition of Safety Warning Levels on page 225
- General Safety Guidelines for Juniper Networks Devices on page 227
- General Safety Warnings for Juniper Networks Devices on page 228
- Preventing Electrostatic Discharge Damage to an MX104 Router on page 230

Definition of Safety Warning Levels

The documentation uses the following levels of safety warnings:



NOTE: You might find this information helpful in a particular situation, or might otherwise overlook it.



CAUTION: You must observe the specified guidelines to avoid minor injury or discomfort to you, or severe damage to the hardware device.



WARNING: This symbol alerts you to the risk of personal injury from a laser.



WARNING: This symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

Waarschuwing Dit waarschuwingssymbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij elektrische schakelingen betrokken risico's en dient u op de hoogte te zijn van standaard maatregelen om ongelukken te voorkomen.

Varoitus Tämä varoitusmerkki merkitsee vaaraa. Olet tilanteessa, joka voi johtaa ruumiinvammaan. Ennen kuin työskentelet minkään laitteiston parissa,

ota selvää sähkökytkentöihin liittyvistä vaaroista ja tavanomaisista onnettomuuksien ehkäisykeinoista.

Attention Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant causer des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers posés par les circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents.

Warnung Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu einer Körperverletzung führen könnte. Bevor Sie mit der Arbeit an irgendeinem Gerät beginnen, seien Sie sich der mit elektrischen Stromkreisen verbundenen Gefahren und der Standardpraktiken zur Vermeidung von Unfällen bewußt.

Avvertenza Questo simbolo di avvertenza indica un pericolo. La situazione potrebbe causare infortuni alle persone. Prima di lavorare su qualsiasi apparecchiatura, occorre conoscere i pericoli relativi ai circuiti elettrici ed essere al corrente delle pratiche standard per la prevenzione di incidenti.

Advarsel Dette varselsymbolet betyr fare. Du befinner deg i en situasjon som kan føre til personskade. Før du utfører arbeid på utstyr, må du være oppmerksom på de faremomentene som elektriske kretser innebærer, samt gjøre deg kjent med vanlig praksis når det gjelder å unngå ulykker.

Aviso Este símbolo de aviso indica perigo. Encontra-se numa situação que lhe poderá causar danos físicos. Antes de começar a trabalhar com qualquer equipamento, familiarize-se com os perigos relacionados com circuitos eléctricos, e com quaisquer práticas comuns que possam prevenir possíveis acidentes.

¡Atención! Este símbolo de aviso significa peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considerar los riesgos que entraña la corriente eléctrica y familiarizarse con los procedimientos estándar de prevención de accidentes.

Varning! Denna varningssymbol signalerar fara. Du befinner dig i en situation som kan leda till personskada. Innan du utför arbete på någon utrustning måste du vara medveten om farorna med elkretsar och känna till vanligt förfarande för att förebygga skador.

**Related
Documentation**

- [General Safety Warnings for Juniper Networks Devices on page 228](#)
- [Installation Safety Warnings for Juniper Networks Devices on page 235](#)
- [Maintenance and Operational Safety Warnings for Juniper Networks Devices](#)
- [General Electrical Safety Warnings for Juniper Networks Devices on page 251](#)
- [DC Power Electrical Safety Warnings for Juniper Networks Devices on page 258](#)

General Safety Guidelines for Juniper Networks Devices

The following guidelines help ensure your safety and protect the hardware equipment from damage. The list of guidelines might not address all potentially hazardous situations in your working environment, so be alert and exercise good judgment at all times.

- Perform only the procedures explicitly described in this documentation. Make sure that only authorized service personnel perform other system services.
- Keep the area around the chassis clear and free from dust before, during, and after installation.
- Keep tools away from areas where people could trip over them while walking.
- Do not wear loose clothing or jewelry, such as rings, bracelets, or chains, that could become caught in the chassis.
- Wear safety glasses if you are working under any conditions that could be hazardous to your eyes.
- Do not perform any actions that create a potential hazard to people or make the equipment unsafe.
- Never attempt to lift an object that is too heavy for one person to handle.
- Never install or manipulate wiring during electrical storms.
- Never install electrical jacks in wet locations unless the jacks are specifically designed for wet environments.
- Operate the hardware equipment only when the chassis is properly grounded.
- Do not open or remove chassis covers or sheet metal parts unless instructions are provided in this documentation. Such an action could cause severe electrical shock.
- Do not push or force any objects through any opening in the chassis frame. Such an action could result in electrical shock or fire.
- Avoid spilling liquid onto the chassis or onto any hardware component. Such an action could cause electrical shock or damage the hardware equipment.
- Avoid touching uninsulated electrical wires or terminals that have not been disconnected from their power source. Such an action could cause electrical shock.
- Some parts of the router might become hot. The following label provides the warning of the hot surfaces on the router:



Related Documentation

- [General Safety Warnings for Juniper Networks Devices on page 228](#)

General Safety Warnings for Juniper Networks Devices

- [Qualified Personnel Warning on page 228](#)
- [Restricted-Access Area Warning on page 228](#)

Qualified Personnel Warning



WARNING: Only trained and qualified personnel should install or replace the hardware equipment.

Waarschuwing Installatie en reparaties mogen uitsluitend door getraind en bevoegd personeel uitgevoerd worden.

Varoitus Ainoastaan koulutettu ja pätevä henkilökunta saa asentaa tai vaihtaa tämän laitteen.

Attention Tout installation ou remplacement de l'appareil doit être réalisé par du personnel qualifié et compétent.

Warnung Gerät nur von geschultem, qualifiziertem Personal installieren oder auswechseln lassen.

Avvertenza Solo personale addestrato e qualificato deve essere autorizzato ad installare o sostituire questo apparecchio.

Advarsel Kun kvalifisert personell med riktig opplæring bør montere eller bytte ut dette utstyret.

Aviso Este equipamento deverá ser instalado ou substituído apenas por pessoal devidamente treinado e qualificado.

¡Atención! Estos equipos deben ser instalados y reemplazados exclusivamente por personal técnico adecuadamente preparado y capacitado.

Varning! Denna utrustning ska endast installeras och bytas ut av utbildad och kvalificerad personal.

Restricted-Access Area Warning



WARNING: The hardware equipment is intended for installation in restricted-access areas. A restricted-access area is an area to which access can be gained only by service personnel through the use of a special tool, lock and key, or other means of security, and which is controlled by the authority responsible for the location.

Waarschuwing Dit toestel is bedoeld voor installatie op plaatsen met beperkte toegang. Een plaats met beperkte toegang is een plaats waar toegang slechts door servicepersoneel verkregen kan worden door middel van een speciaal

instrument, een slot en sleutel, of een ander veiligheidsmiddel, en welke beheerd wordt door de overheidsinstantie die verantwoordelijk is voor de locatie.

Varoitus Tämä laite on tarkoitettu asennettavaksi paikkaan, johon pääsy on rajoitettua. Paikka, johon pääsy on rajoitettua, tarkoittaa paikkaa, johon vain huoltohenkilöstö pääsee jonkin erikoistyökalun, lukkoon sopivan avaimen tai jonkin muun turvalaitteen avulla ja joka on paikasta vastuussa olevien toimivaltaisten henkilöiden valvoma.

Attention Cet appareil est à installer dans des zones d'accès réservé. Ces dernières sont des zones auxquelles seul le personnel de service peut accéder en utilisant un outil spécial, un mécanisme de verrouillage et une clé, ou tout autre moyen de sécurité. L'accès aux zones de sécurité est sous le contrôle de l'autorité responsable de l'emplacement.

Warnung Diese Einheit ist zur Installation in Bereichen mit beschränktem Zutritt vorgesehen. Ein Bereich mit beschränktem Zutritt ist ein Bereich, zu dem nur Wartungspersonal mit einem Spezialwerkzeugs, Schloß und Schlüssel oder anderer Sicherheitsvorkehrungen Zugang hat, und der von dem für die Anlage zuständigen Gremium kontrolliert wird.

Avvertenza Questa unità deve essere installata in un'area ad accesso limitato. Un'area ad accesso limitato è un'area accessibile solo a personale di assistenza tramite un'attrezzo speciale, lucchetto, o altri dispositivi di sicurezza, ed è controllata dall'autorità responsabile della zona.

Advarsel Denne enheten er laget for installasjon i områder med begrenset adgang. Et område med begrenset adgang gir kun adgang til servicepersonale som bruker et spesielt verktøy, lås og nøkkel, eller en annen sikkerhetsanordning, og det kontrolleres av den autoriteten som er ansvarlig for området.

Aviso Esta unidade foi concebida para instalação em áreas de acesso restrito. Uma área de acesso restrito é uma área à qual apenas tem acesso o pessoal de serviço autorizado, que possua uma ferramenta, chave e fechadura especial, ou qualquer outra forma de segurança. Esta área é controlada pela autoridade responsável pelo local.

¡Atención! Esta unidad ha sido diseñada para instalarse en áreas de acceso restringido. Área de acceso restringido significa un área a la que solamente tiene acceso el personal de servicio mediante la utilización de una herramienta especial, cerradura con llave, o algún otro medio de seguridad, y que está bajo el control de la autoridad responsable del local.

Varning! Denna enhet är avsedd för installation i områden med begränsat tillträde. Ett område med begränsat tillträde får endast tillträdas av servicepersonal med ett speciellt verktyg, lås och nyckel, eller annan säkerhetsanordning, och kontrolleras av den auktoritet som ansvarar för området.

- Related Documentation**
- [Installation Safety Warnings for Juniper Networks Devices on page 235](#)
 - [Maintenance and Operational Safety Warnings for Juniper Networks Devices](#)
 - [General Electrical Safety Warnings for Juniper Networks Devices on page 251](#)
 - [DC Power Electrical Safety Warnings for Juniper Networks Devices on page 258](#)

Preventing Electrostatic Discharge Damage to an MX104 Router

Many router hardware components are sensitive to damage from static electricity. Some components can be impaired by voltages as low as 30 V. You can easily generate potentially damaging static voltages whenever you handle plastic or foam packing material or if you move components across plastic or carpets. Observe the following guidelines to minimize the potential for electrostatic discharge (ESD) damage, which can cause intermittent or complete component failures:

- Always use an ESD wrist strap or ankle strap, and make sure that it is in direct contact with your skin.



CAUTION: For safety, periodically check the resistance value of the ESD strap. The measurement should be in the range of 1 to 10 Mohms.

- When handling any component that is removed from the chassis, make sure the equipment end of your ESD strap is attached to the electrostatic discharge point on the chassis (see [Figure 70 on page 230](#)).
- Avoid contact between the component and your clothing. ESD voltages emitted from clothing can still damage components.
- When removing or installing a component, always place it component side up on an antistatic surface, in an antistatic card rack, or in an electrostatic bag (see [Figure 71 on page 231](#)). If you are returning a component, place it in an electrostatic bag before packing it.

Figure 70: ESD Point on the MX104 Router Chassis


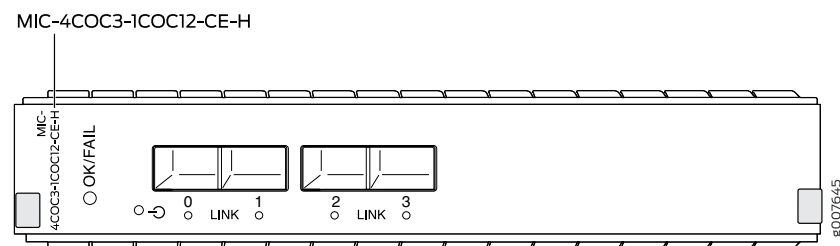


Figure 71: Placing a Component into an Electrostatic Bag

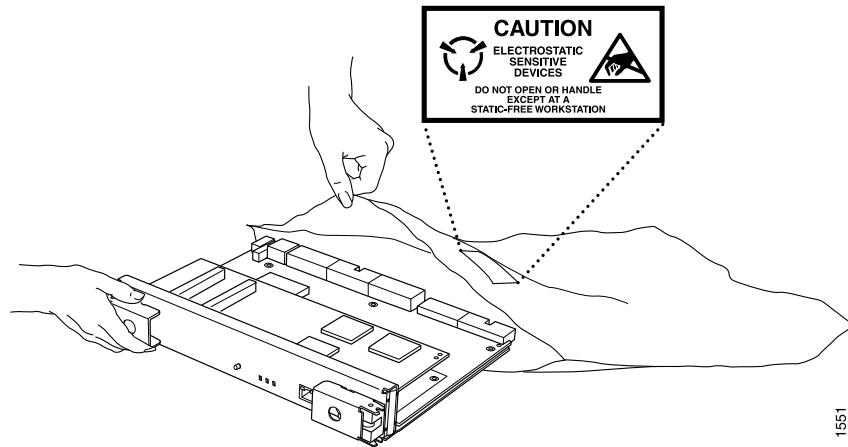

NOTE: [Figure 71 on page 231](#) shows a component that is not supported on MX104 routers.

Related Documentation

- [Connecting the MX104 Router to Earth Ground on page 121](#)

Fire Safety Requirements

- [Fire Safety Requirements for Juniper Networks Devices on page 233](#)

Fire Safety Requirements for Juniper Networks Devices

- [General Fire Safety Requirements on page 233](#)
- [Fire Suppression on page 233](#)
- [Fire Suppression Equipment on page 233](#)

General Fire Safety Requirements

In the event of a fire emergency involving network devices, the safety of people is the primary concern. Establish procedures for protecting people in a fire emergency, provide safety training, and properly provision fire-control equipment and fire extinguishers.

In addition, establish procedures to protect your equipment in a fire emergency. Juniper Networks products must be installed in an environment suitable for electronic equipment. We recommend that fire suppression equipment be available in the event of a fire in the vicinity of the equipment, and that you observe all local fire, safety, and electrical codes and ordinances when installing and operating your equipment.

Fire Suppression

In the event of an electrical hazard or an electrical fire, first turn off power to the equipment at the source. Then use a Type C fire extinguisher, which uses noncorrosive fire retardants, to extinguish the fire.

Fire Suppression Equipment

Type C fire extinguishers, which use noncorrosive fire retardants such as carbon dioxide (CO₂) and Halotron, are most effective for suppressing electrical fires. Type C fire extinguishers displace the oxygen from the point of combustion to eliminate the fire. For extinguishing fire on or around equipment that draws air from the environment for cooling, use this type of inert oxygen displacement extinguisher instead of an extinguisher that leave residues on equipment.

Do not use multipurpose Type ABC chemical fire extinguishers (dry chemical fire extinguishers) near Juniper Networks devices. The primary ingredient in these fire extinguishers is monoammonium phosphate, which is very sticky and difficult to clean.

In addition, in minute amounts of moisture, monoammonium phosphate can become highly corrosive and corrodes most metals.

Any equipment in a room in which a chemical fire extinguisher has been discharged is subject to premature failure and unreliable operation. The equipment is considered to be irreparably damaged.



NOTE: To keep warranties effective, do not use a dry chemical fire extinguisher to control a fire at or near a Juniper Networks device. If a dry chemical fire extinguisher is used, the unit is no longer eligible for coverage under a service agreement.

We recommend that you dispose of any irreparably damaged equipment in an environmentally responsible manner.

**Related
Documentation**

- [General Safety Guidelines for Juniper Networks Devices on page 227](#)
- [General Safety Warnings for Juniper Networks Devices on page 228](#)
- [General Electrical Safety Warnings for Juniper Networks Devices on page 251](#)
- [DC Power Electrical Safety Warnings for Juniper Networks Devices on page 258](#)

Installation Safety Guidelines and Warnings

- [Installation Safety Warnings for Juniper Networks Devices on page 235](#)

Installation Safety Warnings for Juniper Networks Devices

Observe the following warnings before and during hardware equipment installation:

- [Intrabuilding Ports Warning on page 235](#)
- [Installation Instructions Warning on page 235](#)
- [Rack-Mounting Requirements and Warnings on page 236](#)
- [Ramp Warning on page 240](#)

Intrabuilding Ports Warning



WARNING: The intrabuilding ports of the equipment or subassembly are suitable for connection to intrabuilding or unexposed wiring or cabling only. The intrabuilding ports of the equipment or subassembly **MUST NOT** be metallically connected to interfaces that connect to the Outside Plant (OSP) or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089) and require isolation from the exposed OSP cabling. The addition of Primary Protectors is not sufficient protection in order to connect these interfaces metallically to OSP wiring.

Installation Instructions Warning



WARNING: Read the installation instructions before you connect the hardware equipment to a power source.

Waarschuwing Raadpleeg de installatie-aanwijzingen voordat u het systeem met de voeding verbindt.

Varoitus Lue asennusohjeet ennen järjestelmän yhdistämistä virtalähteeseen.

Attention Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

Warnung Lesen Sie die Installationsanweisungen, bevor Sie das System an die Stromquelle anschließen.

Avvertenza Consultare le istruzioni di installazione prima di collegare il sistema all'alimentatore.

Advarsel Les installasjonsinstruksjonene før systemet kobles til strømkilden.

Aviso Leia as instruções de instalação antes de ligar o sistema à sua fonte de energia.

¡Atención! Ver las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Varning! Läs installationsanvisningarna innan du kopplar systemet till dess strömförsörjningsenhet.

Rack-Mounting Requirements and Warnings

Ensure that the equipment rack into which the chassis is installed is evenly and securely supported, to avoid the hazardous condition that could result from uneven mechanical loading.



WARNING: To prevent bodily injury when mounting or servicing the chassis in a rack, take the following precautions to ensure that the system remains stable. The following directives help maintain your safety:

- The chassis must be installed into a rack that is secured to the building structure.
- The chassis should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting the chassis in a partially-filled rack, load the rack from the bottom to the top, with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting the chassis in the rack or servicing the hardware equipment.

Waarschuwing Om lichamelijk letsel te voorkomen wanneer u dit toestel in een rek monteert of het daar een servicebeurt geeft, moet u speciale voorzorgsmaatregelen nemen om ervoor te zorgen dat het toestel stabiel blijft. De onderstaande richtlijnen worden verstrekt om uw veiligheid te verzekeren:

- De router moet in een stelling worden geïnstalleerd die aan een bouwsel is verankerd.
- Dit toestel dient onderaan in het rek gemonteerd te worden als het toestel het enige in het rek is.
- Wanneer u dit toestel in een gedeeltelijk gevuld rek monteert, dient u het rek van onderen naar boven te laden met het zwaarste onderdeel onderaan in het rek.
- Als het rek voorzien is van stabiliseringshulpmiddelen, dient u de stabilisatoren te monteren voordat u het toestel in het rek monteert of het daar een servicebeurt geeft.

Varoitus Kun laite asetetaan telineeseen tai huolletaan sen ollessa telineessä, on noudatettava erityisiä varotoimia järjestelmän vakavuuden säilyttämiseksi, jotta vältetään loukkaantumiselta. Noudata seuraavia turvallisuusohjeita:

- Router on asennettava telineeseen, joka on kiinnitetty rakennukseen.
- Jos telineessä ei ole muita laitteita, aseta laite telineen alaosaan.
- Jos laite asetetaan osaksi täytettyyn telineeseen, aloita kuormittaminen sen alaosasta kaikkein raskaimmalla esineellä ja siirry sitten sen yläosaan.
- Jos telinettä varten on vakaimet, asenna ne ennen laitteen asettamista telineeseen tai sen huoltamista siinä.

Attention Pour éviter toute blessure corporelle pendant les opérations de montage ou de réparation de cette unité en casier, il convient de prendre des précautions spéciales afin de maintenir la stabilité du système. Les directives ci-dessous sont destinées à assurer la protection du personnel:

- Le rack sur lequel est monté le router doit être fixé à la structure du bâtiment.
- Si cette unité constitue la seule unité montée en casier, elle doit être placée dans le bas.
- Si cette unité est montée dans un casier partiellement rempli, charger le casier de bas en haut en plaçant l'élément le plus lourd dans le bas.
- Si le casier est équipé de dispositifs stabilisateurs, installer les stabilisateurs avant de monter ou de réparer l'unité en casier.

Warnung Zur Vermeidung von Körperverletzung beim Anbringen oder Warten dieser Einheit in einem Gestell müssen Sie besondere Vorkehrungen treffen,

um sicherzustellen, daß das System stabil bleibt. Die folgenden Richtlinien sollen zur Gewährleistung Ihrer Sicherheit dienen:

- Der router muß in einem Gestell installiert werden, das in der Gebäudestruktur verankert ist.
- Wenn diese Einheit die einzige im Gestell ist, sollte sie unten im Gestell angebracht werden.
- Bei Anbringung dieser Einheit in einem zum Teil gefüllten Gestell ist das Gestell von unten nach oben zu laden, wobei das schwerste Bauteil unten im Gestell anzubringen ist.
- Wird das Gestell mit Stabilisierungszubehör geliefert, sind zuerst die Stabilisatoren zu installieren, bevor Sie die Einheit im Gestell anbringen oder sie warten.

Avvertenza Per evitare infortuni fisici durante il montaggio o la manutenzione di questa unità in un supporto, occorre osservare speciali precauzioni per garantire che il sistema rimanga stabile. Le seguenti direttive vengono fornite per garantire la sicurezza personale:

- Il router deve essere installato in un telaio, il quale deve essere fissato alla struttura dell'edificio.
- Questa unità deve venire montata sul fondo del supporto, se si tratta dell'unica unità da montare nel supporto.
- Quando questa unità viene montata in un supporto parzialmente pieno, caricare il supporto dal basso all'alto, con il componente più pesante sistemato sul fondo del supporto.
- Se il supporto è dotato di dispositivi stabilizzanti, installare tali dispositivi prima di montare o di procedere alla manutenzione dell'unità nel supporto.

Advarsel Unngå fysiske skader under montering eller reparasjonsarbeid på denne enheten når den befinner seg i et kabinett. Vær nøye med at systemet er stabilt. Følgende retningslinjer er gitt for å verne om sikkerheten:

- Router må installeres i et stativ som er forankret til bygningsstrukturen.
- Denne enheten bør monteres nederst i kabinettet hvis dette er den eneste enheten i kabinettet.
- Ved montering av denne enheten i et kabinett som er delvis fylt, skal kabinettet lastes fra bunnen og opp med den tyngste komponenten nederst i kabinettet.
- Hvis kabinettet er utstyrt med stabiliseringsutstyr, skal stabilisatorene installeres før montering eller utføring av reparasjonsarbeid på enheten i kabinettet.

Aviso Para se prevenir contra danos corporais ao montar ou reparar esta unidade numa estante, deverá tomar precauções especiais para se certificar

de que o sistema possui um suporte estável. As seguintes directrizes ajudá-lo-ão a efectuar o seu trabalho com segurança:

- O router deverá ser instalado numa prateleira fixa à estrutura do edificio.
- Esta unidade deverá ser montada na parte inferior da estante, caso seja esta a única unidade a ser montada.
- Ao montar esta unidade numa estante parcialmente ocupada, coloque os itens mais pesados na parte inferior da estante, arrumando-os de baixo para cima.
- Se a estante possuir um dispositivo de estabilização, instale-o antes de montar ou reparar a unidade.

¡Atención! Para evitar lesiones durante el montaje de este equipo sobre un bastidor, o posteriormente durante su mantenimiento, se debe poner mucho cuidado en que el sistema quede bien estable. Para garantizar su seguridad, proceda según las siguientes instrucciones:

- El router debe instalarse en un bastidor fijado a la estructura del edificio.
- Colocar el equipo en la parte inferior del bastidor, cuando sea la única unidad en el mismo.
- Cuando este equipo se vaya a instalar en un bastidor parcialmente ocupado, comenzar la instalación desde la parte inferior hacia la superior colocando el equipo más pesado en la parte inferior.
- Si el bastidor dispone de dispositivos estabilizadores, instalar éstos antes de montar o proceder al mantenimiento del equipo instalado en el bastidor.

Varning! För att undvika kroppsskada när du installerar eller utför underhållsarbete på denna enhet på en ställning måste du vidta särskilda försiktighetsåtgärder för att försäkra dig om att systemet står stadigt. Följande riktlinjer ges för att trygga din säkerhet:

- Router måste installeras i en ställning som är förankrad i byggnadens struktur.
 - Om denna enhet är den enda enheten på ställningen skall den installeras längst ned på ställningen.
 - Om denna enhet installeras på en delvis fylld ställning skall ställningen fyllas nedifrån och upp, med de tyngsta enheterna längst ned på ställningen.
 - Om ställningen är försedd med stabiliseringsdon skall dessa monteras fast innan enheten installeras eller underhålls på ställningen.
-

Ramp Warning



WARNING: When installing the hardware equipment, do not use a ramp inclined at more than 10 degrees.

Waarschuwing Gebruik een oprijplaat niet onder een hoek van meer dan 10 graden.

Varoitus Älä käytä sellaista kaltevaa pintaa, jonka kaltevuus ylittää 10 astetta.

Attention Ne pas utiliser une rampe dont l'inclinaison est supérieure à 10 degrés.

Warnung Keine Rampen mit einer Neigung von mehr als 10 Grad verwenden.

Avvertenza Non usare una rampa con pendenza superiore a 10 gradi.

Advarsel Bruk aldri en rampe som heller mer enn 10 grader.

Aviso Não utilize uma rampa com uma inclinação superior a 10 graus.

¡Atención! No usar una rampa inclinada más de 10 grados

Varning! Använd inte ramp med en lutning på mer än 10 grader.

Related Documentation

- [General Safety Guidelines for Juniper Networks Devices on page 227](#)
- [General Safety Warnings for Juniper Networks Devices on page 228](#)
- [Maintenance and Operational Safety Warnings for Juniper Networks Devices](#)

CHAPTER 33

Laser and LED Safety Guidelines and Warnings

- [General Laser Safety Guidelines for Juniper Networks Devices on page 241](#)
- [Laser Safety Warnings for Juniper Networks Devices on page 241](#)

General Laser Safety Guidelines for Juniper Networks Devices

Devices with single-mode optical interfaces are equipped with laser transmitters, which are considered Class 1 Laser product by the U.S. Food and Drug Administration, and are evaluated as a Class 1 Laser Product according to EN 60825–1 +A11 +A2 requirements.

When working around devices with optical interfaces, observe the following safety guidelines to prevent eye injury:

- Do not look into unterminated ports or at fibers that connect to unknown sources.
- Do not examine unterminated optical ports with optical instruments.
- Avoid direct exposure to the beam.



WARNING: Unterminated optical connectors can emit invisible laser radiation. The lens in the human eye focuses all the laser power on the retina, so focusing the eye directly on a laser source—even a low-power laser—could permanently damage the eye.

Related Documentation

- [Laser Safety Warnings for Juniper Networks Devices on page 241](#)
- [General Safety Warnings for Juniper Networks Devices on page 228](#)

Laser Safety Warnings for Juniper Networks Devices

- [Class 1 Laser Product Warning on page 242](#)
- [Class 1 LED Product Warning on page 242](#)

- [Laser Beam Warning on page 243](#)
- [Radiation from Open Port Apertures Warning on page 243](#)

Class 1 Laser Product Warning



WARNING: Class 1 laser product.

Waarschuwing Klasse-1 laser produkt.

Varoitus Luokan 1 lasertuote.

Attention Produit laser de classe I.

Warnung Laserprodukt der Klasse 1.

Avvertenza Prodotto laser di Classe 1.

Advarsel Laserprodukt av klasse 1.

Aviso Produto laser de classe 1.

¡Atención! Producto láser Clase I.

Varning! Laserprodukt av klass 1.

Class 1 LED Product Warning



WARNING: Class 1 LED product.

Waarschuwing Klasse 1 LED-product.

Varoitus Luokan 1 valodiodituote.

Attention Alarme de produit LED Class I.

Warnung Class 1 LED-Produktwarnung.

Avvertenza Avvertenza prodotto LED di Classe 1.

Advarsel LED-produkt i klasse 1.

Aviso Produto de classe 1 com LED.

¡Atención! Aviso sobre producto LED de Clase 1.

Varning! Lysdiodprodukt av klass 1.

Laser Beam Warning



WARNING: Do not stare into the laser beam or view it directly with optical instruments.

Waarschuwing Niet in de straal staren of hem rechtstreeks bekijken met optische instrumenten.

Varoitus Älä katso säteeseen äläkä tarkastele sitä suoraan optisen laitteen avulla.

Attention Ne pas fixer le faisceau des yeux, ni l'observer directement à l'aide d'instruments optiques.

Warnung Nicht direkt in den Strahl blicken und ihn nicht direkt mit optischen Geräten prüfen.

Avvertenza Non fissare il raggio con gli occhi né usare strumenti ottici per osservarlo direttamente.

Advarsel Stirr eller se ikke direkte p strlen med optiske instrumenter.

Aviso Não olhe fixamente para o raio, nem olhe para ele directamente com instrumentos ópticos.

iAtención! No mirar fijamente el haz ni observarlo directamente con instrumentos ópticos.

Varning! Rikta inte blicken in mot strålen och titta inte direkt på den genom optiska instrument.

Radiation from Open Port Apertures Warning



WARNING: Because invisible radiation might be emitted from the aperture of the port when no fiber-optic cable is connected, avoid exposure to radiation and do not stare into open apertures.

Waarschuwing Aangezien onzichtbare straling vanuit de opening van de poort kan komen als er geen fiberkabel aangesloten is, dient blootstelling aan straling en het kijken in open openingen vermeden te worden.

Varoitus Koska portin aukosta voi emittoitua näkymätöntä säteilyä, kun kuitukaapelia ei ole kytkettynä, vältä säteilylle altistumista äläkä katso avoimiin aukkoihin.

Attention Des radiations invisibles à l'il nu pouvant traverser l'ouverture du port lorsqu'aucun câble en fibre optique n'y est connecté, il est recommandé de ne pas regarder fixement l'intérieur de ces ouvertures.

Warnung Aus der Port-Öffnung können unsichtbare Strahlen emittieren, wenn kein Glasfaserkabel angeschlossen ist. Vermeiden Sie es, sich den Strahlungen auszusetzen, und starren Sie nicht in die Öffnungen!

Avvertenza Quando i cavi in fibra non sono inseriti, radiazioni invisibili possono essere emesse attraverso l'apertura della porta. Evitate di esporvi alle radiazioni e non guardate direttamente nelle aperture.

Advarsel Unngå utsettelse for stråling, og stirr ikke inn i åpninger som er åpne, fordi usynlig stråling kan emitteres fra portens åpning når det ikke er tilkoblet en fiberkabel.

Aviso Dada a possibilidade de emissão de radiação invisível através do orifício da via de acesso, quando esta não tiver nenhum cabo de fibra conectado, deverá evitar a exposição à radiação e não deverá olhar fixamente para orifícios que se encontrarem a descoberto.

¡Atención! Debido a que la apertura del puerto puede emitir radiación invisible cuando no existe un cable de fibra conectado, evite mirar directamente a las aperturas para no exponerse a la radiación.

Varning! Osynlig strålning kan avges från en portöppning utan ansluten fiberkabel och du bör därför undvika att bli utsatt för strålning genom att inte stirra in i oskyddade öppningar.

**Related
Documentation**

- [General Safety Guidelines for Juniper Networks Devices on page 227](#)
- [General Safety Warnings for Juniper Networks Devices on page 228](#)
- [Installation Safety Warnings for Juniper Networks Devices on page 235](#)

Maintenance and Operational Safety Guidelines and Warnings

- [Maintenance and Operational Safety Warnings for MX104 Routers on page 245](#)

Maintenance and Operational Safety Warnings for MX104 Routers

As you maintain the hardware equipment, observe the following warnings:

- [Battery Handling Warning on page 245](#)
- [Jewelry Removal Warning on page 246](#)
- [Lightning Activity Warning on page 247](#)
- [Operating Temperature Warning on page 248](#)
- [Product Disposal Warning on page 249](#)

Battery Handling Warning



WARNING: Replacing the battery incorrectly might result in an explosion. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Waarschuwing Er is ontploffingsgevaar als de batterij verkeerd vervangen wordt. Vervang de batterij slechts met hetzelfde of een equivalent type dat door de fabrikant aanbevolen is. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften weggeworpen te worden.

Varoitus Räjähdyksen vaara, jos akku on vaihdettu väärään akkuun. Käytä vaihtamiseen ainoastaan saman- tai vastaaventyyppistä akkua, joka on valmistajan suosittelema. Hävitä käytetyt akut valmistajan ohjeiden mukaan.

Attention Danger d'explosion si la pile n'est pas remplacée correctement. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

Warnung Bei Einsetzen einer falschen Batterie besteht Explosionsgefahr. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

Avvertenza Pericolo di esplosione se la batteria non è installata correttamente. Sostituire solo con una di tipo uguale o equivalente, consigliata dal produttore. Eliminare le batterie usate secondo le istruzioni del produttore.

Advarsel Det kan være fare for eksplosjon hvis batteriet skiftes på feil måte. Skift kun med samme eller tilsvarende type som er anbefalt av produsenten. Kasser brukte batterier i henhold til produsentens instruksjoner.

Aviso Existe perigo de explosão se a bateria for substituída incorrectamente. Substitua a bateria por uma bateria igual ou de um tipo equivalente recomendado pelo fabricante. Destrua as baterias usadas conforme as instruções do fabricante.

¡Atención! Existe peligro de explosión si la batería se reemplaza de manera incorrecta. Reemplazar la batería exclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

Varning! Explosionsfara vid felaktigt batteribyte. Ersätt endast batteriet med samma batterityp som rekommenderas av tillverkaren eller motsvarande. Följ tillverkarens anvisningar vid kassering av använda batterier.

Jewelry Removal Warning



WARNING: Before working on equipment that is connected to power lines, remove jewelry, including rings, necklaces, and watches. Metal objects heat up when connected to power and ground and can cause serious burns or weld the metal object to the terminals.

Waarschuwing Alvorens aan apparatuur te werken die met elektrische leidingen is verbonden, sieraden (inclusief ringen, kettingen en horloges) verwijderen. Metalen voorwerpen worden warm wanneer ze met stroom en aarde zijn verbonden, en kunnen ernstige brandwonden veroorzaken of het metalen voorwerp aan de aansluitklemmen lassen.

Varoitus Ennen kuin työskentelet voimavirtajohtoihin kytkettyjen laitteiden parissa, ota pois kaikki korut (sormukset, kaulakorut ja kellot mukaan lukien). Metalliesineet kuumenevat, kun ne ovat yhteydessä sähkövirran ja maan kanssa, ja ne voivat aiheuttaa vakavia palovammoja tai hitsata metalliesineet kiinni liitäntänapoihin.

Attention Avant d'accéder à cet équipement connecté aux lignes électriques, ôter tout bijou (anneaux, colliers et montres compris). Lorsqu'ils sont branchés

à l'alimentation et reliés à la terre, les objets métalliques chauffent, ce qui peut provoquer des blessures graves ou souder l'objet métallique aux bornes.

Warnung Vor der Arbeit an Geräten, die an das Netz angeschlossen sind, jeglichen Schmuck (einschließlich Ringe, Ketten und Uhren) abnehmen. Metallgegenstände erhitzen sich, wenn sie an das Netz und die Erde angeschlossen werden, und können schwere Verbrennungen verursachen oder an die Anschlußklemmen angeschweißt werden.

Avvertenza Prima di intervenire su apparecchiature collegate alle linee di alimentazione, togliersi qualsiasi monile (inclusi anelli, collane, braccialetti ed orologi). Gli oggetti metallici si riscaldano quando sono collegati tra punti di alimentazione e massa: possono causare ustioni gravi oppure il metallo può saldarsi ai terminali.

Advarsel Fjern alle smykker (inkludert ringer, halskjeder og klokker) før du skal arbeide på utstyr som er koblet til kraftledninger. Metallgjenstander som er koblet til kraftledninger og jord blir svært varme og kan forårsake alvorlige brannskader eller smelte fast til polene.

Aviso Antes de trabalhar em equipamento que esteja ligado a linhas de corrente, retire todas as jóias que estiver a usar (incluindo anéis, fios e relógios). Os objectos metálicos aquecerão em contacto com a corrente e em contacto com a ligação à terra, podendo causar queimaduras graves ou ficarem soldados aos terminais.

¡Atención! Antes de operar sobre equipos conectados a líneas de alimentación, quitarse las joyas (incluidos anillos, collares y relojes). Los objetos de metal se calientan cuando se conectan a la alimentación y a tierra, lo que puede ocasionar quemaduras graves o que los objetos metálicos queden soldados a los bornes.

Varning! Tag av alla smycken (inklusive ringar, halsband och armbandsur) innan du arbetar på utrustning som är kopplad till kraftledningar. Metallobjekt hettas upp när de kopplas ihop med ström och jord och kan förorsaka allvarliga brännskador; metallobjekt kan också sammansvetsas med kontakterna.

Lightning Activity Warning



WARNING: Do not work on the system or connect or disconnect cables during periods of lightning activity.

Waarschuwing Tijdens onweer dat gepaard gaat met bliksem, dient u niet aan het systeem te werken of kabels aan te sluiten of te ontkoppelen.

Varoitus Älä työskentele järjestelmän parissa äläkä yhdistä tai irrota kaapeleita ukkosilmalla.

Attention Ne pas travailler sur le système ni brancher ou débrancher les câbles pendant un orage.

Warnung Arbeiten Sie nicht am System und schließen Sie keine Kabel an bzw. trennen Sie keine ab, wenn es gewittert.

Avvertenza Non lavorare sul sistema o collegare oppure scollegare i cavi durante un temporale con fulmini.

Advarsel Utfør aldri arbeid på systemet, eller koble kabler til eller fra systemet når det tordner eller lynet.

Aviso Não trabalhe no sistema ou ligue e desligue cabos durante períodos de mau tempo (trovoada).

¡Atención! No operar el sistema ni conectar o desconectar cables durante el transcurso de descargas eléctricas en la atmósfera.

Varning! Vid åska skall du aldrig utföra arbete på systemet eller ansluta eller koppla loss kablar.

Operating Temperature Warning



WARNING: To prevent the hardware equipment from overheating, do not operate it in an area that exceeds the maximum recommended ambient temperature of 149° F (65° C). To prevent airflow restriction, allow at least 6 inches (15.2 cm) of clearance around the ventilation openings.

Waarschuwing Om te voorkomen dat welke router van de router dan ook oververhit raakt, dient u deze niet te bedienen op een plaats waar de maximale aanbevolen omgevingstemperatuur van 65° C wordt overschreden. Om te voorkomen dat de luchtstroom wordt beperkt, dient er minstens 15,2 cm speling rond de ventilatie-openingen te zijn.

Varoitus Ettei router-sarjan reititin ylikuumentuusi, sitä ei saa käyttää tilassa, jonka lämpötila ylittää korkeimman suositellun ympäristölämpötilan 65° C. Ettei ilmanvaihto estyisi, tuuletusaukkojen ympärille on jätettävä ainakin 15,2 cm tilaa.

Attention Pour éviter toute surchauffe des routeurs de la gamme router, ne l'utilisez pas dans une zone où la température ambiante est supérieure à 65° C. Pour permettre un flot d'air constant, dégagez un espace d'au moins 15,2 cm autour des ouvertures de ventilations.

Warnung Um einen router der router vor Überhitzung zu schützen, darf dieser nicht in einer Gegend betrieben werden, in der die Umgebungstemperatur das empfohlene Maximum von 65° C überschreitet. Um Lüftungsverschluß zu verhindern, achten Sie darauf, daß mindestens 15,2 cm lichter Raum um die Lüftungsöffnungen herum frei bleibt.

Avvertenza Per evitare il surriscaldamento dei router, non adoperateli in un locale che ecceda la temperatura ambientale massima di 65° C. Per evitare che la circolazione dell'aria sia impedita, lasciate uno spazio di almeno 15,2 cm di fronte alle aperture delle ventole.

Advarsel Unngå overoppheting av eventuelle rutere i router Disse skal ikke brukes på steder der den anbefalte maksimale omgivelsestemperaturen overstiger 65° C (149° F). Sørg for at klaringen rundt lufteåpningene er minst 15,2 cm (6 tommer) for å forhindre nedsatt luftsirkulasjon.

Aviso Para evitar o sobreaquecimento do encaminhador router, não utilize este equipamento numa área que exceda a temperatura máxima recomendada de 65° C. Para evitar a restrição à circulação de ar, deixe pelo menos um espaço de 15,2 cm à volta das aberturas de ventilação.

¡Atención! Para impedir que un encaminador de la serie router se recaliente, no lo haga funcionar en un área en la que se supere la temperatura ambiente máxima recomendada de 65° C. Para impedir la restricción de la entrada de aire, deje un espacio mínimo de 15,2 cm alrededor de las aperturas para ventilación.

Varning! Förhindra att en router överhettas genom att inte använda den i ett område där den maximalt rekommenderade omgivningstemperaturen på 65° C överskrids. Förhindra att luftcirkulationen inskränks genom att se till att det finns fritt utrymme på minst 15,2 cm omkring ventilationsöppningarna.

Product Disposal Warning



WARNING: Disposal of this product must be handled according to all national laws and regulations.

Waarschuwing Dit produkt dient volgens alle landelijke wetten en voorschriften te worden afgedankt.

Varoitus Tämän tuotteen lopullisesta hävittämisestä tulee huolehtia kaikkia valtakunnallisia lakeja ja säännöksiä noudattaen.

Attention La mise au rebut définitive de ce produit doit être effectuée conformément à toutes les lois et réglementations en vigueur.

Warnung Dieses Produkt muß den geltenden Gesetzen und Vorschriften entsprechend entsorgt werden.

Avvertenza L'eliminazione finale di questo prodotto deve essere eseguita osservando le normative italiane vigenti in materia

Advarsel Endelig disponering av dette produktet må skje i henhold til nasjonale lover og forskrifter.

Aviso A descartagem final deste produto deverá ser efectuada de acordo com os regulamentos e a legislação nacional.

¡Atención! El desecho final de este producto debe realizarse según todas las leyes y regulaciones nacionales

Varning! Slutlig kassering av denna produkt bör skötas i enlighet med landets alla lagar och föreskrifter.

**Related
Documentation**

- [General Safety Guidelines for Juniper Networks Devices on page 227](#)
- [General Safety Warnings for Juniper Networks Devices on page 228](#)

CHAPTER 35

Electrical Safety Guidelines and Warnings

- [In Case of an Electrical Accident on page 251](#)
- [General Electrical Safety Warnings for Juniper Networks Devices on page 251](#)
- [General Electrical Safety Guidelines and Electrical Codes for Juniper Networks Devices on page 255](#)
- [MX104 AC Power Electrical Safety Guidelines and Warnings on page 256](#)
- [MX104 DC Power Electrical Safety Guidelines on page 257](#)
- [DC Power Electrical Safety Warnings for Juniper Networks Devices on page 258](#)
- [Site Electrical Wiring Guidelines for MX104 Routers on page 261](#)

In Case of an Electrical Accident

If an electrical accident results in an injury, take the following actions in this order:

1. Use caution. Be aware of potentially hazardous conditions that could cause further injury.
2. Disconnect power from the router.
3. If possible, send another person to get medical aid. Otherwise, assess the condition of the victim, then call for help.

Related Documentation

- [General Safety Guidelines for Juniper Networks Devices on page 227](#)
- [General Safety Warnings for Juniper Networks Devices on page 228](#)

General Electrical Safety Warnings for Juniper Networks Devices

- [Grounded Equipment Warning on page 252](#)
- [Grounding Requirements and Warning on page 252](#)
- [Midplane Energy Hazard Warning on page 253](#)
- [Multiple Power Supplies Disconnection Warning on page 253](#)
- [Power Disconnection Warning on page 254](#)

Grounded Equipment Warning



WARNING: The network device is intended to be grounded. Ensure that the network device is connected to earth ground during normal use.

Waarschuwing Deze apparatuur hoort geaard te worden. Zorg dat de host-computer tijdens normaal gebruik met aarde is verbonden.

Varoitus Tämä laitteisto on tarkoitettu maadoitettavaksi. Varmista, että isäntälaitte on yhdistetty maahan normaalikäytön aikana.

Attention Cet équipement doit être relié à la terre. S'assurer que l'appareil hôte est relié à la terre lors de l'utilisation normale.

Warnung Dieses Gerät muß geerdet werden. Stellen Sie sicher, daß das Host-Gerät während des normalen Betriebs an Erde gelegt ist.

Avvertenza Questa apparecchiatura deve essere collegata a massa. Accertarsi che il dispositivo host sia collegato alla massa di terra durante il normale utilizzo.

Advarsel Dette utstyret skal jordes. Forviss deg om vertsterminalen er jordet ved normalt bruk.

Aviso Este equipamento deverá estar ligado à terra. Certifique-se que o host se encontra ligado à terra durante a sua utilização normal.

¡Atención! Este equipo debe conectarse a tierra. Asegurarse de que el equipo principal esté conectado a tierra durante el uso normal.

Varning! Denna utrustning är avsedd att jordas. Se till att värdenheten är jordad vid normal användning.

Grounding Requirements and Warning

An insulated grounding conductor that is identical in size to the grounded and ungrounded branch circuit supply conductors, but is identifiable by green and yellow stripes, is installed as part of the branch circuit that supplies the unit. The grounding conductor is a separately derived system at the supply transformer or motor generator set.



WARNING: When installing the network device, you must always make the ground connection first and disconnect it last.

Waarschuwing Bij de installatie van het toestel moet de aardverbinding altijd het eerste worden gemaakt en het laatste worden losgemaakt.

Varoitus Laitetta asennettaessa on maahan yhdistäminen aina tehtävä ensiksi ja maadoituksen irti kytkeminen viimeiseksi.

Attention Lors de l'installation de l'appareil, la mise à la terre doit toujours être connectée en premier et déconnectée en dernier.

Warnung Der Erdanschluß muß bei der Installation der Einheit immer zuerst hergestellt und zuletzt abgetrennt werden.

Avvertenza In fase di installazione dell'unità, eseguire sempre per primo il collegamento a massa e disconnetterlo per ultimo.

Advarsel Når enheten installeres, må jordledningen alltid tilkobles først og frakobles sist.

Aviso Ao instalar a unidade, a ligação à terra deverá ser sempre a primeira a ser ligada, e a última a ser desligada.

¡Atención! Al instalar el equipo, conectar la tierra la primera y desconectarla la última.

Varning! Vid installation av enheten måste jordledningen alltid anslutas först och kopplas bort sist.

Midplane Energy Hazard Warning



WARNING: High levels of electrical energy are distributed across the midplane. Be careful not to contact the midplane connectors, or any component connected to the midplane, with any metallic object while servicing components.

Multiple Power Supplies Disconnection Warning



WARNING: The network device has more than one power supply connection. All connections must be removed completely to remove power from the unit completely.

Waarschuwing Deze eenheid heeft meer dan één stroomtoevoerverbinding; alle verbindingen moeten volledig worden verwijderd om de stroom van deze eenheid volledig te verwijderen.

Varoitus Tässä laitteessa on useampia virtalähdekytkentöjä. Kaikki kytkennät on irrotettava kokonaan, jotta virta poistettaisiin täysin laitteesta.

Attention Cette unité est équipée de plusieurs raccordements d'alimentation. Pour supprimer tout courant électrique de l'unité, tous les cordons d'alimentation doivent être débranchés.

Warnung Diese Einheit verfügt über mehr als einen Stromanschluß; um Strom gänzlich von der Einheit fernzuhalten, müssen alle Stromzufuhren abgetrennt sein.

Avvertenza Questa unità ha più di una connessione per alimentatore elettrico; tutte le connessioni devono essere completamente rimosse per togliere l'elettricità dall'unità.

Advarsel Denne enheten har mer enn én strømtilkobling. Alle tilkoblinger må kobles helt fra for å eliminere strøm fra enheten.

Aviso Este dispositivo possui mais do que uma conexão de fonte de alimentação de energia; para poder remover a fonte de alimentação de energia, deverão ser desconectadas todas as conexões existentes.

¡Atención! Esta unidad tiene más de una conexión de suministros de alimentación; para eliminar la alimentación por completo, deben desconectarse completamente todas las conexiones.

Varning! Denna enhet har mer än en strömförsörjningsanslutning; alla anslutningar måste vara helt avlägsnade innan strömtillförseln till enheten är fullständigt bruten.

Power Disconnection Warning



WARNING: Before working on the chassis or near power supplies, switch off the power at the DC circuit breaker.

Waarschuwing Voordat u aan een frame of in de nabijheid van voedingen werkt, dient u bij wisselstroom toestellen de stekker van het netsnoer uit het stopcontact te halen; voor gelijkstroom toestellen dient u de stroom uit te schakelen bij de stroomverbreker.

Varoitus Kytke irti vaihtovirtalaitteiden virtajohto ja katkaise tasavirtalaitteiden virta suojakytkimellä, ennen kuin teet mitään asennuspohjalle tai työskentelet virtalähteiden läheisyydessä.

Attention Avant de travailler sur un châssis ou à proximité d'une alimentation électrique, débrancher le cordon d'alimentation des unités en courant alternatif; couper l'alimentation des unités en courant continu au niveau du disjoncteur.

Warnung Bevor Sie an einem Chassis oder in der Nähe von Netzgeräten arbeiten, ziehen Sie bei Wechselstromeinheiten das Netzkabel ab bzw. schalten Sie bei Gleichstromeinheiten den Strom am Unterbrecher ab.

Avvertenza Prima di lavorare su un telaio o intorno ad alimentatori, scollegare il cavo di alimentazione sulle unità CA; scollegare l'alimentazione all'interruttore automatico sulle unità CC.

Advarsel Før det utføres arbeid på kabinettet eller det arbeides i nærheten av strømforsyningsenheter, skal strømledningen trekkes ut p vekselstrømsenheter og strømmen kobles fra ved strømbryteren på likestrømsenheter.

Aviso Antes de trabalhar num chassis, ou antes de trabalhar perto de unidades de fornecimento de energia, desligue o cabo de alimentação nas unidades de corrente alternada; desligue a corrente no disjuntor nas unidades de corrente contínua.

¡Atención! Antes de manipular el chasis de un equipo o trabajar cerca de una fuente de alimentación, desenchufar el cable de alimentación en los equipos de corriente alterna (CA); cortar la alimentación desde el interruptor automático en los equipos de corriente continua (CC).

Varning! Innan du arbetar med ett chassi eller nära strömförsörjningsenheter skall du för växelströmsenheter dra ur nätsladden och för likströmsenheter bryta strömmen vid överspänningsskyddet.

**Related
Documentation**

- [DC Power Electrical Safety Warnings for Juniper Networks Devices on page 258](#)

General Electrical Safety Guidelines and Electrical Codes for Juniper Networks Devices

- Install the router in compliance with the following local, national, or international electrical codes:
 - United States—National Fire Protection Association (NFPA 70), United States National Electrical Code.
 - Canada—Canadian Electrical Code, Part 1, CSA C22.1.
 - Other countries—International Electromechanical Commission (IEC) 60364, Part 1 through Part 7.
- Locate the emergency power-off switch for the room in which you are working so that if an electrical accident occurs, you can quickly turn off the power.
- Do not work alone if potentially hazardous conditions exist anywhere in your workspace.
- Never assume that power is disconnected from a circuit. Always check the circuit before starting to work.
- Carefully look for possible hazards in your work area, such as moist floors, ungrounded power extension cords, and missing safety grounds.
- Operate the router within marked electrical ratings and product usage instructions.
- For the router and peripheral equipment to function safely and correctly, use the cables and connectors specified for the attached peripheral equipment, and make certain they are in good condition.

Many router components can be removed and replaced without powering off or disconnecting power to the router. Never install equipment if it appears damaged.

- Related Documentation**
- [In Case of an Electrical Accident on page 251](#)

MX104 AC Power Electrical Safety Guidelines and Warnings

The following electrical safety guidelines apply to an AC-powered router:

- You can order three-wire electrical cords with a grounding-type plug that fits only a grounding-type power outlet. Do not circumvent this safety feature. Equipment grounding should comply with local and national electrical codes.
- Each AC power supply has one AC appliance inlet. Each inlet requires a dedicated AC power feed and a dedicated customer-site circuit breaker. For the recommended circuit breaker rating, see “[MX104 AC Power Specifications](#)” on page 103.



WARNING: The router is pluggable type A equipment installed in a restricted-access location.

- The power cord serves as the main disconnecting device for the AC-powered device. The socket outlet must be near the AC-powered device and be easily accessible.
- The cores in the main lead are colored in accordance with the following code:
 - Green and yellow—Earth
 - Blue—Neutral
 - Brown—Live
- When a router is equipped with two AC power supplies, you must unplug both power cords (one for each power supply) to completely disconnect power to the router.



WARNING: The attached power cable is only for this product. Do not use the cable for another product.

注意

附属の電源コードセットはこの製品専用です。
他の電気機器には使用しないでください。

- Related Documentation**
- [MX104 AC Power Specifications on page 103](#)
 - [MX104 AC Power Cord Specifications on page 104](#)
 - [Connecting AC Power Cords to the MX104 Router on page 123](#)

MX104 DC Power Electrical Safety Guidelines

The following electrical safety guidelines apply to a DC-powered router:

- A DC-powered router is equipped with a DC terminal block that is rated for the power requirements of a maximally configured router. To supply sufficient power, terminate the DC input wiring on a facility DC source capable of supplying the rating specified in [“MX104 DC Power Specifications” on page 107](#) per input for each power supply.

Incorporate an easily accessible disconnect device into the facility wiring. In the United States and Canada, the 48-VDC facility should be equipped with a circuit breaker rated a minimum of 125 percent of the power provisioned for the input in accordance with the National Electrical Code in the US and the Canadian Electrical Code in Canada.

- Run two wires from the circuit breaker box to a source of 24, –60, or –48 VDC. Use appropriate gauge wire as specified in [“MX104 DC Power Cable and Lug Specifications” on page 108](#).
- Be sure to connect the ground wire or conduit to a solid office (earth) ground. We recommend a closed loop ring for terminating the ground conductor at the ground stud.
- A DC-powered router that is equipped with a DC terminal block is intended only for installation in a restricted access location. In the United States, a restricted access area is one in accordance with Articles 110-16, 110-17, and 110-18 of the National Electrical Code ANSI/NFPA 70.



NOTE: Primary overcurrent protection is provided by the building circuit breaker. This breaker should protect against excess currents, short circuits, and earth faults in accordance with NEC ANSI/NFPA70.

- Ensure that the polarity of the DC input wiring is correct. Under certain conditions, connections with reversed polarity might trip the primary circuit breaker or damage the equipment.
- For personal safety, connect the green and yellow wire to safety (earth) ground at both the router and the supply side of the DC wiring.
- The marked input voltage for a DC-powered router is the nominal voltage associated with the battery circuit, and any higher voltages are only to be associated with float voltages for the charging function.
- Because the router is a positive ground system, you must connect the positive lead to the terminal labeled +, the negative lead to the terminal labeled –, and the earth ground to the chassis grounding points.

Related Documentation

- [DC Power Electrical Safety Warnings for Juniper Networks Devices on page 258](#)

DC Power Electrical Safety Warnings for Juniper Networks Devices

When working with DC-powered equipment, observe the following warnings:

- DC Power Copper Conductors Warning on page 258
- DC Power Disconnection Warning on page 258
- DC Power Wiring Terminations Warning on page 260

DC Power Copper Conductors Warning



WARNING: Use copper conductors only.

Waarschuwing Gebruik alleen koperen geleiders.

Varoitus Käytä vain kuparijohtimia.

Attention Utilisez uniquement des conducteurs en cuivre.

Warnung Verwenden Sie ausschließlich Kupferleiter.

Avvertenza Usate unicamente dei conduttori di rame.

Advarsel Bruk bare kobberledninger.

Aviso Utilize apenas fios condutores de cobre.

¡Atención! Emplee sólo conductores de cobre.

Varning! Använd endast ledare av koppar.

DC Power Disconnection Warning



WARNING: Before performing any procedures on power supplies, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

Waarschuwing Voordat u een van de onderstaande procedures uitvoert, dient u te controleren of de stroom naar het gelijkstroom circuit uitgeschakeld is. Om u ervan te verzekeren dat alle stroom UIT is geschakeld, kiest u op het schakelbord de stroomverbreker die het gelijkstroom circuit bedient, draait de stroomverbreker naar de UIT positie en plakt de schakelaarhendel van de stroomverbreker met plakband in de UIT positie vast.

Varoitus Varmista, että tasavirtapiirissä ei ole virtaa ennen seuraavien toimenpiteiden suorittamista. Varmistaaksesi, että virta on KATKAISTU täysin, paikanna tasavirrasta huolehtivassa kojetaulussa sijaitseva suojakytkin,

käännä suojakytkin KATKAISTU-asentoon ja teippaa suojakytkimen varsi niin, että se pysyy KATKAISTU-asennossa.

Attention Avant de pratiquer l'une quelconque des procédures ci-dessous, vérifiez que le circuit en courant continu n'est plus sous tension. Pour en être sûr, localiser le disjoncteur situé sur le panneau de service du circuit en courant continu, placer le disjoncteur en position fermée (OFF) et, à l'aide d'un ruban adhésif, bloquer la poignée du disjoncteur en position OFF.

Warnung Vor Ausführung der folgenden Vorgänge ist sicherzustellen, daß die Gleichstromschaltung keinen Strom erhält. Um sicherzustellen, daß sämtlicher Strom abgestellt ist, machen Sie auf der Schalttafel den Unterbrecher für die Gleichstromschaltung ausfindig, stellen Sie den Unterbrecher auf AUS, und kleben Sie den Schaltergriff des Unterbrechers mit Klebeband in der AUS-Stellung fest.

Avvertenza Prima di svolgere una qualsiasi delle procedure seguenti, verificare che il circuito CC non sia alimentato. Per verificare che tutta l'alimentazione sia scollegata (OFF), individuare l'interruttore automatico sul quadro strumenti che alimenta il circuito CC, mettere l'interruttore in posizione OFF e fissarlo con nastro adesivo in tale posizione.

Advarsel Før noen av disse prosedyrene utføres, kontroller at strømmen er frakoblet likestrømkretsen. Sørg for at all strøm er slått AV. Dette gjøres ved å lokalisere strømbryteren på brytertavlen som betjener likestrømkretsen, slå strømbryteren AV og teipe bryterhåndtaket på strømbryteren i AV-stilling.

Aviso Antes de executar um dos seguintes procedimentos, certifique-se que desligou a fonte de alimentação de energia do circuito de corrente contínua. Para se assegurar que toda a corrente foi DESLIGADA, localize o disjuntor no painel que serve o circuito de corrente contínua e coloque-o na posição OFF (Desligado), segurando nessa posição a manivela do interruptor do disjuntor com fita isoladora.

¡Atención! Antes de proceder con los siguientes pasos, comprobar que la alimentación del circuito de corriente continua (CC) esté cortada (OFF). Para asegurarse de que toda la alimentación esté cortada (OFF), localizar el interruptor automático en el panel que alimenta al circuito de corriente continua, cambiar el interruptor automático a la posición de Apagado (OFF), y sujetar con cinta la palanca del interruptor automático en posición de Apagado (OFF).

Varning! Innan du utför någon av följande procedurer måste du kontrollera att strömförsörjningen till likströmskretsen är bruten. Kontrollera att all strömförsörjning är BRUTEN genom att slå AV det överspänningskydd som skyddar likströmskretsen och tejpa fast överspänningskyddets omkopplare i FRÅN-läget.

DC Power Wiring Terminations Warning



WARNING: When stranded wiring is required, use approved wiring terminations, such as closed-loop or spade-type with upturned lugs. These terminations must be the appropriate size for the wires and must clamp both the insulation and conductor.

Waarschuwing Wanneer geslagen bedrading vereist is, dient u bedrading te gebruiken die voorzien is van goedgekeurde aansluitingspunten, zoals het gesloten-lus type of het grijperschop type waarbij de aansluitpunten omhoog wijzen. Deze aansluitpunten dienen de juiste maat voor de draden te hebben en dienen zowel de isolatie als de geleider vast te klemmen.

Varoitus Jos säikeellinen johdin on tarpeen, käytä hyväksyttyä johdinliitäntää, esimerkiksi suljettua silmukkaa tai kourumaista liitäntää, jossa on ylöspäin käännetyt kiinnityskorvat. Tällaisten liitäntöjen tulee olla kooltaan johtimiin sopivia ja niiden tulee puristaa yhteen sekä eristeen että johdinosan.

Attention Quand des fils torsadés sont nécessaires, utiliser des douilles terminales homologuées telles que celles à circuit fermé ou du type à plage ouverte avec cosses rebroussées. Ces douilles terminales doivent être de la taille qui convient aux fils et doivent être refermées sur la gaine isolante et sur le conducteur.

Warnung Wenn Litzenverdrahtung erforderlich ist, sind zugelassene Verdrahtungsabschlüsse, z.B. Ringoesen oder gabelförmige Kabelschuhe mit nach oben gerichteten Enden zu verwenden. Diese Abschlüsse sollten die angemessene Größe für die Drähte haben und sowohl die Isolierung als auch den Leiter festklemmen.

Avvertenza Quando occorre usare trecce, usare connettori omologati, come quelli a occhiello o a forcilla con linguette rivolte verso l'alto. I connettori devono avere la misura adatta per il cablaggio e devono serrare sia l'isolante che il conduttore.

Advarsel Hvis det er nødvendig med flertrådede ledninger, brukes godkjente ledningsavslutninger, som for eksempel lukket sløyfe eller spadetype med oppoverbøyde kabelsko. Disse avslutningene skal ha riktig størrelse i forhold til ledningene, og skal klemme sammen både isolasjonen og ledningen.

Aviso Quando forem requeridas montagens de instalação eléctrica de cabo torcido, use terminações de cabo aprovadas, tais como, terminações de cabo em circuito fechado e planas com terminais de orelha voltados para cima. Estas terminações de cabo deverão ser do tamanho apropriado para os respectivos cabos, e deverão prender simultaneamente o isolamento e o fio condutor.

¡Atención! Cuando se necesite hilo trenzado, utilizar terminales para cables homologados, tales como las de tipo "bucle cerrado" o "espada", con las

lengüetas de conexión vueltas hacia arriba. Estos terminales deberán ser del tamaño apropiado para los cables que se utilicen, y tendrán que sujetar tanto el aislante como el conductor.

Varning! När flertrådiga ledningar krävs måste godkända ledningskontakter användas, t.ex. kabelsko av sluten eller öppen typ med uppåtvänd tapp. Storleken på dessa kontakter måste vara avpassad till ledningarna och måste kunna hålla både isoleringen och ledaren fastklämda.

- Related Documentation**
- [General Safety Warnings for Juniper Networks Devices on page 228](#)
 - [General Electrical Safety Warnings for Juniper Networks Devices on page 251](#)

Site Electrical Wiring Guidelines for MX104 Routers

- [Distance Limitations for Signaling on page 261](#)
- [Radio Frequency Interference on page 261](#)
- [Electromagnetic Compatibility on page 261](#)

Distance Limitations for Signaling

Improperly installed wires can emit radio interference. In addition, the potential for damage from lightning strikes increases if wires exceed recommended distances or if wires pass between buildings. The electromagnetic pulse (EMP) caused by lightning can damage unshielded conductors and destroy electronic devices. If your site has previously experienced such problems, you might want to consult experts in electrical surge suppression and shielding.

Radio Frequency Interference

You can reduce or eliminate the emission of radio frequency interference (RFI) from your site wiring by using twisted-pair cable with a good distribution of grounding conductors. If you must exceed the recommended distances, use a high-quality twisted-pair cable with one ground conductor for each data signal when applicable.

Electromagnetic Compatibility

If your site is susceptible to problems with electromagnetic compatibility (EMC), particularly from lightning or radio transmitters, you might want to seek expert advice. Strong sources of electromagnetic interference (EMI) can destroy the signal drivers and receivers in the router and conduct power surges over the lines into the equipment, resulting in an electrical hazard. It is particularly important to provide a properly grounded and shielded environment and to use electrical surge-suppression devices.



WARNING: The intrabuilding port(s) of the equipment or subassembly is suitable for connection to intrabuilding or unexposed wiring or cabling only. The intrabuilding port(s) of the equipment or subassembly **MUST NOT** be

metallically connected to interfaces that connect to the OSP or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089-CORE, Issue 4) and require isolation from the exposed OSP cabling. The addition of primary protectors is not sufficient protection to connect these interfaces metallically to OSP wiring.



CAUTION: To comply with intrabuilding lightning and surge requirements, intrabuilding wiring must be shielded, and the shield for the wiring must be grounded at both ends.

**Related
Documentation**

- [General Safety Guidelines for Juniper Networks Devices on page 227](#)
- [General Safety Warnings for Juniper Networks Devices on page 228](#)

CHAPTER 36

Agency Approvals and Compliance Statements

- [Agency Approvals for MX104 Routers on page 263](#)
- [Compliance Statements for NEBS for MX104 Routers on page 264](#)
- [Compliance Statements for EMC Requirements for MX104 Routers on page 265](#)
- [Compliance Statements for Environmental Requirements on page 266](#)
- [Compliance Statements for Acoustic Noise for MX104 Routers on page 266](#)

Agency Approvals for MX104 Routers

The MX104 router complies with the following standards:

- Safety:
 - CAN/CSA-22.2 No. 60950-1 (2007), Safety of Information Technology Equipment
 - UL 60950-1 Information Technology Equipment—Safety - Part 1: General Requirements
 - EN 60950-1 European Norm, Safety of Information Technology Equipment
 - IEC 60950-1 Information Technology Equipment—Safety - Part 1: General Requirements (with country deviations)
 - EN 60825-1 Safety of Laser Products—Part 1: Equipment Classification, Requirements and User's Guide
- EMC:
 - EN 300 386 V1.3.3 Telecom Network Equipment - EMC Requirements
- EMI:
 - FCC Part 15 Class A USA Radiated Emissions
 - EN 55022 Class A European Radiated Emissions
 - VCCI Class A Japanese Radiated Emissions
 - BSMI CNS 13438 and NCC C6357 Taiwan Radiated Emissions

- Immunity:
 - EN 55024 Information Technology Equipment Immunity Characteristics
 - EN-61000-3-2 Power Line Harmonics
 - EN-61000-3-3 Power Line Voltage Fluctuations
 - EN-61000-4-2 Electrostatic Discharge
 - EN-61000-4-3 Radiated Immunity
 - EN-61000-4-4 Electrical Fast Transients
 - EN-61000-4-5 Surge
 - EN-61000-4-6 Immunity to Conducted Disturbances
 - EN-61000-4-11 Voltage Dips and Sags
- ETSI:
 - ETSI EN-300 019: Environmental Conditions & Environmental Tests for Telecommunications Equipment
 - ETSI EN 300 019-2-1 (2000) – Storage
 - ETSI EN 300 019-2-2 (1999)—Transportation
 - ETSI EN 300 019-2-4 (2003)—Stationary Use at Non-Weather-protected Locations
 - ETS 300753 (1997)—Acoustic noise emitted by telecommunications equipment
 - GR-3108-CORE Issue 2, December 2008—Generic Requirements for Network Equipment in the Outside Plant (OSP)

NEBS Level 3 Compliant:

- GR-63-Core: NEBS, Physical Protection
- GR-1089-Core: EMC and Electrical Safety for Network Telecommunications Equipment
- SR-3580 NEBS Criteria Levels (Level 3 Compliance)

Related Documentation

- [Compliance Statements for EMC Requirements for MX104 Routers on page 265](#)
- [Compliance Statements for NEBS for MX104 Routers on page 264](#)
- [Compliance Statements for Acoustic Noise for MX104 Routers on page 266](#)
- [Compliance Statements for Environmental Requirements on page 266](#)

Compliance Statements for NEBS for MX104 Routers

- The equipment is suitable for installation as part of the Common Bonding Network (CBN).
- The equipment is suitable for installation in locations where the National Electrical Code (NEC) applies.

- The battery return connection is to be treated as an isolated DC return (i.e. DC-I), as defined in GR-1089-CORE.

Related Documentation

- [Agency Approvals for MX104 Routers on page 263](#)
- [Compliance Statements for EMC Requirements for MX104 Routers on page 265](#)
- [Compliance Statements for Acoustic Noise for MX104 Routers on page 266](#)
- [Compliance Statements for Environmental Requirements on page 266](#)

Compliance Statements for EMC Requirements for MX104 Routers

- [Canada on page 265](#)
- [European Community on page 265](#)
- [Israel on page 265](#)
- [Japan on page 265](#)
- [United States on page 266](#)


Canada

CAN ICES-3 (A)/NMB-3(A)

European Community


This is a Class A product. In a domestic environment, this product might cause radio interference in which case the user might be required to take adequate measures.

Israel

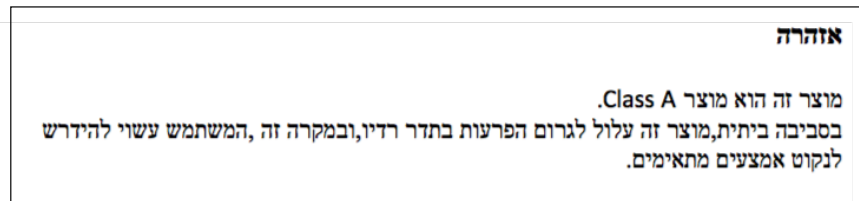

Translation from Hebrew—Warning: This product is Class A. In residential environments, the product might cause radio interference, and in such a situation, the user might be required to take adequate measures.

Japan

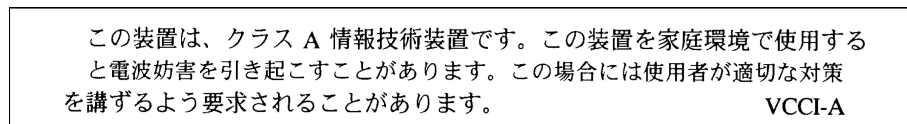

The preceding translates as follows:

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this product is used near a radio or television receiver in a domestic environment, it might cause radio interference. Install and use the equipment according to the instruction manual. VCCI-A.

United States

The hardware equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, might cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Related Documentation

- [Agency Approvals for MX104 Routers on page 263](#)
- [Compliance Statements for NEBS for MX104 Routers on page 264](#)
- [Compliance Statements for Acoustic Noise for MX104 Routers on page 266](#)
- [Compliance Statements for Environmental Requirements on page 266](#)

Compliance Statements for Environmental Requirements

Batteries in this product are not based on mercury, lead, or cadmium substances. The batteries used in this product are in compliance with EU Directives 91/157/EEC, 93/86/EEC, and 98/101/EEC. The product documentation includes instructional information about the proper method of reclamation and recycling.

Compliance Statements for Acoustic Noise for MX104 Routers

The router complies with NEBS Level 3 requirements:

- GR-63-CORE: NEBS, Physical Protection
- GR-1089-CORE: EMC and Electrical Safety for Network Telecommunications Equipment

Related Documentation

- [Compliance Statements for NEBS for MX104 Routers on page 264](#)
- [Compliance Statements for EMC Requirements for MX104 Routers on page 265](#)
- [Compliance Statements for Environmental Requirements on page 266](#)